

US EPA ARCHIVE DOCUMENT

Superfund Records Center
SITE: Centredale
BREAK: 3.02
OTHER: 48843

Section 5

SVOC Results

QA/QC Narratives
Soil and QC Results



SDMS DocID 48843

QA/QC Narratives

CASE NARRATIVE

Battelle

STL Lot # C2K250148

Sample Receiving:

STL Pittsburgh received samples for analysis on November 25, 2002. The cooler was received within the proper temperature range.

GC/MS Semivolatiles:

Several sample extracts were dark and viscous.

Sample CMS-SS-4105-0010-01 had the internal standard area counts of perylene-d12 outside the daily control limits. The diluted analysis also had the internal standard area counts outside the daily control limits. This is attributed to sample matrix.

Due to the concentration of compounds detected, several samples were analyzed at a dilution.

General Chemistry:

There were no problems associated with the analysis.

Soil and QC Results

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE
C2L020000599C	OS	2,4,6-TRIBROMOPHENOL	C2L020000599C	118-79-6	89		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	2-FLUOROBIPHENYL	C2L020000599C	321-60-8	80		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	2-FLUOROPHENOL	C2L020000599C	367-12-4	61		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	NITROBENZENE-D5	C2L020000599C	4165-60-0	80		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	PHENOL-D5	C2L020000599C	4165-62-2	80		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	TERPHENYL-D14	C2L020000599C	1718-51-0	83		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	4-NITROPHENOL	C2L020000599C	100-02-7	106		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	4-METHYLPHENOL	C2L020000599C	106-44-5	105		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	PHENOL	C2L020000599C	108-95-2	92		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	BIS(2-ETHYLHEXYL) PHTHALATE	C2L020000599C	117-81-7	93		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	DI-N-OCTYL PHTHALATE	C2L020000599C	117-84-0	92		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	2,4-DINITROPHENOL	C2L020000599C	51-28-5	94		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	DI-N-BUTYL PHTHALATE	C2L020000599C	84-74-2	102		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	BUTYL BENZYL PHTHALATE	C2L020000599C	85-68-7	94		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	CARBAZOLE	C2L020000599C	86-74-8	96		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	PENTACHLOROPHENOL	C2L020000599C	87-86-5	85		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	2-NITROPHENOL	C2L020000599C	88-75-5	77		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
C2L020000599C	OS	2,4,5-TRICHLOROPHENOL	C2L020000599C	95-95-4	77		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599C		2-Dec-02
CMS-SS-4105-0010-01	OS	2,4,6-TRIBROMOPHENOL	CMS-SS-4105-0010-01	118-79-6	73		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	2-FLUOROBIPHENYL	CMS-SS-4105-0010-01	321-60-8	64		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	2-FLUOROPHENOL	CMS-SS-4105-0010-01	367-12-4	24		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	WET	PERCENT SOLIDS	CMS-SS-4105-0010-01		48.8		%		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	NITROBENZENE-D5	CMS-SS-4105-0010-01	4165-60-0	59		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	PHENOL-D5	CMS-SS-4105-0010-01	4165-62-2	43		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	TERPHENYL-D14	CMS-SS-4105-0010-01	1718-51-0	50		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	4-NITROPHENOL	CMS-SS-4105-0010-01	100-02-7	13000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	4-METHYLPHENOL	CMS-SS-4105-0010-01	106-44-5	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	PHENOL	CMS-SS-4105-0010-01	108-95-2	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	CMS-SS-4105-0010-01	117-81-7	28000	E	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	DI-N-OCTYL PHTHALATE	CMS-SS-4105-0010-01	117-84-0	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	2,4-DINITROPHENOL	CMS-SS-4105-0010-01	51-28-5	13000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	DI-N-BUTYL PHTHALATE	CMS-SS-4105-0010-01	84-74-2	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	BUTYL BENZYL PHTHALATE	CMS-SS-4105-0010-01	85-68-7	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	CARBAZOLE	CMS-SS-4105-0010-01	86-74-8	590	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	PENTACHLOROPHENOL	CMS-SS-4105-0010-01	87-86-5	13000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	2-NITROPHENOL	CMS-SS-4105-0010-01	88-75-5	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01	OS	2,4,5-TRICHLOROPHENOL	CMS-SS-4105-0010-01	95-95-4	2700	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	2,4,6-TRIBROMOPHENOL	CMS-SS-4105-0010-01RE	118-79-6	74		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	2-FLUOROBIPHENYL	CMS-SS-4105-0010-01RE	321-60-8	65		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	2-FLUOROPHENOL	CMS-SS-4105-0010-01RE	367-12-4	26		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	NITROBENZENE-D5	CMS-SS-4105-0010-01RE	4165-60-0	61		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	PHENOL-D5	CMS-SS-4105-0010-01RE	4165-62-2	43		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	TERPHENYL-D14	CMS-SS-4105-0010-01RE	1718-51-0	54		PCT_REC		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	4-NITROPHENOL	CMS-SS-4105-0010-01RE	100-02-7	26000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	4-METHYLPHENOL	CMS-SS-4105-0010-01RE	106-44-5	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	PHENOL	CMS-SS-4105-0010-01RE	108-95-2	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	BIS(2-ETHYLHEXYL) PHTHALATE	CMS-SS-4105-0010-01RE	117-81-7	33000		UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	DI-N-OCTYL PHTHALATE	CMS-SS-4105-0010-01RE	117-84-0	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	2,4-DINITROPHENOL	CMS-SS-4105-0010-01RE	51-28-5	26000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	DI-N-BUTYL PHTHALATE	CMS-SS-4105-0010-01RE	84-74-2	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	BUTYL BENZYL PHTHALATE	CMS-SS-4105-0010-01RE	85-68-7	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	CARBAZOLE	CMS-SS-4105-0010-01RE	86-74-8	610	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	PENTACHLOROPHENOL	CMS-SS-4105-0010-01RE	87-86-5	26000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	2-NITROPHENOL	CMS-SS-4105-0010-01RE	88-75-5	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02
CMS-SS-4105-0010-01RE	OS	2,4,5-TRICHLOROPHENOL	CMS-SS-4105-0010-01RE	95-95-4	5400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148002	25-Nov-02	2-Dec-02

NSAMPLE	ANAL_DATE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C					1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	23	1600			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	74	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	36	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	32	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	29	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	500	1600			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	30	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	35	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	29	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	23	1600			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	45	330			1	100 Check Sample		2 LCS			
C2L020000599C	20-Dec-02	8270C	32	330			1	100 Check Sample		2 LCS			
CMS-SS-4105-0010-01	20-Dec-02	8270C					4	51		2 N			
CMS-SS-4105-0010-01	20-Dec-02	8270C					4	51		2 N			
CMS-SS-4105-0010-01	20-Dec-02	8270C					4	51		2 N			
CMS-SS-4105-0010-01	3-Dec-02	160.3 MOD	0				1	51		2 N	48.8		
CMS-SS-4105-0010-01	20-Dec-02	8270C					4	51		2 N			
CMS-SS-4105-0010-01	20-Dec-02	8270C					4	51		2 N			
CMS-SS-4105-0010-01	20-Dec-02	8270C					4	51		2 N			
CMS-SS-4105-0010-01	20-Dec-02	8270C	190	13000			4	51		2 N	13000 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	610	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	300	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	280	2700			4	51		2 N	28000 J		
CMS-SS-4105-0010-01	20-Dec-02	8270C	240	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	4100	13000			4	51		2 N	13000 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	240	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	290	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	240	2700			4	51		2 N	590 J		
CMS-SS-4105-0010-01	20-Dec-02	8270C	190	13000			4	51		2 N	13000 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	370	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01	20-Dec-02	8270C	260	2700			4	51		2 N	2700 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C					8	51		2 N			
CMS-SS-4105-0010-01RE	22-Dec-02	8270C					8	51		2 N			
CMS-SS-4105-0010-01RE	22-Dec-02	8270C					8	51		2 N			
CMS-SS-4105-0010-01RE	22-Dec-02	8270C					8	51		2 N			
CMS-SS-4105-0010-01RE	22-Dec-02	8270C					8	51		2 N			
CMS-SS-4105-0010-01RE	22-Dec-02	8270C					8	51		2 N			
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	380	26000			8	51		2 N	26000 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	1200	5400			8	51		2 N	5400 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	590	5400			8	51		2 N	5400 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	530	5400			8	51		2 N	33000		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	470	5400			8	51		2 N	5400 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	8200	26000			8	51		2 N	26000 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	490	5400			8	51		2 N	5400 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	580	5400			8	51		2 N	5400 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	470	5400			8	51		2 N	610 J		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	370	26000			8	51		2 N	26000 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	740	5400			8	51		2 N	5400 U		
CMS-SS-4105-0010-01RE	22-Dec-02	8270C	520	5400			8	51		2 N	5400 U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR_DATE
CMS-SS-4110-0010-01	OS	2,4,6-TRIBROMOPHENOL	CMS-SS-4110-0010-01	118-79-8	77		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	2-FLUOROBIPHENYL	CMS-SS-4110-0010-01	321-60-8	70		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	2-FLUOROPHENOL	CMS-SS-4110-0010-01	367-12-4	48		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	WET	PERCENT SOLIDS	CMS-SS-4110-0010-01		41.3		%		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	NITROBENZENE-D5	CMS-SS-4110-0010-01	4165-60-0	76		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	PHENOL-D5	CMS-SS-4110-0010-01	4165-62-2	62		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	TERPHENYL-D14	CMS-SS-4110-0010-01	1718-51-0	50		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	4-NITROPHENOL	CMS-SS-4110-0010-01	100-02-7	16000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	4-METHYLPHENOL	CMS-SS-4110-0010-01	106-44-5	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	PHENOL	CMS-SS-4110-0010-01	108-95-2	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	CMS-SS-4110-0010-01	117-81-7	33000	E	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	DI-N-OCTYL PHTHALATE	CMS-SS-4110-0010-01	117-84-0	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	2,4-DINITROPHENOL	CMS-SS-4110-0010-01	51-28-5	16000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	DI-N-BUTYL PHTHALATE	CMS-SS-4110-0010-01	84-74-2	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	BUTYL BENZYL PHTHALATE	CMS-SS-4110-0010-01	85-68-7	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	CARBAZOLE	CMS-SS-4110-0010-01	86-74-8	290	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	PENTACHLOROPHENOL	CMS-SS-4110-0010-01	87-86-5	16000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	2-NITROPHENOL	CMS-SS-4110-0010-01	88-75-5	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01	OS	2,4,5-TRICHLOROPHENOL	CMS-SS-4110-0010-01	95-95-4	3200	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01 DUP	WET	PERCENT SOLIDS	CMS-SS-4110-0010-01 DUP		40		%		C2K250148	STL Pittsburgh	C2K250148001X	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	2,4,6-TRIBROMOPHENOL	CMS-SS-4110-0010-01RE	118-79-8	75		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	2-FLUOROBIPHENYL	CMS-SS-4110-0010-01RE	321-60-8	71		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	2-FLUOROPHENOL	CMS-SS-4110-0010-01RE	367-12-4	48		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	NITROBENZENE-D5	CMS-SS-4110-0010-01RE	4165-60-0	71		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	PHENOL-D5	CMS-SS-4110-0010-01RE	4165-62-2	60		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	TERPHENYL-D14	CMS-SS-4110-0010-01RE	1718-51-0	54		PCT_REC		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	4-NITROPHENOL	CMS-SS-4110-0010-01RE	100-02-7	31000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	4-METHYLPHENOL	CMS-SS-4110-0010-01RE	106-44-5	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	PHENOL	CMS-SS-4110-0010-01RE	108-95-2	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	BIS(2-ETHYLHEXYL) PHTHALATE	CMS-SS-4110-0010-01RE	117-81-7	35000		UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	DI-N-OCTYL PHTHALATE	CMS-SS-4110-0010-01RE	117-84-0	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	2,4-DINITROPHENOL	CMS-SS-4110-0010-01RE	51-28-5	31000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	DI-N-BUTYL PHTHALATE	CMS-SS-4110-0010-01RE	84-74-2	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	BUTYL BENZYL PHTHALATE	CMS-SS-4110-0010-01RE	85-68-7	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	CARBAZOLE	CMS-SS-4110-0010-01RE	86-74-8	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	PENTACHLOROPHENOL	CMS-SS-4110-0010-01RE	87-86-5	31000	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	2-NITROPHENOL	CMS-SS-4110-0010-01RE	88-75-5	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
CMS-SS-4110-0010-01RE	OS	2,4,5-TRICHLOROPHENOL	CMS-SS-4110-0010-01RE	95-95-4	6400	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148001	25-Nov-02	2-Dec-02
C2L020000599B	OS	2,4,6-TRIBROMOPHENOL	C2L020000599B	118-79-8	90		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	2-FLUOROBIPHENYL	C2L020000599B	321-60-8	80		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	2-FLUOROPHENOL	C2L020000599B	367-12-4	58		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	NITROBENZENE-D5	C2L020000599B	4165-60-0	78		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	PHENOL-D5	C2L020000599B	4165-62-2	72		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	TERPHENYL-D14	C2L020000599B	1718-51-0	96		PCT_REC		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	4-NITROPHENOL	C2L020000599B	100-02-7	1600	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	4-METHYLPHENOL	C2L020000599B	106-44-5	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	PHENOL	C2L020000599B	108-95-2	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	BIS(2-ETHYLHEXYL) PHTHALATE	C2L020000599B	117-81-7	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	DI-N-OCTYL PHTHALATE	C2L020000599B	117-84-0	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	2,4-DINITROPHENOL	C2L020000599B	51-28-5	1600	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	DI-N-BUTYL PHTHALATE	C2L020000599B	84-74-2	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	BUTYL BENZYL PHTHALATE	C2L020000599B	85-68-7	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	CARBAZOLE	C2L020000599B	86-74-8	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	PENTACHLOROPHENOL	C2L020000599B	87-86-5	1600	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	2-NITROPHENOL	C2L020000599B	88-75-5	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02
C2L020000599B	OS	2,4,5-TRICHLOROPHENOL	C2L020000599B	95-95-4	330	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2L020000599B		2-Dec-02

NSAMPLE	ANAL_DATE	METHOD	MDL	HDL	CRDL_CROL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-SS-4110-0010-01	20-Dec-02	8270C					4	59		2/N			
CMS-SS-4110-0010-01	20-Dec-02	8270C					4	59		2/N			
CMS-SS-4110-0010-01	20-Dec-02	8270C					4	59		2/N			
CMS-SS-4110-0010-01	3-Dec-02	160.3 MOD	0				1	59		2/N	41.3		
CMS-SS-4110-0010-01	20-Dec-02	8270C					4	59		2/N			
CMS-SS-4110-0010-01	20-Dec-02	8270C					4	59		2/N			
CMS-SS-4110-0010-01	20-Dec-02	8270C					4	59		2/N			
CMS-SS-4110-0010-01	20-Dec-02	8270C	220	16000			4	59		2/N	16000	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	720	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	350	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	310	3200			4	59		2/N	33000	J	
CMS-SS-4110-0010-01	20-Dec-02	8270C	280	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	4800	16000			4	59		2/N	16000	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	290	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	340	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	280	3200			4	59		2/N	290	J	
CMS-SS-4110-0010-01	20-Dec-02	8270C	220	16000			4	59		2/N	16000	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	440	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01	20-Dec-02	8270C	310	3200			4	59		2/N	3200	U	
CMS-SS-4110-0010-01 DUP	3-Dec-02	160.3 MOD	0	1			1	59		2/DUP			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C					8	59		2/N			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C					8	59		2/N			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C					8	59		2/N			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C					8	59		2/N			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C					8	59		2/N			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C					8	59		2/N			
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	440	31000			8	59		2/N	31000	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	1400	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	700	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	630	6400			8	59		2/N	35000		
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	560	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	9700	31000			8	59		2/N	31000	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	570	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	680	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	580	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	440	31000			8	59		2/N	31000	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	880	6400			8	59		2/N	6400	U	
CMS-SS-4110-0010-01RE	22-Dec-02	8270C	620	6400			8	59		2/N	6400	U	
C2L020000599B	20-Dec-02	8270C					1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C					1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C					1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C					1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C					1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C					1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	23	1600			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	74	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	36	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	32	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	29	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	500	1600			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	30	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	35	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	29	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	23	1600			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	45	330			1	100 Intra-Lab Blank		2/MB			
C2L020000599B	20-Dec-02	8270C	32	330			1	100 Intra-Lab Blank		2/MB			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE
LPX-DU-112202B-01	OS	2,4,6-TRIBROMOPHENOL	LPX-DU-112202B-01	118-79-6	100		PCT_REC	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	2-FLUOROBIPHENYL	LPX-DU-112202B-01	321-60-8	85		PCT_REC	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	2-FLUOROPHENOL	LPX-DU-112202B-01	367-12-4	58		PCT_REC	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	WET	PERCENT SOLIDS	LPX-DU-112202B-01		83.2		%	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	NITROBENZENE-D5	LPX-DU-112202B-01	4165-60-0	79		PCT_REC	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	PHENOL-D5	LPX-DU-112202B-01	4165-62-2	69		PCT_REC	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	TERPHENYL-D14	LPX-DU-112202B-01	1718-51-0	75		PCT_REC	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	4-NITROPHENOL	LPX-DU-112202B-01	100-02-7	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	4-METHYLPHENOL	LPX-DU-112202B-01	106-44-5	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	PHENOL	LPX-DU-112202B-01	106-95-2	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	LPX-DU-112202B-01	117-81-7	220	J	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	DI-N-OCTYL PHTHALATE	LPX-DU-112202B-01	117-84-0	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	2,4-DINITROPHENOL	LPX-DU-112202B-01	51-28-5	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	DI-N-BUTYL PHTHALATE	LPX-DU-112202B-01	84-74-2	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	BUTYL BENZYL PHTHALATE	LPX-DU-112202B-01	85-68-7	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	CARBAZOLE	LPX-DU-112202B-01	86-74-8	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	PENTACHLOROPHENOL	LPX-DU-112202B-01	87-86-5	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	2-NITROPHENOL	LPX-DU-112202B-01	88-75-5	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-DU-112202B-01	OS	2,4,5-TRICHLOROPHENOL	LPX-DU-112202B-01	95-95-4	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148004		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	2,4,6-TRIBROMOPHENOL	LPX-SS-4112-0005-01	118-79-6	86		PCT_REC	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	2-FLUOROBIPHENYL	LPX-SS-4112-0005-01	321-60-8	59		PCT_REC	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	2-FLUOROPHENOL	LPX-SS-4112-0005-01	367-12-4	31		PCT_REC	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	WET	PERCENT SOLIDS	LPX-SS-4112-0005-01		83.4		%	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	NITROBENZENE-D5	LPX-SS-4112-0005-01	4165-60-0	48		PCT_REC	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	PHENOL-D5	LPX-SS-4112-0005-01	4165-62-2	41		PCT_REC	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	TERPHENYL-D14	LPX-SS-4112-0005-01	1718-51-0	68		PCT_REC	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	4-NITROPHENOL	LPX-SS-4112-0005-01	100-02-7	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	4-METHYLPHENOL	LPX-SS-4112-0005-01	106-44-5	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	PHENOL	LPX-SS-4112-0005-01	106-95-2	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	LPX-SS-4112-0005-01	117-81-7	280	J	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	DI-N-OCTYL PHTHALATE	LPX-SS-4112-0005-01	117-84-0	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	2,4-DINITROPHENOL	LPX-SS-4112-0005-01	51-28-5	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	DI-N-BUTYL PHTHALATE	LPX-SS-4112-0005-01	84-74-2	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	BUTYL BENZYL PHTHALATE	LPX-SS-4112-0005-01	85-68-7	80	J	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	CARBAZOLE	LPX-SS-4112-0005-01	86-74-8	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	PENTACHLOROPHENOL	LPX-SS-4112-0005-01	87-86-5	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	2-NITROPHENOL	LPX-SS-4112-0005-01	88-75-5	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4112-0005-01	OS	2,4,5-TRICHLOROPHENOL	LPX-SS-4112-0005-01	95-95-4	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148003		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	2,4,6-TRIBROMOPHENOL	LPX-SS-4113-0005-01	118-79-6	103		PCT_REC	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	2-FLUOROBIPHENYL	LPX-SS-4113-0005-01	321-60-8	84		PCT_REC	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	2-FLUOROPHENOL	LPX-SS-4113-0005-01	367-12-4	55		PCT_REC	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	WET	PERCENT SOLIDS	LPX-SS-4113-0005-01		82.9		%	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	NITROBENZENE-D5	LPX-SS-4113-0005-01	4165-60-0	77		PCT_REC	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	PHENOL-D5	LPX-SS-4113-0005-01	4165-62-2	65		PCT_REC	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	TERPHENYL-D14	LPX-SS-4113-0005-01	1718-51-0	69		PCT_REC	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	4-NITROPHENOL	LPX-SS-4113-0005-01	100-02-7	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	4-METHYLPHENOL	LPX-SS-4113-0005-01	106-44-5	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	PHENOL	LPX-SS-4113-0005-01	106-95-2	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	LPX-SS-4113-0005-01	117-81-7	65	J	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	DI-N-OCTYL PHTHALATE	LPX-SS-4113-0005-01	117-84-0	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	2,4-DINITROPHENOL	LPX-SS-4113-0005-01	51-28-5	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	DI-N-BUTYL PHTHALATE	LPX-SS-4113-0005-01	84-74-2	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	BUTYL BENZYL PHTHALATE	LPX-SS-4113-0005-01	85-68-7	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	CARBAZOLE	LPX-SS-4113-0005-01	86-74-8	630		UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	PENTACHLOROPHENOL	LPX-SS-4113-0005-01	87-86-5	1900	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	2-NITROPHENOL	LPX-SS-4113-0005-01	88-75-5	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02
LPX-SS-4113-0005-01	OS	2,4,5-TRICHLOROPHENOL	LPX-SS-4113-0005-01	95-95-4	400	U	UG/KG DRYWT	C2K250148	STL Pittsburgh	C2K250148005		25-Nov-02	2-Dec-02

INSAMPLE	ANAL DATE	METHOD	MDL	IDL	CRDL CRQL	DIL FACTOR	PCT MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
LPX-DU-112202B-01	20-Dec-02	8270C				1	17		2	N			
LPX-DU-112202B-01	20-Dec-02	8270C				1	17		2	N			
LPX-DU-112202B-01	20-Dec-02	8270C				1	17		2	N			
LPX-DU-112202B-01	3-Dec-02	180.3 MOD	0			1	17		2	N	83.2		
LPX-DU-112202B-01	20-Dec-02	8270C				1	17		2	N			
LPX-DU-112202B-01	20-Dec-02	8270C				1	17		2	N			
LPX-DU-112202B-01	20-Dec-02	8270C				1	17		2	N			
LPX-DU-112202B-01	20-Dec-02	8270C	28	1900		1	17		2	N	1900	U	
LPX-DU-112202B-01	20-Dec-02	8270C	89	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	44	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	39	400		1	17		2	N	220	J	
LPX-DU-112202B-01	20-Dec-02	8270C	35	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	600	1900		1	17		2	N	1900	U	
LPX-DU-112202B-01	20-Dec-02	8270C	36	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	42	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	35	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	27	1900		1	17		2	N	1900	U	
LPX-DU-112202B-01	20-Dec-02	8270C	54	400		1	17		2	N	400	U	
LPX-DU-112202B-01	20-Dec-02	8270C	38	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4112-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4112-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4112-0005-01	3-Dec-02	180.3 MOD	0			1	17		2	N	83.4		
LPX-SS-4112-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4112-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4112-0005-01	20-Dec-02	8270C	27	1900		1	17		2	N	1900	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	89	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	43	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	39	400		1	17		2	N	280	J	
LPX-SS-4112-0005-01	20-Dec-02	8270C	34	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	600	1900		1	17		2	N	1900	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	36	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	42	400		1	17		2	N	80	J	
LPX-SS-4112-0005-01	20-Dec-02	8270C	35	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	27	1900		1	17		2	N	1900	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	54	400		1	17		2	N	400	U	
LPX-SS-4112-0005-01	20-Dec-02	8270C	38	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4113-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4113-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4113-0005-01	3-Dec-02	180.3 MOD	0			1	17		2	N	82.9		
LPX-SS-4113-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4113-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4113-0005-01	20-Dec-02	8270C				1	17		2	N			
LPX-SS-4113-0005-01	20-Dec-02	8270C	28	1900		1	17		2	N	1900	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	90	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	44	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	39	400		1	17		2	N	65	J	
LPX-SS-4113-0005-01	20-Dec-02	8270C	35	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	600	1900		1	17		2	N	1900	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	36	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	43	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	35	400		1	17		2	N	630		
LPX-SS-4113-0005-01	20-Dec-02	8270C	27	1900		1	17		2	N	1900	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	55	400		1	17		2	N	400	U	
LPX-SS-4113-0005-01	20-Dec-02	8270C	38	400		1	17		2	N	400	U	

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE
LPX-SS-4114-0005-01	OS	2,4,6-TRIBROMOPHENOL	LPX-SS-4114-0005-01	118-79-6	94		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	2-FLUOROBIPHENYL	LPX-SS-4114-0005-01	321-60-8	73		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	2-FLUOROPHENOL	LPX-SS-4114-0005-01	367-12-4	43		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	WET	PERCENT SOLIDS	LPX-SS-4114-0005-01		74.7		%		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	NITROBENZENE-D5	LPX-SS-4114-0005-01	4165-60-0	62		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	PHENOL-D5	LPX-SS-4114-0005-01	4165-62-2	53		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	TERPHENYL-D14	LPX-SS-4114-0005-01	1718-51-0	68		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	4-NITROPHENOL	LPX-SS-4114-0005-01	100-02-7	2100	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	4-METHYLPHENOL	LPX-SS-4114-0005-01	106-44-5	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	PHENOL	LPX-SS-4114-0005-01	108-95-2	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	LPX-SS-4114-0005-01	117-81-7	280	J	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	DI-N-OCTYL PHTHALATE	LPX-SS-4114-0005-01	117-84-0	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	2,4-DINITROPHENOL	LPX-SS-4114-0005-01	51-28-5	2100	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	DI-N-BUTYL PHTHALATE	LPX-SS-4114-0005-01	84-74-2	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	BUTYL BENZYL PHTHALATE	LPX-SS-4114-0005-01	85-68-7	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	CARBAZOLE	LPX-SS-4114-0005-01	86-74-8	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	PENTACHLOROPHENOL	LPX-SS-4114-0005-01	87-86-5	2100	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	2-NITROPHENOL	LPX-SS-4114-0005-01	88-75-5	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01	OS	2,4,5-TRICHLOROPHENOL	LPX-SS-4114-0005-01	95-95-4	440	U	UG/KG_DRYWT		C2K250148	STL Pittsburgh	C2K250148006	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	2,4,6-TRIBROMOPHENOL	LPX-SS-4114-0005-01MS	118-79-6	97		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	2-FLUOROBIPHENYL	LPX-SS-4114-0005-01MS	321-60-8	82		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	2-FLUOROPHENOL	LPX-SS-4114-0005-01MS	367-12-4	60		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	NITROBENZENE-D5	LPX-SS-4114-0005-01MS	4165-60-0	78		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	PHENOL-D5	LPX-SS-4114-0005-01MS	4165-62-2	71		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	TERPHENYL-D14	LPX-SS-4114-0005-01MS	1718-51-0	63		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	4-NITROPHENOL	LPX-SS-4114-0005-01MS	100-02-7	118		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	4-METHYLPHENOL	LPX-SS-4114-0005-01MS	106-44-5	88		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	PHENOL	LPX-SS-4114-0005-01MS	108-95-2	81		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	BIS(2-ETHYLHEXYL) PHTHALATE	LPX-SS-4114-0005-01MS	117-81-7	86		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	DI-N-OCTYL PHTHALATE	LPX-SS-4114-0005-01MS	117-84-0	83		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	2,4-DINITROPHENOL	LPX-SS-4114-0005-01MS	51-28-5	85		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	DI-N-BUTYL PHTHALATE	LPX-SS-4114-0005-01MS	84-74-2	112		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	BUTYL BENZYL PHTHALATE	LPX-SS-4114-0005-01MS	85-68-7	78		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	CARBAZOLE	LPX-SS-4114-0005-01MS	86-74-8	103		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	PENTACHLOROPHENOL	LPX-SS-4114-0005-01MS	87-86-5	94		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	2-NITROPHENOL	LPX-SS-4114-0005-01MS	88-75-5	74		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MS	OS	2,4,5-TRICHLOROPHENOL	LPX-SS-4114-0005-01MS	95-95-4	81		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006S	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	2,4,6-TRIBROMOPHENOL	LPX-SS-4114-0005-01MSD	118-79-6	100		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	2-FLUOROBIPHENYL	LPX-SS-4114-0005-01MSD	321-60-8	86		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	2-FLUOROPHENOL	LPX-SS-4114-0005-01MSD	367-12-4	58		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	NITROBENZENE-D5	LPX-SS-4114-0005-01MSD	4165-60-0	76		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	PHENOL-D5	LPX-SS-4114-0005-01MSD	4165-62-2	69		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	TERPHENYL-D14	LPX-SS-4114-0005-01MSD	1718-51-0	62		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	4-NITROPHENOL	LPX-SS-4114-0005-01MSD	100-02-7	122		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	4-METHYLPHENOL	LPX-SS-4114-0005-01MSD	106-44-5	86		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	PHENOL	LPX-SS-4114-0005-01MSD	108-95-2	79		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	BIS(2-ETHYLHEXYL) PHTHALATE	LPX-SS-4114-0005-01MSD	117-81-7	85		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	DI-N-OCTYL PHTHALATE	LPX-SS-4114-0005-01MSD	117-84-0	89		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	2,4-DINITROPHENOL	LPX-SS-4114-0005-01MSD	51-28-5	85		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	DI-N-BUTYL PHTHALATE	LPX-SS-4114-0005-01MSD	84-74-2	112		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	BUTYL BENZYL PHTHALATE	LPX-SS-4114-0005-01MSD	85-68-7	77		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	CARBAZOLE	LPX-SS-4114-0005-01MSD	86-74-8	106		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	PENTACHLOROPHENOL	LPX-SS-4114-0005-01MSD	87-86-5	97		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	2-NITROPHENOL	LPX-SS-4114-0005-01MSD	88-75-5	73		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02
LPX-SS-4114-0005-01MSD	OS	2,4,5-TRICHLOROPHENOL	LPX-SS-4114-0005-01MSD	95-95-4	83		PCT_REC		C2K250148	STL Pittsburgh	C2K250148006D	25-Nov-02	2-Dec-02

NSAMPLE	ANAL DATE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	INVALID COMMENT
LPX-SS-4114-0005-01	20-Dec-02	8270C					25		2	N			
LPX-SS-4114-0005-01	20-Dec-02	8270C					25		2	N			
LPX-SS-4114-0005-01	20-Dec-02	8270C					25		2	N			
LPX-SS-4114-0005-01	3-Dec-02	160.3 MOD	0				25		2	N	74.7		
LPX-SS-4114-0005-01	20-Dec-02	8270C					25		2	N			
LPX-SS-4114-0005-01	20-Dec-02	8270C					25		2	N			
LPX-SS-4114-0005-01	20-Dec-02	8270C					25		2	N			
LPX-SS-4114-0005-01	20-Dec-02	8270C	31	2100			25		2	N	2100 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	99	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	48	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	43	440			25		2	N	280 J		
LPX-SS-4114-0005-01	20-Dec-02	8270C	38	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	670	2100			25		2	N	2100 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	40	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	47	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	39	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	30	2100			25		2	N	2100 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	61	440			25		2	N	440 U		
LPX-SS-4114-0005-01	20-Dec-02	8270C	43	440			25		2	N	440 U		
LPX-SS-4114-0005-01MS	20-Dec-02	8270C					25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C					25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C					25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C					25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C					25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C					25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	31	2100			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	99	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	48	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	43	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	38	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	670	2100			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	40	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	47	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	39	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	30	2100			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	61	440			25		2	MS			
LPX-SS-4114-0005-01MS	20-Dec-02	8270C	43	440			25		2	MS			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C					25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C					25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C					25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C					25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C					25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	31	2100			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	99	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	48	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	43	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	38	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	670	2100			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	40	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	47	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	39	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	30	2100			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	61	440			25		2	MSD			
LPX-SS-4114-0005-01MSD	20-Dec-02	8270C	43	440			25		2	MSD			

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE
V9909	OS	2,4,6-TRIBROMOPHENOL	V9909	118-79-6	85		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	2-FLUOROBIPHENYL	V9909	321-60-8	75		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	2-FLUOROPHENOL	V9909	367-12-4	41		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	WET	PERCENT SOLIDS	V9909		99.2		%		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	NITROBENZENE-D5	V9909	4165-60-0	67		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	PHENOL-D5	V9909	4165-62-2	51		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	TERPHENYL-D14	V9909	1718-51-0	60		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	4-NITROPHENOL	V9909	100-02-7	1600	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	4-METHYLPHENOL	V9909	106-44-5	450		UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	PHENOL	V9909	106-95-2	3200	E	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	BIS(2-ETHYLHEXYL) PHTHALATE	V9909	117-81-7	160	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	DI-N-OCTYL PHTHALATE	V9909	117-84-0	340	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	2,4-DINITROPHENOL	V9909	51-28-5	1600	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	DI-N-BUTYL PHTHALATE	V9909	84-74-2	340	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	BUTYL BENZYL PHTHALATE	V9909	85-68-7	340	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	CARBAZOLE	V9909	86-74-8	340	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	PENTACHLOROPHENOL	V9909	87-86-5	300	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	2-NITROPHENOL	V9909	88-75-5	340	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909	OS	2,4,5-TRICHLOROPHENOL	V9909	95-95-4	340	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	2,4,6-TRIBROMOPHENOL	V9909RE	118-79-6	72		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	2-FLUOROBIPHENYL	V9909RE	321-60-8	69		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	2-FLUOROPHENOL	V9909RE	367-12-4	43		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	NITROBENZENE-D5	V9909RE	4165-60-0	66		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	PHENOL-D5	V9909RE	4165-62-2	51		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	TERPHENYL-D14	V9909RE	1718-51-0	61		PCT_REC		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	4-NITROPHENOL	V9909RE	100-02-7	3300	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	4-METHYLPHENOL	V9909RE	106-44-5	440	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	PHENOL	V9909RE	106-95-2	3200		UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	BIS(2-ETHYLHEXYL) PHTHALATE	V9909RE	117-81-7	200	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	DI-N-OCTYL PHTHALATE	V9909RE	117-84-0	670	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	2,4-DINITROPHENOL	V9909RE	51-28-5	3300	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	DI-N-BUTYL PHTHALATE	V9909RE	84-74-2	670	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	BUTYL BENZYL PHTHALATE	V9909RE	85-68-7	670	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	CARBAZOLE	V9909RE	86-74-8	670	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	PENTACHLOROPHENOL	V9909RE	87-86-5	210	J	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	2-NITROPHENOL	V9909RE	88-75-5	670	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
V9909RE	OS	2,4,5-TRICHLOROPHENOL	V9909RE	95-95-4	670	U	UG/KG DRYWT		C2K250148	STL Pittsburgh	C2K250148007	19-Nov-02	2-Dec-02
CMS-RB-112102A-01	OS	2,4,6-TRIBROMOPHENOL	CMS-RB-112102A-01	118-79-6	84		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	2-FLUOROBIPHENYL	CMS-RB-112102A-01	321-60-8	71		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	2-FLUOROPHENOL	CMS-RB-112102A-01	367-12-4	65		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	NITROBENZENE-D5	CMS-RB-112102A-01	4165-60-0	72		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	PHENOL-D5	CMS-RB-112102A-01	4165-62-2	69		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	TERPHENYL-D14	CMS-RB-112102A-01	1718-51-0	85		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	4-NITROPHENOL	CMS-RB-112102A-01	100-02-7	50	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	4-METHYLPHENOL	CMS-RB-112102A-01	106-44-5	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	PHENOL	CMS-RB-112102A-01	106-95-2	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	BIS(2-ETHYLHEXYL) PHTHALATE	CMS-RB-112102A-01	117-81-7	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	DI-N-OCTYL PHTHALATE	CMS-RB-112102A-01	117-84-0	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	2,4-DINITROPHENOL	CMS-RB-112102A-01	51-28-5	50	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	DI-N-BUTYL PHTHALATE	CMS-RB-112102A-01	84-74-2	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	BUTYL BENZYL PHTHALATE	CMS-RB-112102A-01	85-68-7	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	CARBAZOLE	CMS-RB-112102A-01	86-74-8	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	PENTACHLOROPHENOL	CMS-RB-112102A-01	87-86-5	50	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	2-NITROPHENOL	CMS-RB-112102A-01	88-75-5	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02
CMS-RB-112102A-01	OS	2,4,5-TRICHLOROPHENOL	CMS-RB-112102A-01	95-95-4	9.9	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	27-Nov-02

NSAMPLE	ANAL_DATE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
V9909	20-Dec-02	8270C					1	1.8 QATS LAB PE ICCSV892	2	N			
V9909	20-Dec-02	8270C					1	1.8 QATS LAB PE ICCSV892	2	N			
V9909	20-Dec-02	8270C					1	1.8 QATS LAB PE ICCSV892	2	N			
V9909	3-Dec-02	180.3 MOD	0				1	1.8 QATS LAB PE ICCSV892	2	N	99.2		
V9909	20-Dec-02	8270C					1	1.8 QATS LAB PE ICCSV892	2	N			
V9909	20-Dec-02	8270C					1	1.8 QATS LAB PE ICCSV892	2	N			
V9909	20-Dec-02	8270C					1	1.8 QATS LAB PE ICCSV892	2	N			
V9909	20-Dec-02	8270C	23	1600			1	1.8 QATS LAB PE ICCSV892	2	N	1600	U	
V9909	20-Dec-02	8270C	76	340			1	1.8 QATS LAB PE ICCSV892	2	N	450		
V9909	20-Dec-02	8270C	37	340			1	1.8 QATS LAB PE ICCSV892	2	N	3200	J	
V9909	20-Dec-02	8270C	33	340			1	1.8 QATS LAB PE ICCSV892	2	N	160	J	
V9909	20-Dec-02	8270C	29	340			1	1.8 QATS LAB PE ICCSV892	2	N	340	U	
V9909	20-Dec-02	8270C	510	1600			1	1.8 QATS LAB PE ICCSV892	2	N	1600	U	
V9909	20-Dec-02	8270C	30	340			1	1.8 QATS LAB PE ICCSV892	2	N	340	U	
V9909	20-Dec-02	8270C	36	340			1	1.8 QATS LAB PE ICCSV892	2	N	340	U	
V9909	20-Dec-02	8270C	29	340			1	1.8 QATS LAB PE ICCSV892	2	N	340	U	
V9909	20-Dec-02	8270C	23	1800			1	1.8 QATS LAB PE ICCSV892	2	N	300	J	
V9909	20-Dec-02	8270C	46	340			1	1.8 QATS LAB PE ICCSV892	2	N	340	U	
V9909	20-Dec-02	8270C	32	340			1	1.8 QATS LAB PE ICCSV892	2	N	340	U	
V9909RE	22-Dec-02	8270C					2	1.8 QATS LAB PE ICCSV892	2	N			
V9909RE	22-Dec-02	8270C					2	1.8 QATS LAB PE ICCSV892	2	N			
V9909RE	22-Dec-02	8270C					2	1.8 QATS LAB PE ICCSV892	2	N			
V9909RE	22-Dec-02	8270C					2	1.8 QATS LAB PE ICCSV892	2	N			
V9909RE	22-Dec-02	8270C					2	1.8 QATS LAB PE ICCSV892	2	N			
V9909RE	22-Dec-02	8270C					2	1.8 QATS LAB PE ICCSV892	2	N			
V9909RE	22-Dec-02	8270C	47	3300			2	1.8 QATS LAB PE ICCSV892	2	N	3300	U	
V9909RE	22-Dec-02	8270C	150	670			2	1.8 QATS LAB PE ICCSV892	2	N	440	J	
V9909RE	22-Dec-02	8270C	74	670			2	1.8 QATS LAB PE ICCSV892	2	N	3200		
V9909RE	22-Dec-02	8270C	66	670			2	1.8 QATS LAB PE ICCSV892	2	N	200	J	
V9909RE	22-Dec-02	8270C	58	670			2	1.8 QATS LAB PE ICCSV892	2	N	670	U	
V9909RE	22-Dec-02	8270C	1000	3300			2	1.8 QATS LAB PE ICCSV892	2	N	3300	U	
V9909RE	22-Dec-02	8270C	60	670			2	1.8 QATS LAB PE ICCSV892	2	N	670	U	
V9909RE	22-Dec-02	8270C	72	670			2	1.8 QATS LAB PE ICCSV892	2	N	670	U	
V9909RE	22-Dec-02	8270C	59	670			2	1.8 QATS LAB PE ICCSV892	2	N	670	U	
V9909RE	22-Dec-02	8270C	46	3300			2	1.8 QATS LAB PE ICCSV892	2	N	210	J	
V9909RE	22-Dec-02	8270C	92	670			2	1.8 QATS LAB PE ICCSV892	2	N	670	U	
V9909RE	22-Dec-02	8270C	65	670			2	1.8 QATS LAB PE ICCSV892	2	N	670	U	
CMS-RB-112102A-01	12-Dec-02	8270C					0.99	100		2	N		
CMS-RB-112102A-01	12-Dec-02	8270C					0.99	100		2	N		
CMS-RB-112102A-01	12-Dec-02	8270C					0.99	100		2	N		
CMS-RB-112102A-01	12-Dec-02	8270C					0.99	100		2	N		
CMS-RB-112102A-01	12-Dec-02	8270C					0.99	100		2	N		
CMS-RB-112102A-01	12-Dec-02	8270C	1.8	50			0.99	100		2	N	50	U
CMS-RB-112102A-01	12-Dec-02	8270C	3.5	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	2	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	0.9	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	0.94	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	1.6	50			0.99	100		2	N	50	U
CMS-RB-112102A-01	12-Dec-02	8270C	1.1	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	1	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	3.2	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	0.81	50			0.99	100		2	N	50	U
CMS-RB-112102A-01	12-Dec-02	8270C	3	9.9			0.99	100		2	N	9.9	U
CMS-RB-112102A-01	12-Dec-02	8270C	1.4	9.9			0.99	100		2	N	9.9	U

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE
CMS-RB-112102A-01RE	OS	2,4,6-TRIBROMOPHENOL	CMS-RB-112102A-01RE	118-79-6	97		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	2-FLUOROBIPHENYL	CMS-RB-112102A-01RE	321-60-8	76		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	2-FLUOROPHENOL	CMS-RB-112102A-01RE	367-12-4	66		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	NITROBENZENE-D5	CMS-RB-112102A-01RE	4165-60-0	85		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	PHENOL-D5	CMS-RB-112102A-01RE	4165-62-2	73		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	TERPHENYL-D14	CMS-RB-112102A-01RE	1718-51-0	80		PCT_REC		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	4-NITROPHENOL	CMS-RB-112102A-01RE	100-02-7	49	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	4-METHYLPHENOL	CMS-RB-112102A-01RE	106-44-5	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	PHENOL	CMS-RB-112102A-01RE	108-95-2	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	BIS(2-ETHYLHEXYL) PHTHALATE	CMS-RB-112102A-01RE	117-81-7	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	DI-N-OCTYL PHTHALATE	CMS-RB-112102A-01RE	117-84-0	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	2,4-DINITROPHENOL	CMS-RB-112102A-01RE	51-28-5	49	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	DI-N-BUTYL PHTHALATE	CMS-RB-112102A-01RE	84-74-2	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	BUTYL BENZYL PHTHALATE	CMS-RB-112102A-01RE	85-68-7	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	CARBAZOLE	CMS-RB-112102A-01RE	86-74-8	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	PENTACHLOROPHENOL	CMS-RB-112102A-01RE	87-86-5	49	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	2-NITROPHENOL	CMS-RB-112102A-01RE	88-75-5	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
CMS-RB-112102A-01RE	OS	2,4,5-TRICHLOROPHENOL	CMS-RB-112102A-01RE	95-95-4	9.8	U	UG/L		C2K220274	STL Pittsburgh	C2K220274003	22-Nov-02	17-Dec-02
C2K270000360B	OS	2,4,6-TRIBROMOPHENOL	C2K270000360B	118-79-6	85		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	2-FLUOROBIPHENYL	C2K270000360B	321-60-8	71		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	2-FLUOROPHENOL	C2K270000360B	367-12-4	64		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	NITROBENZENE-D5	C2K270000360B	4165-60-0	73		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	PHENOL-D5	C2K270000360B	4165-62-2	69		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	TERPHENYL-D14	C2K270000360B	1718-51-0	87		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	4-NITROPHENOL	C2K270000360B	100-02-7	50	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	4-METHYLPHENOL	C2K270000360B	106-44-5	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	PHENOL	C2K270000360B	108-95-2	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	BIS(2-ETHYLHEXYL) PHTHALATE	C2K270000360B	117-81-7	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	DI-N-OCTYL PHTHALATE	C2K270000360B	117-84-0	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	2,4-DINITROPHENOL	C2K270000360B	51-28-5	50	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	DI-N-BUTYL PHTHALATE	C2K270000360B	84-74-2	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	BUTYL BENZYL PHTHALATE	C2K270000360B	85-68-7	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	CARBAZOLE	C2K270000360B	86-74-8	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	PENTACHLOROPHENOL	C2K270000360B	87-86-5	50	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	2-NITROPHENOL	C2K270000360B	88-75-5	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360B	OS	2,4,5-TRICHLOROPHENOL	C2K270000360B	95-95-4	10	U	UG/L		C2K220274	STL Pittsburgh	C2K270000360B	27-Nov-02	
C2K270000360C	OS	2,4,6-TRIBROMOPHENOL	C2K270000360C	118-79-6	86		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	2-FLUOROBIPHENYL	C2K270000360C	321-60-8	81		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	2-FLUOROPHENOL	C2K270000360C	367-12-4	61		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	NITROBENZENE-D5	C2K270000360C	4165-60-0	80		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	PHENOL-D5	C2K270000360C	4165-62-2	60		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	TERPHENYL-D14	C2K270000360C	1718-51-0	84		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	4-NITROPHENOL	C2K270000360C	100-02-7	85		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	PHENOL	C2K270000360C	108-95-2	69		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	
C2K270000360C	OS	PENTACHLOROPHENOL	C2K270000360C	87-86-5	89		PCT_REC		C2K220274	STL Pittsburgh	C2K270000360C	27-Nov-02	

NSAMPLE	ANAL_DATE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-RB-112102A-01RE	23-Dec-02	8270C				0.98	100		2	N			
CMS-RB-112102A-01RE	23-Dec-02	8270C				0.98	100		2	N			
CMS-RB-112102A-01RE	23-Dec-02	8270C				0.98	100		2	N			
CMS-RB-112102A-01RE	23-Dec-02	8270C				0.98	100		2	N			
CMS-RB-112102A-01RE	23-Dec-02	8270C				0.98	100		2	N			
CMS-RB-112102A-01RE	23-Dec-02	8270C				0.98	100		2	N			
CMS-RB-112102A-01RE	23-Dec-02	8270C	1.7	49		0.98	100		2	N	49	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	3.4	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	1.9	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	0.89	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	0.93	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	1.6	49		0.98	100		2	N	49	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	1.1	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	0.99	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	3.1	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	0.8	49		0.98	100		2	N	49	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	2.9	9.8		0.98	100		2	N	9.8	UJ	
CMS-RB-112102A-01RE	23-Dec-02	8270C	1.4	9.8		0.98	100		2	N	9.8	UJ	
C2K270000360B	12-Nov-02	8270C				1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C				1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C				1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C				1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C				1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C				1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	1.8	50		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	3.5	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	2	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	0.91	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	0.95	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	1.6	50		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	1.1	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	1	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	3.2	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	0.82	50		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	3	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360B	12-Nov-02	8270C	1.4	10		1	100	INTRA-LAB BLANK	2	MB			
C2K270000360C	12-Nov-02	8270C				1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C				1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C				1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C				1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C				1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C	1.8	50		1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C	2	10		1	100	CHECK SAMPLE	2	LCS			
C2K270000360C	12-Nov-02	8270C	0.82	50		1	100	CHECK SAMPLE	2	LCS			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE
C2L170000335B	OS	2,4,6-TRIBROMOPHENOL	C2L170000335B	118-79-6	82		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	2-FLUOROBIPHENYL	C2L170000335B	321-60-8	73		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	2-FLUOROPHENOL	C2L170000335B	367-12-4	56		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	NITROBENZENE-D5	C2L170000335B	4165-60-0	76		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	PHENOL-D5	C2L170000335B	4165-62-2	62		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	TERPHENYL-D14	C2L170000335B	1718-51-0	73		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	4-NITROPHENOL	C2L170000335B	100-02-7	50	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	4-METHYLPHENOL	C2L170000335B	106-44-5	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	PHENOL	C2L170000335B	108-95-2	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	BIS(2-ETHYLHEXYL) PHTHALATE	C2L170000335B	117-81-7	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	DI-N-OCTYL PHTHALATE	C2L170000335B	117-84-0	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	2,4-DINITROPHENOL	C2L170000335B	51-28-5	50	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	DI-N-BUTYL PHTHALATE	C2L170000335B	84-74-2	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	BUTYL BENZYL PHTHALATE	C2L170000335B	86-68-7	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	CARBAZOLE	C2L170000335B	86-74-8	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	PENTACHLOROPHENOL	C2L170000335B	87-86-5	50	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	2-NITROPHENOL	C2L170000335B	88-75-5	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335B	OS	2,4,5-TRICHLOROPHENOL	C2L170000335B	95-95-4	10	U	UG/L		C2K220274	STL Pittsburgh	C2L170000335B		17-Dec-02
C2L170000335C	OS	2,4,6-TRIBROMOPHENOL	C2L170000335C	118-79-6	94		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	2-FLUOROBIPHENYL	C2L170000335C	321-60-8	79		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	2-FLUOROPHENOL	C2L170000335C	367-12-4	81		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	NITROBENZENE-D5	C2L170000335C	4165-60-0	81		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	PHENOL-D5	C2L170000335C	4165-62-2	72		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	TERPHENYL-D14	C2L170000335C	1718-51-0	73		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	4-NITROPHENOL	C2L170000335C	100-02-7	101		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	4-METHYLPHENOL	C2L170000335C	106-44-5	82		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	PHENOL	C2L170000335C	108-95-2	81		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	BIS(2-ETHYLHEXYL) PHTHALATE	C2L170000335C	117-81-7	85		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	DI-N-OCTYL PHTHALATE	C2L170000335C	117-84-0	82		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	2,4-DINITROPHENOL	C2L170000335C	51-28-5	86		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	DI-N-BUTYL PHTHALATE	C2L170000335C	84-74-2	94		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	BUTYL BENZYL PHTHALATE	C2L170000335C	86-68-7	85		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	CARBAZOLE	C2L170000335C	86-74-8	84		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	PENTACHLOROPHENOL	C2L170000335C	87-86-5	79		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	2-NITROPHENOL	C2L170000335C	88-75-5	74		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335C	OS	2,4,5-TRICHLOROPHENOL	C2L170000335C	95-95-4	73		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335C		17-Dec-02
C2L170000335L	OS	2,4,6-TRIBROMOPHENOL	C2L170000335L	118-79-6	89		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	2-FLUOROBIPHENYL	C2L170000335L	321-60-8	74		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	2-FLUOROPHENOL	C2L170000335L	367-12-4	59		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	NITROBENZENE-D5	C2L170000335L	4165-60-0	74		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	PHENOL-D5	C2L170000335L	4165-62-2	68		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	TERPHENYL-D14	C2L170000335L	1718-51-0	68		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	4-NITROPHENOL	C2L170000335L	100-02-7	83		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	4-METHYLPHENOL	C2L170000335L	106-44-5	88		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	PHENOL	C2L170000335L	108-95-2	77		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	BIS(2-ETHYLHEXYL) PHTHALATE	C2L170000335L	117-81-7	80		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	DI-N-OCTYL PHTHALATE	C2L170000335L	117-84-0	78		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	2,4-DINITROPHENOL	C2L170000335L	51-28-5	83		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	DI-N-BUTYL PHTHALATE	C2L170000335L	84-74-2	90		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	BUTYL BENZYL PHTHALATE	C2L170000335L	86-68-7	79		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	CARBAZOLE	C2L170000335L	86-74-8	82		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	PENTACHLOROPHENOL	C2L170000335L	87-86-5	78		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	2-NITROPHENOL	C2L170000335L	88-75-5	71		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02
C2L170000335L	OS	2,4,5-TRICHLOROPHENOL	C2L170000335L	95-95-4	69		PCT_REC		C2K220274	STL Pittsburgh	C2L170000335L		17-Dec-02

NSAMPLE	ANAL DATE	METHOD	MDL	IDL	CRDL CRCL	DIL FACTOR	PCT MOIST	COMMENTS	DVTIER	LAB QC TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
C2L170000335B	23-Dec-02	8270C					1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C					1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C					1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C					1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C					1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C					1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	1.8	50			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	3.5	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	2	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	0.91	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	0.95	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	1.6	50			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	1.1	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	1	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	3.2	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	0.82	50			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	3	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335B	23-Dec-02	8270C	1.4	10			1	100 INTRA-LAB BLANK		2 MB			
C2L170000335C	23-Dec-02	8270C					1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C					1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C					1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C					1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C					1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	1.8	50			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	3.5	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	2	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	0.91	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	0.95	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	1.6	50			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	1.1	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	1	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	3.2	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	0.82	50			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	3	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335C	23-Dec-02	8270C	1.4	10			1	100 CHECK SAMPLE		2 LCS			
C2L170000335L	23-Dec-02	8270C					1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C					1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C					1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C					1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C					1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	1.8	50			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	3.5	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	2	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	0.91	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	0.95	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	1.6	50			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	1.1	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	1	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	3.2	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	0.82	50			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	3	10			1	100 DUPLICATE CHECK		2 LCSD			
C2L170000335L	23-Dec-02	8270C	1.4	10			1	100 DUPLICATE CHECK		2 LCSD			

Section 6 VOC Results

QA/QC Narratives
Groundwater and QC Results

QA/QC Narratives

CASE NARRATIVE

Battelle

STL Lot # C2J250362

Sample Receiving:

STL Pittsburgh received samples for analysis on October 25, 2002. The cooler was received within the proper temperature range.

The chain of custody listed a matrix spike and matrix spike duplicate for sample CMS-GW-MW12B-03. The laboratory received 9 VOA vials for sample CMS-GW-MW12D-03. The client was contacted and verified that the wrong sample was marked for matrix spike and matrix spike duplicate on the chain of custody.

GC/MS Volatiles:

Due to the concentration of target compounds detected, several samples were analyzed at a dilution.

The laboratory control standard for batch 2300145 recovered outside of the control limits for chloroethane and acetone. All control compounds recovered within the control limits. All data was reported.

The relative percent difference between the laboratory control standard and the laboratory control duplicate for batch 2302369 was outside of the control limits for naphthalene.

The laboratory control duplicate for batch 2303211 recovered outside of the control limits for trans-1, 2-dichloroethene. All control compounds recovered within the control limits. All data was reported.

The relative percent difference between the laboratory control standard and the laboratory control duplicate for batch 2303211 was outside of the control limits for several compounds.

The matrix spike and matrix spike duplicate of sample CMS-GW-MW11B-03 recovered outside of the control limits for chloroethane and acetone.

The matrix spike and matrix spike duplicate of sample CMS-GW-MW12D-03 recovered outside of the control limits for toluene.

Due to Daylight Savings time change, the following files have incorrect clock print out times. The 4 files that have incorrect print out times are listed with actual times next to them. CF31027 is @ 8:34 AM instead of 9:34 AM, BF51027 is @ 7:45 AM instead of 8:45 AM, 1C51027 is @ 8:55 AM instead of 9:55 AM, and 5102701 is @ 9:47 AM instead of 10:47 AM.

CASE NARRATIVE

Battelle

STL Lot # C2K220274

Sample Receiving:

STL Pittsburgh received samples for analysis on November 22, 2002. The cooler was received within the proper temperature range.

Sample CMS-GW-MW03S-03 was to be analyzed as a duplicate as per Deidre Dahlen on December 3, 2002.

GC/MS Volatiles:

There were no problems associated with the analysis.

GC/MS Semivolatiles:

The reporting limits were adjusted according to the amount of sample extracted.

Sample CMS-RB-112102A-01 was extracted with an incorrect laboratory control standard. The sample was re-extracted nineteen days outside of the holding time with the correct laboratory control standard. Both sets of data are reported.

Groundwater and QC Results

HSAMPLE	CLASS	PARAMETER	SPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-TB-102202A-03	OV	TOLUENE-D8	CMS-TB-102202A-03	2037-26-5	85		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2-DICHLOROETHANE-D4	CMS-TB-102202A-03	17060-07-0	122		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	4-BROMOFLUOROBENZENE	CMS-TB-102202A-03	460-00-4	108		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	DIBROMOFLUOROMETHANE	CMS-TB-102202A-03	1868-63-7	113		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	ETHYLBENZENE	CMS-TB-102202A-03	100-41-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	STYRENE	CMS-TB-102202A-03	100-42-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-TB-102202A-03	10061-01-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-TB-102202A-03	10061-02-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	N-PROPYLBENZENE	CMS-TB-102202A-03	103-65-1	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	N-BUTYLBENZENE	CMS-TB-102202A-03	104-61-8	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	4-CHLOROTOLUENE	CMS-TB-102202A-03	108-43-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,4-DICHLOROBENZENE	CMS-TB-102202A-03	106-46-7	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2-DIBROMOETHANE	CMS-TB-102202A-03	108-93-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2-DICHLOROETHANE	CMS-TB-102202A-03	107-06-2	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-TB-102202A-03	108-87-8	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	BROMOBENZENE	CMS-TB-102202A-03	108-66-1	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TOLUENE	CMS-TB-102202A-03	108-88-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CHLOROBENZENE	CMS-TB-102202A-03	108-90-7	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2,4-TRICHLOROBENZENE	CMS-TB-102202A-03	120-82-1	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	DIBROMOCHLOROMETHANE	CMS-TB-102202A-03	124-48-1	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TETRACHLOROETHENE	CMS-TB-102202A-03	127-18-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	SEC-BUTYLBENZENE	CMS-TB-102202A-03	135-98-8	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	M-XYLENE & P-XYLENE	CMS-TB-102202A-03	136777-61-2	2	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1-DICHLOROPROPANE	CMS-TB-102202A-03	142-28-9	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CIS-1,2-DICHLOROETHENE	CMS-TB-102202A-03	156-59-2	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-TB-102202A-03	158-60-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,3-DICHLOROBENZENE	CMS-TB-102202A-03	541-73-1	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CARBON TETRACHLORIDE	CMS-TB-102202A-03	56-23-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1-DICHLOROPROPANE	CMS-TB-102202A-03	563-59-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	2,2-DICHLOROPROPANE	CMS-TB-102202A-03	584-20-7	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-TB-102202A-03	630-20-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CHLOROFORM	CMS-TB-102202A-03	67-66-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	BENZENE	CMS-TB-102202A-03	71-43-2	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1,1-TRICHLOROETHANE	CMS-TB-102202A-03	71-55-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	BROMOMETHANE	CMS-TB-102202A-03	74-83-9	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CHLOROMETHANE	CMS-TB-102202A-03	74-87-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	DIBROMOMETHANE	CMS-TB-102202A-03	74-95-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	BROMOCHLOROMETHANE	CMS-TB-102202A-03	74-97-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	CHLOROETHANE	CMS-TB-102202A-03	75-00-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	VINYL CHLORIDE	CMS-TB-102202A-03	75-01-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	METHYLENE CHLORIDE	CMS-TB-102202A-03	75-09-2	2	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	BROMOFORM	CMS-TB-102202A-03	75-25-2	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	BROMODICHLOROMETHANE	CMS-TB-102202A-03	75-27-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1-DICHLOROETHANE	CMS-TB-102202A-03	75-34-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1-DICHLOROETHENE	CMS-TB-102202A-03	75-35-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TRICHLOROFLUOROMETHANE	CMS-TB-102202A-03	75-69-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	DICHLORODIFLUOROMETHANE	CMS-TB-102202A-03	75-71-9	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2-DICHLOROPROPANE	CMS-TB-102202A-03	78-67-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1,2-TRICHLOROETHANE	CMS-TB-102202A-03	79-00-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TRICHLOROETHENE	CMS-TB-102202A-03	79-01-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-TB-102202A-03	79-34-5	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2,3-TRICHLOROBENZENE	CMS-TB-102202A-03	87-61-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	HEXACHLOROBUTADIENE	CMS-TB-102202A-03	87-68-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	NAPHTHALENE	CMS-TB-102202A-03	91-20-3	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	O-XYLENE	CMS-TB-102202A-03	95-47-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	2-CHLOROTOLUENE	CMS-TB-102202A-03	95-49-8	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2-DICHLOROBENZENE	CMS-TB-102202A-03	95-50-1	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-TB-102202A-03	95-63-8	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-TB-102202A-03	96-12-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	1,2,3-TRICHLOROPROPANE	CMS-TB-102202A-03	96-18-4	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	TERT-BUTYLBENZENE	CMS-TB-102202A-03	98-06-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	ISOPROPYLBENZENE	CMS-TB-102202A-03	98-82-8	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02
CMS-TB-102202A-03	OV	P-ISOPROPYLTOLUENE	CMS-TB-102202A-03	99-87-6	1	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362001	25-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	UVIEN	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-TB-102202A-03	8260B				1	100			2N			
CMS-TB-102202A-03	8260B				1	100			2N			
CMS-TB-102202A-03	8260B				1	100			2N			
CMS-TB-102202A-03	8260B				1	100			2N			
CMS-TB-102202A-03	8260B	0.072	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.067	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.22	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.069	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.11	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.16	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.26	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.12	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.084	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.14	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.15	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.32	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.12	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.15	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.21	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.078	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.2	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.12	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.13	2		1	100			2N		2U	
CMS-TB-102202A-03	8260B	0.17	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.38	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.31	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.11	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.31	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.13	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.2	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.17	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.17	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.082	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.27	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.3	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.28	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.19	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.19	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.2	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.14	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.15	2		1	100			2N		2U	
CMS-TB-102202A-03	8260B	0.3	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.13	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.22	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.38	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.43	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.60	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.15	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.13	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.087	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.29	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.25	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.72	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.31	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.083	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.26	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.11	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.044	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.8	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.39	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.13	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.088	1		1	100			2N		1U	
CMS-TB-102202A-03	8260B	0.14	1		1	100			2N		1U	

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW100-03	OV	TOLUENE-D8	CMS-GW-MW100-03	2037-26-5	97		PCT_REC	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW100-03	17060-07-0	99		PCT_REC	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW100-03	460-00-4	99		PCT_REC	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW100-03	1868-53-7	93		PCT_REC	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	ETHYLBENZENE	CMS-GW-MW100-03	100-41-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	STYRENE	CMS-GW-MW100-03	100-42-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW100-03	10661-01-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW100-03	10661-02-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	N-PROPYLBENZENE	CMS-GW-MW100-03	103-65-1	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	N-BUTYLBENZENE	CMS-GW-MW100-03	104-51-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	4-CHLOROTOLUENE	CMS-GW-MW100-03	108-43-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW100-03	106-46-7	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW100-03	106-93-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW100-03	107-06-2	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW100-03	108-67-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	BROMOBENZENE	CMS-GW-MW100-03	106-86-1	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TOLUENE	CMS-GW-MW100-03	108-88-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CHLOROBENZENE	CMS-GW-MW100-03	108-90-7	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW100-03	120-82-1	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW100-03	124-48-1	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TETRACHLOROETHENE	CMS-GW-MW100-03	127-18-4	0.39 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	SFC-BUTYLBENZENE	CMS-GW-MW100-03	135-98-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW100-03	136777-61-2	2 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW100-03	142-28-9	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW100-03	156-59-2	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW100-03	158-60-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW100-03	541-73-1	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW100-03	56-23-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW100-03	583-50-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW100-03	594-20-7	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW100-03	630-20-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CHLOROFORM	CMS-GW-MW100-03	67-66-3	4.1		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	BENZENE	CMS-GW-MW100-03	71-43-2	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW100-03	71-55-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	BROMOMETHANE	CMS-GW-MW100-03	74-83-9	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CHLOROMETHANE	CMS-GW-MW100-03	74-87-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	DIBROMOMETHANE	CMS-GW-MW100-03	74-95-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW100-03	74-97-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	CHLOROETHANE	CMS-GW-MW100-03	75-00-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	VINYL CHLORIDE	CMS-GW-MW100-03	75-01-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	METHYLENE CHLORIDE	CMS-GW-MW100-03	75-09-2	2 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	BROMOFORM	CMS-GW-MW100-03	75-25-2	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW100-03	75-27-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW100-03	75-34-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW100-03	75-35-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW100-03	75-69-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW100-03	75-71-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW100-03	78-87-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW100-03	79-00-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TRICHLOROETHENE	CMS-GW-MW100-03	79-01-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW100-03	79-34-5	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW100-03	87-61-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW100-03	87-68-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	NAPHTHALENE	CMS-GW-MW100-03	91-20-3	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	O-XYLENE	CMS-GW-MW100-03	95-47-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	2-CHLOROTOLUENE	CMS-GW-MW100-03	95-49-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW100-03	95-50-1	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW100-03	95-63-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW100-03	96-12-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW100-03	96-18-4	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW100-03	98-06-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	ISOPROPYLBENZENE	CMS-GW-MW100-03	98-82-6	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	ISOPROPYLTOLUENE	CMS-GW-MW100-03	99-87-8	1 U		UG/L	C2J250362	STL Pittsburgh	C2J250362002		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	TOLUENE-D8	CMS-GW-MW100-03	2037-26-5	96		PCT_REC	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW100-03	17060-07-0	116		PCT_REC	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW100-03	460-00-4	99		PCT_REC	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW100-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW100-03	1868-53-7	101		PCT_REC	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02

HSAMPLE	METHOD	MDL	IDL	CPDL	CRCL	IDL FACTOR	PCT_MOIST	COMMENTS	DIUTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B	0.072	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.067	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.22	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.069	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.11	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.16	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.25	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.12	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.084	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.14	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.16	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.32	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.12	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.15	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.21	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.078	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.2	1			1	100			2N	0.38U		
CMS-GW-MW100-03	8260B	0.12	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.13	2			1	100			2N		2U	
CMS-GW-MW100-03	8260B	0.17	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.38	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.31	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.11	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.31	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.2	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.17	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.17	1			1	100			2N	4.1		
CMS-GW-MW100-03	8260B	0.082	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.27	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.3	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.28	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.19	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.18	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.2	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.14	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.15	2			1	100			2N		2U	
CMS-GW-MW100-03	8260B	0.3	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.22	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.36	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.43	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.66	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.15	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.087	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.29	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.25	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.72	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.31	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.083	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.26	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.11	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.044	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.5	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.38	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.088	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B	0.14	1			1	100			2N		1U	
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B					1	100			2N			
CMS-GW-MW100-03	8260B					1	100			2N			

IN_SAMPLE	CLASS	PARAMETER	PARAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW108-03	OV	ETHYLBENZENE	CMS-GW-MW108-03	100-41-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	STYRENE	CMS-GW-MW108-03	100-42-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW108-03	10061-01-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW108-03	10061-02-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	N-PROPYLBENZENE	CMS-GW-MW108-03	103-65-1	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	N-BUTYLBENZENE	CMS-GW-MW108-03	104-51-8	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	4-CHLOROTOLUENE	CMS-GW-MW108-03	106-43-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW108-03	106-46-7	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW108-03	106-93-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW108-03	107-06-2	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW108-03	108-67-8	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	BROMOBENZENE	CMS-GW-MW108-03	108-86-1	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TOLUENE	CMS-GW-MW108-03	108-88-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CHLOROBENZENE	CMS-GW-MW108-03	108-90-7	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW108-03	120-82-1	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW108-03	124-48-1	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TETRACHLOROETHENE	CMS-GW-MW108-03	127-18-4	0.25	J	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW108-03	135-98-9	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW108-03	136777-61-2	2	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW108-03	142-28-9	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW108-03	156-59-2	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW108-03	156-60-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW108-03	541-73-1	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW108-03	56-23-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW108-03	563-58-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW108-03	584-20-7	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW108-03	630-20-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CHLOROFORM	CMS-GW-MW108-03	67-66-3	1.7	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	BENZENE	CMS-GW-MW108-03	71-43-2	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW108-03	71-55-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	BROMOMETHANE	CMS-GW-MW108-03	74-83-9	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CHLOROMETHANE	CMS-GW-MW108-03	74-87-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	DIBROMOMETHANE	CMS-GW-MW108-03	74-95-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW108-03	74-97-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	CHLOROETHANE	CMS-GW-MW108-03	75-00-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	VINYL CHLORIDE	CMS-GW-MW108-03	75-01-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	METHYLENE CHLORIDE	CMS-GW-MW108-03	75-09-2	2	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	BROMOFORM	CMS-GW-MW108-03	75-25-2	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW108-03	75-27-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW108-03	75-34-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW108-03	75-35-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW108-03	75-69-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW108-03	75-71-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW108-03	78-87-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW108-03	79-00-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TRICHLOROETHENE	CMS-GW-MW108-03	79-01-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW108-03	79-34-5	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW108-03	87-61-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW108-03	87-68-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	NAPHTHALENE	CMS-GW-MW108-03	91-20-3	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	O-XYLENE	CMS-GW-MW108-03	95-47-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	2-CHLOROTOLUENE	CMS-GW-MW108-03	95-49-8	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW108-03	95-50-1	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW108-03	95-63-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW108-03	96-12-8	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW108-03	96-18-4	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW108-03	98-06-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	ISOPROPYLBENZENE	CMS-GW-MW108-03	98-82-8	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW108-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW108-03	99-87-6	1	U	UG/L	C2J250362	STL Pittsburgh	C2J250362003		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	TOLUENE-D8	CMS-GW-MW08S-03	2037-26-5	93		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TOLUENE-D8	CMS-GW-MW08S-03RE	2037-26-5	90		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW08S-03	17060-07-0	94		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW08S-03RE	17060-07-0	106		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW08S-03	460-00-4	98		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW08S-03RE	460-00-4	99		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW08S-03	1888-53-7	93		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW08S-03RE	1888-53-7	97		PCT REC	C2J250362	STL Pittsburgh	C2J250362004		25-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	DIL FACTOR	PCT MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW10B-03	8260B	0.072	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.067	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.22	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.069	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.11	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.16	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.25	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.12	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.084	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.14	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.15	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.32	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.12	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.15	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.21	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.078	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.2	1			1	100			2N	0.25J	1U	
CMS-GW-MW10B-03	8260B	0.12	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.13	2			1	100			2N		2U	
CMS-GW-MW10B-03	8260B	0.17	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.38	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.31	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.11	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.31	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.2	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.17	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.17	1			1	100			2N	1.7	1U	
CMS-GW-MW10B-03	8260B	0.082	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.27	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.3	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.26	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.19	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.19	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.2	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.14	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.15	2			1	100			2N		2U	
CMS-GW-MW10B-03	8260B	0.3	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.22	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.38	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.43	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.66	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.15	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.087	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.29	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.25	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.72	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.31	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.083	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.26	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.11	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.044	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.6	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.38	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.13	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.088	1			1	100			2N		1U	
CMS-GW-MW10B-03	8260B	0.14	1			1	100			2N		1U	
CMS-GW-MW08S-03	8260B					1	100			2N			
CMS-GW-MW08S-03RE	8260B					3	100			2N			
CMS-GW-MW08S-03	8260B					1	100			2N			
CMS-GW-MW08S-03RE	8260B					3	100			2N			
CMS-GW-MW08S-03	8260B					1	100			2N			
CMS-GW-MW08S-03RE	8260B					3	100			2N			
CMS-GW-MW08S-03	8260B					1	100			2N			
CMS-GW-MW08S-03RE	8260B					3	100			2N			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW08S-03	OV	ETHYLBENZENE	CMS-GW-MW08S-03	100-41-4	2.4		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	ETHYLBENZENE	CMS-GW-MW08S-03RE	100-41-4	2.7	J	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	STYRENE	CMS-GW-MW08S-03	100-42-5	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	STYRENE	CMS-GW-MW08S-03RE	100-42-5	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW08S-03	10661-01-5	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW08S-03RE	10661-01-5	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW08S-03	10661-02-6	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW08S-03RE	10661-02-6	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	N-PROPYLBENZENE	CMS-GW-MW08S-03	103-65-1	7.4		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	N-PROPYLBENZENE	CMS-GW-MW08S-03RE	103-65-1	8.1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	N-BUTYLBENZENE	CMS-GW-MW08S-03	104-61-8	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	N-BUTYLBENZENE	CMS-GW-MW08S-03RE	104-61-8	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW08S-03	106-43-4	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	4-CHLOROTOLUENE	CMS-GW-MW08S-03RE	106-43-4	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW08S-03	106-46-7	0.53	J	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,4-DICHLOROBENZENE	CMS-GW-MW08S-03RE	106-46-7	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW08S-03	106-93-4	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2-DIBROMOETHANE	CMS-GW-MW08S-03RE	106-93-4	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW08S-03	107-06-2	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2-DICHLOROETHANE	CMS-GW-MW08S-03RE	107-06-2	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW08S-03	108-67-8	26		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW08S-03RE	108-67-8	29		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	BROMOBENZENE	CMS-GW-MW08S-03	108-86-1	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	BROMOBENZENE	CMS-GW-MW08S-03RE	108-86-1	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	TOLUENE	CMS-GW-MW08S-03	108-88-3	1.4		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TOLUENE	CMS-GW-MW08S-03RE	108-88-3	0.98	J	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	CHLOROBENZENE	CMS-GW-MW08S-03	108-90-7	23		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	CHLOROBENZENE	CMS-GW-MW08S-03RE	108-90-7	25		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW08S-03	120-82-1	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW08S-03RE	120-82-1	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW08S-03	124-48-1	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW08S-03RE	124-48-1	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	TETRACHLOROETHENE	CMS-GW-MW08S-03	127-18-4	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TETRACHLOROETHENE	CMS-GW-MW08S-03RE	127-18-4	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW08S-03	135-98-8	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	SEC-BUTYLBENZENE	CMS-GW-MW08S-03RE	135-98-8	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW08S-03	136777-61-2	13		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	M-XYLENE & P-XYLENE	CMS-GW-MW08S-03RE	136777-61-2	14		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW08S-03	142-28-9	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,3-DICHLOROPROPANE	CMS-GW-MW08S-03RE	142-28-9	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW08S-03	156-59-2	8.5		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW08S-03RE	156-59-2	9.3		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW08S-03	156-60-5	0.82	J	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW08S-03RE	156-60-5	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW08S-03	541-73-1	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,3-DICHLOROBENZENE	CMS-GW-MW08S-03RE	541-73-1	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW08S-03	56-23-5	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	CARBON TETRACHLORIDE	CMS-GW-MW08S-03RE	56-23-5	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW08S-03	563-58-6	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1-DICHLOROPROPENE	CMS-GW-MW08S-03RE	563-58-6	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW08S-03	594-20-7	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	2,2-DICHLOROPROPANE	CMS-GW-MW08S-03RE	594-20-7	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW08S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW08S-03	530-20-6	1		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW08S-03RE	530-20-6	3	U	UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362004	25-Oct-02	29-Oct-02	29-Oct-02

INSAMPLE	METHOD	MDL	IDL	CRCL_CRCL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW08S-03	8260B	0.072	1			1	100		2N	2.4		
CMS-GW-MW08S-03RE	8260B	0.22	3			3	100		2N	2.7U		
CMS-GW-MW08S-03	8260B	0.067	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.2	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.22	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.67	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.069	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.21	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.11	1			1	100		2N	7.4		
CMS-GW-MW08S-03RE	8260B	0.32	3			3	100		2N	8.1		
CMS-GW-MW08S-03	8260B	0.16	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.47	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.25	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.76	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.12	1			1	100		2N	0.53U		
CMS-GW-MW08S-03RE	8260B	0.37	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.064	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.25	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.14	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.42	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.15	1			1	100		2N	25		
CMS-GW-MW08S-03RE	8260B	0.46	3			3	100		2N	29		
CMS-GW-MW08S-03	8260B	0.32	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.67	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.12	1			1	100		2N	1.4		
CMS-GW-MW08S-03RE	8260B	0.37	3			3	100		2N	0.96U		
CMS-GW-MW08S-03	8260B	0.15	1			1	100		2N	23		
CMS-GW-MW08S-03RE	8260B	0.45	3			3	100		2N	25		
CMS-GW-MW08S-03	8260B	0.21	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.62	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.076	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.23	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.2	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.69	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.12	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.36	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.13	2			1	100		2N	13		
CMS-GW-MW08S-03RE	8260B	0.36	6			3	100		2N	14		
CMS-GW-MW08S-03	8260B	0.17	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.51	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.36	1			1	100		2N	6.5		
CMS-GW-MW08S-03RE	8260B	1.2	3			3	100		2N	9.3		
CMS-GW-MW08S-03	8260B	0.31	1			1	100		2N	0.62U		
CMS-GW-MW08S-03RE	8260B	0.94	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.11	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.33	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.31	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.93	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.13	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.36	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.2	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.61	3			3	100		2N	3U		
CMS-GW-MW08S-03	8260B	0.17	1			1	100		2N	1U		
CMS-GW-MW08S-03RE	8260B	0.52	3			3	100		2N	3U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW08S-03	OV	CHLOROFORM	CMS-GW-MW08S-03	67-66-3		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	CHLOROFORM	CMS-GW-MW08S-03RE	67-66-3		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	BENZENE	CMS-GW-MW08S-03	71-43-2		10	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	BENZENE	CMS-GW-MW08S-03RE	71-43-2		12	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW08S-03	71-55-6		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW08S-03RE	71-55-6		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	BROMOMETHANE	CMS-GW-MW08S-03	74-83-9		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	BROMOMETHANE	CMS-GW-MW08S-03RE	74-83-9		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW08S-03	74-87-3		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1-DICHLOROETHANE	CMS-GW-MW08S-03RE	74-87-3		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	DIBROMOMETHANE	CMS-GW-MW08S-03	74-95-3		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	DIBROMOMETHANE	CMS-GW-MW08S-03RE	74-95-3		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW08S-03	74-97-5		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	BROMOCHLOROMETHANE	CMS-GW-MW08S-03RE	74-97-5		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	CHLOROETHANE	CMS-GW-MW08S-03	75-00-3		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	CHLOROETHANE	CMS-GW-MW08S-03RE	75-00-3		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	VINYL CHLORIDE	CMS-GW-MW08S-03	75-01-4	0.72	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	VINYL CHLORIDE	CMS-GW-MW08S-03RE	75-01-4		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW08S-03	75-09-2		2	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	METHYLENE CHLORIDE	CMS-GW-MW08S-03RE	75-09-2		6	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	BROMOFORM	CMS-GW-MW08S-03	75-25-2		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	BROMOFORM	CMS-GW-MW08S-03RE	75-25-2		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW08S-03	75-27-4		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	BROMODICHLOROMETHANE	CMS-GW-MW08S-03RE	75-27-4		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW08S-03	75-34-3		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1-DICHLOROETHANE	CMS-GW-MW08S-03RE	75-34-3		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW08S-03	75-35-4		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1-DICHLOROETHENE	CMS-GW-MW08S-03RE	75-35-4		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW08S-03	75-80-4		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW08S-03RE	75-80-4		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	DICHLOROFLUOROMETHANE	CMS-GW-MW08S-03	75-71-8		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	DICHLOROFLUOROMETHANE	CMS-GW-MW08S-03RE	75-71-8		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW08S-03	78-87-5		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2-DICHLOROPROPANE	CMS-GW-MW08S-03RE	78-87-5		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW08S-03	79-00-5		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW08S-03RE	79-00-5		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	TRICHLOROETHENE	CMS-GW-MW08S-03	79-01-6	2.3	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TRICHLOROETHENE	CMS-GW-MW08S-03RE	79-01-6	2.8	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW08S-03	79-34-5		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW08S-03RE	79-34-5		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW08S-03	87-61-6		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW08S-03RE	87-61-6		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW08S-03	87-68-3		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	HEXACHLOROBUTADIENE	CMS-GW-MW08S-03RE	87-68-3		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	NAPHTHALENE	CMS-GW-MW08S-03	91-20-3	1.7	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	NAPHTHALENE	CMS-GW-MW08S-03RE	91-20-3	1.5	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	O-XYLENE	CMS-GW-MW08S-03	95-47-6	15	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	O-XYLENE	CMS-GW-MW08S-03RE	95-47-6	16	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW08S-03	95-49-8		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	2-CHLOROTOLUENE	CMS-GW-MW08S-03RE	95-49-8		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW08S-03	95-60-1		1.9	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2-DICHLOROBENZENE	CMS-GW-MW08S-03RE	95-60-1	2.1	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW08S-03	95-63-6		93	E			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW08S-03RE	95-63-6	110	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW08S-03	96-12-8		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW08S-03RE	96-12-8		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW08S-03	96-18-4		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW08S-03RE	96-18-4		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW08S-03	98-06-6		1	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	TERT-BUTYLBENZENE	CMS-GW-MW08S-03RE	98-06-6		3	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW08S-03	98-82-8		2	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	ISOPROPYLBENZENE	CMS-GW-MW08S-03RE	98-82-8	2.4	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW08S-03	99-87-6		1.2	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02
CMS-GW-MW08S-03RE	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW08S-03RE	99-87-6	1.4	J	U/L			C2J250362	STL Pittsburgh	C2J250362004	25-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	DIL FACTOR	PCT MOIST	COMMENTS	SVTIER	LAB QC TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
CMS-GW-MW065-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.51	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.082	1			1	100		2N		10J		
CMS-GW-MW065-03RE	8260B	0.25	3			3	100		2N		12J		
CMS-GW-MW065-03	8260B	0.27	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.81	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.9	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.28	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.83	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.58	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.58	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.58	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.14	1			1	100		2N		0.72J		
CMS-GW-MW065-03RE	8260B	0.43	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.15	1			1	100		2N		2U		
CMS-GW-MW065-03RE	8260B	0.44	3			3	100		2N		6U		
CMS-GW-MW065-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.91	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.4	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.65	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	1.1	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.43	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	1.3	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.66	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	2	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.45	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.4	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.087	1			1	100		2N		2.3J		
CMS-GW-MW065-03RE	8260B	0.26	3			3	100		2N		2.8J		
CMS-GW-MW065-03	8260B	0.28	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.87	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.25	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.78	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.72	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	2.2	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.31	1			1	100		2N		1.7J		
CMS-GW-MW065-03RE	8260B	0.94	3			3	100		2N		1.5J		
CMS-GW-MW065-03	8260B	0.083	1			1	100		2N		15J		
CMS-GW-MW065-03RE	8260B	0.25	3			3	100		2N		18J		
CMS-GW-MW065-03	8260B	0.26	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.77	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.11	1			1	100		2N		1.8J		
CMS-GW-MW065-03RE	8260B	0.34	3			3	100		2N		2.1J		
CMS-GW-MW065-03	8260B	0.044	1			1	100		2N		93J		
CMS-GW-MW065-03RE	8260B	0.13	3			3	100		2N		110J		
CMS-GW-MW065-03	8260B	0.8	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	2.4	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	1.1	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW065-03RE	8260B	0.39	3			3	100		2N		3U		
CMS-GW-MW065-03	8260B	0.088	1			1	100		2N		2J		
CMS-GW-MW065-03RE	8260B	0.26	3			3	100		2N		2.4J		
CMS-GW-MW065-03	8260B	0.14	1			1	100		2N		1.2J		
CMS-GW-MW065-03RE	8260B	0.42	3			3	100		2N		1.4J		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SOLG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW048-03	OV	TOLUENE D8	CMS-GW-MW048-03	2037-20-5	95		PCT REC		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW048-03	17060-07-0	109		PCT REC		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW048-03	460-00-4	100		PCT REC		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW048-03	1868-53-7	94		PCT REC		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	ETHYLBENZENE	CMS-GW-MW048-03	103-41-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	STYRENE	CMS-GW-MW048-03	100-42-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW048-03	10061-01-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW048-03	10061-02-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	N-PROPYLBENZENE	CMS-GW-MW048-03	103-65-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	N-BUTYLBENZENE	CMS-GW-MW048-03	104-51-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	4-CHLOROTOLUENE	CMS-GW-MW048-03	105-43-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW048-03	106-46-7	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW048-03	106-93-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW048-03	107-06-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW048-03	108-67-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	BROMOBENZENE	CMS-GW-MW048-03	108-86-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TOLUENE	CMS-GW-MW048-03	108-88-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CHLOROBENZENE	CMS-GW-MW048-03	108-90-7	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW048-03	120-82-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW048-03	124-48-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TETRACHLOROETHENE	CMS-GW-MW048-03	127-18-4	17		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW048-03	135-98-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW048-03	136777-61-2	21U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW048-03	142-28-9	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW048-03	156-59-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW048-03	156-60-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW048-03	541-79-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW048-03	56-23-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW048-03	563-65-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW048-03	594-20-7	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW048-03	630-20-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CHLOROFORM	CMS-GW-MW048-03	67-66-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	BENZENE	CMS-GW-MW048-03	71-43-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW048-03	71-55-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	BROMOMETHANE	CMS-GW-MW048-03	74-83-9	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CHLOROMETHANE	CMS-GW-MW048-03	74-87-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	DIBROMOMETHANE	CMS-GW-MW048-03	74-95-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW048-03	74-97-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	CHLOROETHANE	CMS-GW-MW048-03	75-00-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	VINYL CHLORIDE	CMS-GW-MW048-03	75-01-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	METHYLENE CHLORIDE	CMS-GW-MW048-03	75-08-2	21U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	BROMOFORM	CMS-GW-MW048-03	75-26-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW048-03	75-27-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW048-03	75-34-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW048-03	75-35-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW048-03	75-69-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW048-03	75-71-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW048-03	78-67-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW048-03	79-00-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TRICHLOROETHENE	CMS-GW-MW048-03	79-01-6	0.39J		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW048-03	79-34-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW048-03	87-61-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW048-03	87-68-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	NAPHTHALENE	CMS-GW-MW048-03	91-20-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	O-XYLENE	CMS-GW-MW048-03	95-47-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	2-CHLOROTOLUENE	CMS-GW-MW048-03	95-49-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW048-03	95-50-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW048-03	95-63-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW048-03	96-12-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW048-03	96-18-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW048-03	98-06-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	ISOPROPYLBENZENE	CMS-GW-MW048-03	98-82-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW048-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW048-03	99-87-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J250362005	25-Oct-02	28-Oct-02	28-Oct-02

INSAMPLE	METHOD	MDL	IDL	CRDL_CRDL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW04B-03	8260B					1	100		2IN			
CMS-GW-MW04B-03	8260B					1	100		2IN			
CMS-GW-MW04B-03	8260B					1	100		2IN			
CMS-GW-MW04B-03	8260B					1	100		2IN			
CMS-GW-MW04B-03	8260B	0.072	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.067	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.22	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.069	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.16	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.25	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.084	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.14	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.32	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.21	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.078	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.2	1			1	100		2IN		17	
CMS-GW-MW04B-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.13	2			1	100		2IN		2U	
CMS-GW-MW04B-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.082	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.27	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.3	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.28	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.19	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.19	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.14	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.15	2			1	100		2IN		2U	
CMS-GW-MW04B-03	8260B	0.3	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.22	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.38	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.43	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.66	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.067	1			1	100		2IN		0.39J	
CMS-GW-MW04B-03	8260B	0.29	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.25	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.72	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.083	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.26	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.44	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.8	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.088	1			1	100		2IN		1U	
CMS-GW-MW04B-03	8260B	0.14	1			1	100		2IN		1U	

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW04S-03	OV	TOLUENE-D8	CMS-GW-MW04S-03	2037-28-5	92		PCT_REC		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1,2-DICHLOROETHANE-D4	CMS-GW-MW04S-03	17060-07-0	105		PCT_REC		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW04S-03	460-00-4	94		PCT_REC		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW04S-03	1868-53-7	93		PCT_REC		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	ETHYLBENZENE	CMS-GW-MW04S-03	100-41-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	STYRENE	CMS-GW-MW04S-03	100-42-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW04S-03	10061-01-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW04S-03	10061-02-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	N-PROPYLBENZENE	CMS-GW-MW04S-03	103-65-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	N-BUTYLBENZENE	CMS-GW-MW04S-03	104-61-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW04S-03	106-43-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW04S-03	106-46-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW04S-03	106-93-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW04S-03	107-06-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW04S-03	108-67-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	BROMOBENZENE	CMS-GW-MW04S-03	108-96-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TOLUENE	CMS-GW-MW04S-03	108-88-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CHLOROBENZENE	CMS-GW-MW04S-03	108-90-7	2.1		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW04S-03	120-82-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW04S-03	124-49-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TETRACHLOROETHENE	CMS-GW-MW04S-03	127-18-4	4.4		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW04S-03	136-98-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW04S-03	136777-61-2	2U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW04S-03	142-28-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW04S-03	156-59-2	5.9		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW04S-03	156-60-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW04S-03	541-73-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW04S-03	56-23-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW04S-03	563-69-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	2,3-DICHLOROPROPANE	CMS-GW-MW04S-03	594-20-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW04S-03	630-20-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CHLOROFORM	CMS-GW-MW04S-03	67-66-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	BENZENE	CMS-GW-MW04S-03	71-43-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW04S-03	71-55-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	BROMOMETHANE	CMS-GW-MW04S-03	74-83-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CHLOROMETHANE	CMS-GW-MW04S-03	74-87-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	DIBROMOMETHANE	CMS-GW-MW04S-03	74-95-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW04S-03	74-97-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	CHLOROETHANE	CMS-GW-MW04S-03	75-00-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	VINYL CHLORIDE	CMS-GW-MW04S-03	75-01-4	0.58		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW04S-03	75-09-2	2U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	BROMOFORM	CMS-GW-MW04S-03	75-25-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW04S-03	75-27-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW04S-03	75-34-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW04S-03	75-35-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW04S-03	75-69-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW04S-03	75-71-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW04S-03	78-67-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW04S-03	79-00-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TRICHLOROETHENE	CMS-GW-MW04S-03	79-01-6	3.2		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW04S-03	79-34-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW04S-03	87-61-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	HEXACHLOROBTADIENE	CMS-GW-MW04S-03	87-68-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	NAPHTHALENE	CMS-GW-MW04S-03	91-20-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	O-XYLENE	CMS-GW-MW04S-03	95-47-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW04S-03	95-49-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW04S-03	95-50-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW04S-03	95-63-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW04S-03	95-12-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW04S-03	95-18-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW04S-03	98-06-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW04S-03	98-82-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04S-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW04S-03	99-87-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362006	25-Oct-02	28-Oct-02	28-Oct-02

INSAMPLE	METHOD	MDL	IDL	CRDL_CROL	IDL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_OC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW04S-03	8260B				1	100		2N				
CMS-GW-MW04S-03	8260B				1	100		2N				
CMS-GW-MW04S-03	8260B				1	100		2N				
CMS-GW-MW04S-03	8260B				1	100		2N				
CMS-GW-MW04S-03	8260B	0.072	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.007	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.22	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.009	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.11	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.18	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.25	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.12	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.084	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.14	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.15	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.32	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.12	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.15	1		1	100		2N		2.1		
CMS-GW-MW04S-03	8260B	0.21	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.078	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.2	1		1	100		2N		4.4		
CMS-GW-MW04S-03	8260B	0.12	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.13	2		1	100		2N		2U		
CMS-GW-MW04S-03	8260B	0.17	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.38	1		1	100		2N		5.9		
CMS-GW-MW04S-03	8260B	0.31	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.11	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.31	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.2	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.17	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.17	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.082	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.27	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.3	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.28	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.19	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.19	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.2	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.14	1		1	100		2N		0.68U		
CMS-GW-MW04S-03	8260B	0.15	2		1	100		2N		2U		
CMS-GW-MW04S-03	8260B	0.3	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.22	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.36	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.43	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.66	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.15	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.087	1		1	100		2N		3.2		
CMS-GW-MW04S-03	8260B	0.29	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.25	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.72	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.31	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.083	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.26	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.11	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.044	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.5	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.38	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.088	1		1	100		2N		1U		
CMS-GW-MW04S-03	8260B	0.14	1		1	100		2N		1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW09S-03	OV	TOLUENE D8	CMS-GW-MW09S-03	2037-26-5	84		PCT_REC	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW09S-03	17060-07-0	91		PCT_REC	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW09S-03	480-00-4	98		PCT_REC	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW09S-03	1868-83-7	89		PCT_REC	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	ETHYLBENZENE	CMS-GW-MW09S-03	100-41-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	STYRENE	CMS-GW-MW09S-03	100-42-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW09S-03	10061-01-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW09S-03	10061-02-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	N-PROPYLBENZENE	CMS-GW-MW09S-03	103-65-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	N-BUTYLBENZENE	CMS-GW-MW09S-03	104-51-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW09S-03	106-43-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW09S-03	106-46-7	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW09S-03	106-93-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW09S-03	107-06-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW09S-03	108-67-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	BROMOBENZENE	CMS-GW-MW09S-03	108-86-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TOLUENE	CMS-GW-MW09S-03	108-88-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CHLOROBENZENE	CMS-GW-MW09S-03	108-90-7	3.4		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW09S-03	120-82-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW09S-03	124-48-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TETRACHLOROETHENE	CMS-GW-MW09S-03	127-18-4	3.3		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW09S-03	135-98-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW09S-03	136777-61-2	21U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW09S-03	142-26-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW09S-03	156-59-2	14		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW09S-03	156-60-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW09S-03	541-73-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW09S-03	56-23-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW09S-03	583-59-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	2,3-DICHLOROPROPANE	CMS-GW-MW09S-03	594-20-7	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW09S-03	630-20-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CHLOROFORM	CMS-GW-MW09S-03	67-66-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	BENZENE	CMS-GW-MW09S-03	71-43-2	9.7		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW09S-03	71-55-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	BROMOMETHANE	CMS-GW-MW09S-03	74-83-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CHLOROMETHANE	CMS-GW-MW09S-03	74-87-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	DIBROMOMETHANE	CMS-GW-MW09S-03	74-95-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW09S-03	74-97-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	CHLOROETHANE	CMS-GW-MW09S-03	75-00-3	0.47		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	VINYL CHLORIDE	CMS-GW-MW09S-03	75-01-4	14		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW09S-03	75-09-2	21U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	BROMOFORM	CMS-GW-MW09S-03	75-26-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW09S-03	75-27-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW09S-03	75-34-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW09S-03	75-35-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW09S-03	75-69-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW09S-03	75-71-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW09S-03	78-87-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW09S-03	79-00-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TRICHLOROETHENE	CMS-GW-MW09S-03	79-01-6	0.72		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW09S-03	79-34-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW09S-03	87-61-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW09S-03	87-66-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	NAPHTHALENE	CMS-GW-MW09S-03	91-20-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	O-XYLENE	CMS-GW-MW09S-03	95-47-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW09S-03	95-49-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW09S-03	95-50-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW09S-03	95-63-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW09S-03	96-12-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW09S-03	96-18-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW09S-03	98-06-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW09S-03	98-82-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-MW09S-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW09S-03	99-87-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J250362007		25-Oct-02	25-Oct-02	25-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRDL	DIL_FACTOR	PCT Moist	COMMENTS	DVTR	LAB	QC TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW09S-03	8260B					1	100		2N				
CMS-GW-MW09S-03	8260B					1	100		2N				
CMS-GW-MW09S-03	8260B					1	100		2N				
CMS-GW-MW09S-03	8260B					1	100		2N				
CMS-GW-MW09S-03	8260B	0.072	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.067	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.069	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.16	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.25	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.094	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.14	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.32	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.15	1			1	100		2N		3.4		
CMS-GW-MW09S-03	8260B	0.21	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.078	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.2	1			1	100		2N		3.3		
CMS-GW-MW09S-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.13	2			1	100		2N		2U		
CMS-GW-MW09S-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.36	1			1	100		2N		14		
CMS-GW-MW09S-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.082	1			1	100		2N		9.7		
CMS-GW-MW09S-03	8260B	0.27	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.28	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.2	1			1	100		2N		0.47J		
CMS-GW-MW09S-03	8260B	0.14	1			1	100		2N		14		
CMS-GW-MW09S-03	8260B	0.15	2			1	100		2N		2U		
CMS-GW-MW09S-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.43	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.56	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.067	1			1	100		2N		0.72J		
CMS-GW-MW09S-03	8260B	0.29	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.25	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.72	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.063	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.26	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.044	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.8	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.088	1			1	100		2N		1U		
CMS-GW-MW09S-03	8260B	0.14	1			1	100		2N		1U		

SAMPLE	CLASS	PARAMETER	EPAS/MNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW04D-03	OV	TOLUENE-D8	CMS-GW-MW04D-03	2037-26-5	95		PCT REC	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW04D-03	17060-07-0	89		PCT REC	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW04D-03	480-00-4	91		PCT REC	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW04D-03	1888-53-7	84		PCT REC	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	ETHYLBENZENE	CMS-GW-MW04D-03	100-41-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	STYRENE	CMS-GW-MW04D-03	100-42-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW04D-03	10061-01-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW04D-03	10061-02-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	N-PROPYLBENZENE	CMS-GW-MW04D-03	103-85-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	N-BUTYLBENZENE	CMS-GW-MW04D-03	104-51-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	4-CHLOROTOLUENE	CMS-GW-MW04D-03	106-43-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW04D-03	106-46-7	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW04D-03	106-93-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW04D-03	107-06-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW04D-03	108-67-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	BROMOBENZENE	CMS-GW-MW04D-03	108-95-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TOLUENE	CMS-GW-MW04D-03	108-88-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CHLOROBENZENE	CMS-GW-MW04D-03	108-90-7	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW04D-03	120-82-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	DIBROMODICHLOROMETHANE	CMS-GW-MW04D-03	124-48-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TETRACHLOROETHENE	CMS-GW-MW04D-03	127-18-4	27		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW04D-03	135-98-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW04D-03	136777-61-2	20		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW04D-03	142-28-9	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW04D-03	156-59-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW04D-03	156-60-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW04D-03	541-73-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW04D-03	56-23-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW04D-03	563-59-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW04D-03	594-20-7	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW04D-03	630-20-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CHLOROFORM	CMS-GW-MW04D-03	67-66-3	0.31		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	BENZENE	CMS-GW-MW04D-03	71-43-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW04D-03	71-55-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	BROMOMETHANE	CMS-GW-MW04D-03	74-83-9	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CHLOROMETHANE	CMS-GW-MW04D-03	74-87-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	DIBROMOMETHANE	CMS-GW-MW04D-03	74-95-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW04D-03	74-97-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	CHLOROETHANE	CMS-GW-MW04D-03	75-00-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	VINYL CHLORIDE	CMS-GW-MW04D-03	75-01-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	METHYLENE CHLORIDE	CMS-GW-MW04D-03	75-09-2	20		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	BROMOFORM	CMS-GW-MW04D-03	75-25-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW04D-03	75-27-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW04D-03	75-34-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW04D-03	75-35-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW04D-03	75-69-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW04D-03	75-71-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW04D-03	78-87-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW04D-03	79-00-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TRICHLOROETHENE	CMS-GW-MW04D-03	79-01-6	0.46		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW04D-03	79-34-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW04D-03	87-61-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW04D-03	87-68-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	NAPHTHALENE	CMS-GW-MW04D-03	91-20-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	O-XYLENE	CMS-GW-MW04D-03	95-47-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	2-CHLOROTOLUENE	CMS-GW-MW04D-03	95-49-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW04D-03	95-50-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW04D-03	95-89-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW04D-03	96-12-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW04D-03	96-18-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW04D-03	88-06-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	ISOPROPYLBENZENE	CMS-GW-MW04D-03	98-82-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW04D-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW04D-03	99-87-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362008		25-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	IDL_FACTOR	PCT_MOIST	COMMENTS	DVTRIER	LAB_QC_TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
CMS-GW-MW04D-03	8260B						1	100		2N			
CMS-GW-MW04D-03	8260B						1	100		2N			
CMS-GW-MW04D-03	8260B						1	100		2N			
CMS-GW-MW04D-03	8260B						1	100		2N			
CMS-GW-MW04D-03	8260B	0.072	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.067	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.22	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.089	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.11	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.18	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.25	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.12	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.084	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.14	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.15	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.32	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.12	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.15	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.21	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.078	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.2	1				1	100		2N		2U	
CMS-GW-MW04D-03	8260B	0.12	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.13	2				1	100		2N		2U	
CMS-GW-MW04D-03	8260B	0.17	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.38	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.31	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.11	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.31	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.13	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.2	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.17	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.17	1				1	100		2N		0.31U	
CMS-GW-MW04D-03	8260B	0.082	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.27	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.3	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.28	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.19	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.19	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.2	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.14	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.15	2				1	100		2N		2U	
CMS-GW-MW04D-03	8260B	0.3	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.13	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.22	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.36	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.43	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.66	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.15	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.13	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.087	1				1	100		2N		0.46U	
CMS-GW-MW04D-03	8260B	0.29	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.25	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.72	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.31	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.083	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.26	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.11	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.044	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.8	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.38	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.13	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.088	1				1	100		2N		1U	
CMS-GW-MW04D-03	8260B	0.14	1				1	100		2N		1U	

RSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW02D-03	OV	TOLUENE-D8	CMS-GW-MW02D-03	2037-26-5	95		PCT_REC	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2-DICHLOROETHANE D4	CMS-GW-MW02D-03	17080-07-0	108		PCT_REC	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW02D-03	480-00-4	96		PCT_REC	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW02D-03	1868-53-7	99		PCT_REC	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	ETHYLBENZENE	CMS-GW-MW02D-03	100-41-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	STYRENE	CMS-GW-MW02D-03	100-42-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW02D-03	10061-01-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW02D-03	10061-02-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	N-PROPYLBENZENE	CMS-GW-MW02D-03	103-65-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	N-BUTYLBENZENE	CMS-GW-MW02D-03	104-51-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	4-CHLOROTOLUENE	CMS-GW-MW02D-03	105-43-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW02D-03	106-46-7	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW02D-03	106-93-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW02D-03	107-06-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW02D-03	108-67-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	BROMOBENZENE	CMS-GW-MW02D-03	108-86-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TOLUENE	CMS-GW-MW02D-03	108-88-3	1.8U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CHLOROBENZENE	CMS-GW-MW02D-03	108-90-7	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW02D-03	120-82-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW02D-03	124-48-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TETRACHLOROETHENE	CMS-GW-MW02D-03	127-18-4	73		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW02D-03	135-98-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW02D-03	136777-61-2	8U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW02D-03	142-28-9	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW02D-03	156-59-2	12		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW02D-03	156-60-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW02D-03	541-73-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW02D-03	56-23-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW02D-03	563-58-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW02D-03	594-20-7	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW02D-03	630-20-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CHLOROFORM	CMS-GW-MW02D-03	67-66-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	BENZENE	CMS-GW-MW02D-03	71-43-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW02D-03	71-55-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	BROMOMETHANE	CMS-GW-MW02D-03	74-83-9	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CHLOROMETHANE	CMS-GW-MW02D-03	74-87-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	DIBROMOMETHANE	CMS-GW-MW02D-03	74-95-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW02D-03	74-97-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	CHLOROETHANE	CMS-GW-MW02D-03	75-00-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	VINYL CHLORIDE	CMS-GW-MW02D-03	75-01-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	METHYLENE CHLORIDE	CMS-GW-MW02D-03	75-09-2	1.9U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	BROMOFORM	CMS-GW-MW02D-03	75-25-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW02D-03	75-27-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW02D-03	75-34-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW02D-03	75-35-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW02D-03	75-69-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW02D-03	75-71-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW02D-03	78-87-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW02D-03	79-00-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TRICHLOROETHENE	CMS-GW-MW02D-03	79-01-6	4.2		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW02D-03	79-34-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW02D-03	87-61-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW02D-03	87-68-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	NAPHTHALENE	CMS-GW-MW02D-03	91-20-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	O-XYLENE	CMS-GW-MW02D-03	95-47-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	2-CHLOROTOLUENE	CMS-GW-MW02D-03	95-49-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW02D-03	95-50-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW02D-03	95-63-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW02D-03	96-12-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW02D-03	96-18-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW02D-03	98-06-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	ISOPROPYLBENZENE	CMS-GW-MW02D-03	98-82-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW02D-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW02D-03	99-87-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362009	C2J250362009	25-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CHDL	DIL FACTOR	PCT MOST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW02D-03	8260B						4	100		2IN			
CMS-GW-MW02D-03	8260B						4	100		2IN			
CMS-GW-MW02D-03	8260B						4	100		2IN			
CMS-GW-MW02D-03	8260B						4	100		2IN			
CMS-GW-MW02D-03	8260B	0.29	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.27	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.89	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.28	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.42	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.63	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.5	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.33	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.56	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.61	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.3	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.5	4				4	100		2IN	1.8IU		
CMS-GW-MW02D-03	8260B	0.6	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.82	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.31	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.78	4				4	100		2IN	79		
CMS-GW-MW02D-03	8260B	0.47	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.51	4				4	100		2IN	8IU		
CMS-GW-MW02D-03	8260B	0.66	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.5	4				4	100		2IN	12		
CMS-GW-MW02D-03	8260B	1.3	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.46	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.2	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.51	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.82	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.69	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.60	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.33	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.1	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.2	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.1	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.77	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.77	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.79	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.57	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.59	4				4	100		2IN	1.9IU		
CMS-GW-MW02D-03	8260B	1.2	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.54	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.86	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.5	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.7	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	2.6	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.69	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.53	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.35	4				4	100		2IN	4.2		
CMS-GW-MW02D-03	8260B	1.2	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	2.9	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.3	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.33	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.45	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.18	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	3.2	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	1.6	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.52	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.35	4				4	100		2IN	4IU		
CMS-GW-MW02D-03	8260B	0.56	4				4	100		2IN	4IU		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW02M-03	OV	TOLUENE-D8	CMS-GW-MW02M-03	2037-26-5	96		PCT REC	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW02M-03	17060-07-0	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW02M-03	460-00-4	96		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW02M-03	1868-53-7	95		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	ETHYLBENZENE	CMS-GW-MW02M-03	100-41-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	STYRENE	CMS-GW-MW02M-03	100-42-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW02M-03	10061-01-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW02M-03	10061-02-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	N-PROPYLBENZENE	CMS-GW-MW02M-03	103-65-1	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	N-BUTYLBENZENE	CMS-GW-MW02M-03	104-51-8	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	4-CHLOROTOLUENE	CMS-GW-MW02M-03	106-43-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW02M-03	106-48-7	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW02M-03	106-93-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW02M-03	107-06-2	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW02M-03	108-67-8	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	BROMOBENZENE	CMS-GW-MW02M-03	108-96-1	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TOLUENE	CMS-GW-MW02M-03	108-88-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CHLOROBENZENE	CMS-GW-MW02M-03	108-90-7	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW02M-03	120-82-1	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW02M-03	124-48-1	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TETRACHLOROETHENE	CMS-GW-MW02M-03	127-18-4	110		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW02M-03	135-98-8	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW02M-03	136777-81-2	10 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW02M-03	142-28-9	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW02M-03	156-59-2	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW02M-03	156-60-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW02M-03	541-73-1	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW02M-03	56-23-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW02M-03	563-28-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	2,3-DICHLOROPROPANE	CMS-GW-MW02M-03	594-20-7	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW02M-03	630-20-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CHLOROFORM	CMS-GW-MW02M-03	67-68-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	BENZENE	CMS-GW-MW02M-03	71-43-2	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW02M-03	71-55-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	BROMOMETHANE	CMS-GW-MW02M-03	74-83-9	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CHLOROMETHANE	CMS-GW-MW02M-03	74-87-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	DIBROMOMETHANE	CMS-GW-MW02M-03	74-95-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW02M-03	74-97-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	CHLOROETHANE	CMS-GW-MW02M-03	75-00-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	VINYL CHLORIDE	CMS-GW-MW02M-03	75-01-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	METHYLENE CHLORIDE	CMS-GW-MW02M-03	75-09-2	10 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	BROMOFORM	CMS-GW-MW02M-03	75-25-2	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW02M-03	75-27-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW02M-03	75-34-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW02M-03	75-35-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW02M-03	75-60-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW02M-03	75-71-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW02M-03	78-87-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW02M-03	79-00-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TRICHLOROETHENE	CMS-GW-MW02M-03	79-01-8	1.1 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW02M-03	79-34-5	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW02M-03	87-61-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW02M-03	87-68-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	NAPHTHALENE	CMS-GW-MW02M-03	91-20-3	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	O-XYLENE	CMS-GW-MW02M-03	95-47-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	2-CHLOROTOLUENE	CMS-GW-MW02M-03	95-49-8	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW02M-03	95-50-1	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW02M-03	95-63-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW02M-03	96-12-8	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW02M-03	96-18-4	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW02M-03	98-06-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	ISOPROPYLBENZENE	CMS-GW-MW02M-03	98-82-8	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW02M-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW02M-03	99-87-6	5 U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362010	25-Oct-02	28-Oct-02	28-Oct-02	

INSAMPLE	METHOD	MDL	IDL	CRDL	CRDL	DIL FACTOR	PCY	MOIST	COMMENTS	IDVIER	LAB QC	QC TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
CMS-GW-MW02M-03	8260B						5	100				2N			
CMS-GW-MW02M-03	8260B						5	100				2N			
CMS-GW-MW02M-03	8260B						5	100				2N			
CMS-GW-MW02M-03	8260B						5	100				2N			
CMS-GW-MW02M-03	8260B	0.36	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.33	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.1	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.36	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.53	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.78	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.3	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.62	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.42	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.7	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.77	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.6	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.62	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.75	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.39	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.66	5				5	100				2N		110	
CMS-GW-MW02M-03	8260B	0.59	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.64	10				5	100				2N		10IU	
CMS-GW-MW02M-03	8260B	0.64	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.9	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.6	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.66	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.6	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.64	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.87	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.65	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.41	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.3	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.5	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.4	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.96	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.98	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.99	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.71	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.73	10				5	100				2N		10IU	
CMS-GW-MW02M-03	8260B	1.5	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.67	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.1	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.9	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	2.1	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	3.3	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.74	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.88	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.43	5				5	100				2N		1.1IU	
CMS-GW-MW02M-03	8260B	1.5	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.3	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	3.6	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.6	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.42	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.3	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.56	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.22	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	4	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	1.9	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.65	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.44	5				5	100				2N		5IU	
CMS-GW-MW02M-03	8260B	0.7	5				5	100				2N		5IU	

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW025-03	OV	TOLUENE-06	CMS-GW-MW025-03	2037-26-5	100		PCT_REC	C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2-DICHLOROETHANE-04	CMS-GW-MW025-03	17060-07-0	96		PCT_REC	C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW025-03	480-00-4	99		PCT_REC	C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW025-03	1868-93-7	95		PCT_REC	C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	ETHYLBENZENE	CMS-GW-MW025-03	100-41-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	STYRENE	CMS-GW-MW025-03	100-42-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW025-03	10061-01-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW025-03	10061-02-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	N-PROPYLBENZENE	CMS-GW-MW025-03	103-65-1	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	N-BUTYLBENZENE	CMS-GW-MW025-03	104-51-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	4-CHLOROTOLUENE	CMS-GW-MW025-03	106-43-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW025-03	106-46-7	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW025-03	106-93-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW025-03	107-06-2	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW025-03	108-87-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	BROMOBENZENE	CMS-GW-MW025-03	108-86-1	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TOLUENE	CMS-GW-MW025-03	108-88-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CHLOROBENZENE	CMS-GW-MW025-03	108-90-7	21	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW025-03	120-82-1	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW025-03	124-49-1	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TETRACHLOROETHENE	CMS-GW-MW025-03	127-18-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW025-03	135-98-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW025-03	136777-61-2	20	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW025-03	142-28-9	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW025-03	156-59-2	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW025-03	156-60-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW025-03	541-73-1	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW025-03	56-23-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW025-03	583-59-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW025-03	594-20-7	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW025-03	630-20-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CHLOROFORM	CMS-GW-MW025-03	67-66-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	BENZENE	CMS-GW-MW025-03	71-43-2	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW025-03	71-55-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	BROMOMETHANE	CMS-GW-MW025-03	74-83-9	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CHLOROMETHANE	CMS-GW-MW025-03	74-87-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	DIBROMOMETHANE	CMS-GW-MW025-03	74-95-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW025-03	74-97-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	CHLOROETHANE	CMS-GW-MW025-03	75-06-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	VINYL CHLORIDE	CMS-GW-MW025-03	75-01-4	0.63	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	METHYLENE CHLORIDE	CMS-GW-MW025-03	75-09-2	20	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	BROMOFORM	CMS-GW-MW025-03	75-25-2	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW025-03	75-27-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW025-03	75-34-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW025-03	75-35-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW025-03	75-69-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW025-03	75-71-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW025-03	78-87-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW025-03	79-00-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TRICHLOROETHENE	CMS-GW-MW025-03	79-01-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW025-03	79-34-5	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW025-03	87-61-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW025-03	87-68-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	NAPHTHALENE	CMS-GW-MW025-03	91-20-3	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	O-XYLENE	CMS-GW-MW025-03	95-47-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	2-CHLOROTOLUENE	CMS-GW-MW025-03	95-49-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW025-03	95-50-1	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW025-03	95-63-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW025-03	96-12-8	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW025-03	96-18-4	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW025-03	98-06-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	ISOPROPYLBENZENE	CMS-GW-MW025-03	98-82-9	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW025-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW025-03	99-87-6	10	UG/L		C2J250362	STL Pittsburgh	C2J250362011	25-Oct-02	28-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	IDL_FACTOR	PCT_MOIST	COMMENTS	DUVIER	LAB	QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW02S-03	8260B					1	100			2N			
CMS-GW-MW02S-03	8260B					1	100			2N			
CMS-GW-MW02S-03	8260B					1	100			2N			
CMS-GW-MW02S-03	8260B					1	100			2N			
CMS-GW-MW02S-03	8260B	0.072	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.067	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.22	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.069	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.11	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.16	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.25	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.12	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.084	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.14	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.15	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.32	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.12	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.15	1			1	100			2N	2.1		
CMS-GW-MW02S-03	8260B	0.21	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.078	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.2	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.12	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.13	2			1	100			2N	2U		
CMS-GW-MW02S-03	8260B	0.17	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.38	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.31	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.11	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.31	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.13	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.2	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.17	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.17	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.082	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.27	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.3	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.28	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.19	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.18	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.2	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.14	1			1	100			2N	0.69U		
CMS-GW-MW02S-03	8260B	0.15	2			1	100			2N	2U		
CMS-GW-MW02S-03	8260B	0.3	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.13	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.22	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.36	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.43	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.66	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.15	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.13	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.087	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.29	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.25	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.72	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.31	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.083	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.26	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.11	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.044	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.5	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.36	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.13	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.088	1			1	100			2N	1U		
CMS-GW-MW02S-03	8260B	0.14	1			1	100			2N	1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW135-03	OV	TOLUENE-D8	CMS-GW-MW135-03	2037-26-5	96	PCT_REC			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW135-03	17060-67-0	90	PCT_REC			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW135-03	480-00-4	97	PCT_REC			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW135-03	1868-53-7	96	PCT_REC			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	ETHYLBENZENE	CMS-GW-MW135-03	100-41-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	STYRENE	CMS-GW-MW135-03	100-42-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW135-03	10061-01-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW135-03	10061-02-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	N-PROPYLBENZENE	CMS-GW-MW135-03	103-65-1	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	N-BUTYLBENZENE	CMS-GW-MW135-03	104-61-8	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	4-CHLOROTOLUENE	CMS-GW-MW135-03	106-43-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW135-03	106-46-7	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW135-03	106-93-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW135-03	107-06-2	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW135-03	108-67-8	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	BROMOBENZENE	CMS-GW-MW135-03	108-96-1	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	TOLUENE	CMS-GW-MW135-03	108-88-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CHLOROBENZENE	CMS-GW-MW135-03	108-90-7	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW135-03	120-82-1	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW135-03	124-45-1	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	TETRACHLOROETHENE	CMS-GW-MW135-03	127-18-4	77	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW135-03	135-98-8	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW135-03	136777-61-2	2U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW135-03	142-28-9	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW135-03	156-59-2	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW135-03	156-60-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW135-03	541-73-1	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW135-03	56-23-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW135-03	563-69-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW135-03	594-20-7	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW135-03	630-20-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CHLOROFORM	CMS-GW-MW135-03	67-66-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	BENZENE	CMS-GW-MW135-03	71-43-2	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW135-03	71-55-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	BROMOMETHANE	CMS-GW-MW135-03	74-83-9	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CHLOROMETHANE	CMS-GW-MW135-03	74-87-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	DIBROMOMETHANE	CMS-GW-MW135-03	74-95-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW135-03	74-97-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	CHLOROETHANE	CMS-GW-MW135-03	75-00-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	VINYL CHLORIDE	CMS-GW-MW135-03	75-01-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	METHYLENE CHLORIDE	CMS-GW-MW135-03	75-09-2	2U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	BROMOFORM	CMS-GW-MW135-03	75-25-2	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW135-03	75-27-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW135-03	75-34-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW135-03	75-35-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW135-03	75-69-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW135-03	75-71-8	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW135-03	78-67-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW135-03	79-00-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	TRICHLOROETHENE	CMS-GW-MW135-03	79-01-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW135-03	79-34-5	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW135-03	87-61-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW135-03	87-69-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	NAPHTHALENE	CMS-GW-MW135-03	91-20-3	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	O-XYLENE	CMS-GW-MW135-03	95-47-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	2-CHLOROTOLUENE	CMS-GW-MW135-03	95-49-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW135-03	95-50-1	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW135-03	95-63-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW135-03	96-12-8	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW135-03	96-18-4	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	1,1,1-TRICHLOROBENZENE	CMS-GW-MW135-03	96-06-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	ISOPROPYLBENZENE	CMS-GW-MW135-03	98-82-8	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW135-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW135-03	99-87-6	1U	UG/L			C2J250362	STL Pittsburgh	C2J250362012	25-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	IDL_FACTOR	PCT_MOIST	COMMENTS	IDVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW135-03	8260B					1	100		2	N			
CMS-GW-MW135-03	8260B					1	100		2	N			
CMS-GW-MW135-03	8260B					1	100		2	N			
CMS-GW-MW135-03	8260B					1	100		2	N			
CMS-GW-MW135-03	8260B	0.072	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.067	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.22	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.069	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.11	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.16	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.25	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.12	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.084	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.14	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.15	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.32	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.12	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.15	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.21	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.078	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.2	1			1	100		2	N	7.7		
CMS-GW-MW135-03	8260B	0.12	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.13	2			1	100		2	N		2U	
CMS-GW-MW135-03	8260B	0.17	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.38	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.31	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.11	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.31	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.13	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.2	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.17	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.17	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.082	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.27	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.3	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.28	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.19	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.18	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.2	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.14	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.15	2			1	100		2	N		2U	
CMS-GW-MW135-03	8260B	0.3	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.13	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.22	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.38	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.43	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.68	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.15	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.13	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.087	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.29	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.25	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.72	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.31	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.083	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.26	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.11	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.044	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.8	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.38	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.13	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.088	1			1	100		2	N		1U	
CMS-GW-MW135-03	8260B	0.14	1			1	100		2	N		1U	

NSAMPLE	CLASS	PARAMETER	EPAS/MNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SQG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW138-03	OV	TOLUENE-D8	CMS-GW-MW138-03	2007-26-5	96		PCT REC	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW138-03	17060-07-0	119		PCT REC	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW138-03	480-00-4	103		PCT REC	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW138-03	1868-53-7	99		PCT REC	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	ETHYLBENZENE	CMS-GW-MW138-03	100-41-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	STYRENE	CMS-GW-MW138-03	100-42-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW138-03	10061-01-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW138-03	10061-02-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	N-PROPYLBENZENE	CMS-GW-MW138-03	103-55-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	N-BUTYLBENZENE	CMS-GW-MW138-03	104-51-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	4-CHLOROTOLUENE	CMS-GW-MW138-03	105-43-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW138-03	106-46-7	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW138-03	106-93-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW138-03	107-06-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW138-03	108-67-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	BROMOBENZENE	CMS-GW-MW138-03	108-96-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TOLUENE	CMS-GW-MW138-03	106-96-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CHLOROBENZENE	CMS-GW-MW138-03	108-90-7	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW138-03	120-82-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW138-03	124-48-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TETRACHLOROETHENE	CMS-GW-MW138-03	127-18-4	96		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW138-03	135-98-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	M XYLENE & P XYLENE	CMS-GW-MW138-03	136777-61-2	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW138-03	142-28-9	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW138-03	156-59-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW138-03	156-60-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW138-03	154-73-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW138-03	56-23-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW138-03	563-58-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW138-03	584-20-7	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW138-03	630-20-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CHLOROFORM	CMS-GW-MW138-03	67-66-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	BENZENE	CMS-GW-MW138-03	71-43-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW138-03	71-55-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	BROMOMETHANE	CMS-GW-MW138-03	74-83-9	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CHLOROMETHANE	CMS-GW-MW138-03	74-87-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	DIBROMOMETHANE	CMS-GW-MW138-03	74-95-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW138-03	74-97-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	CHLOROETHANE	CMS-GW-MW138-03	75-00-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	VINYL CHLORIDE	CMS-GW-MW138-03	75-01-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	METHYLENE CHLORIDE	CMS-GW-MW138-03	75-09-2	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	BROMOFORM	CMS-GW-MW138-03	75-25-2	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW138-03	75-27-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW138-03	75-34-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW138-03	75-35-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW138-03	75-69-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	DICHLOROFLUOROMETHANE	CMS-GW-MW138-03	75-71-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW138-03	75-87-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW138-03	78-00-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TRICHLOROETHENE	CMS-GW-MW138-03	79-01-6	5U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW138-03	79-34-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW138-03	87-61-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW138-03	87-68-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	NAPHTHALENE	CMS-GW-MW138-03	91-20-3	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	O-XYLENE	CMS-GW-MW138-03	95-47-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	2-CHLOROTOLUENE	CMS-GW-MW138-03	95-49-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW138-03	95-50-1	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW138-03	95-63-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW138-03	95-12-8	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW138-03	96-16-4	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW138-03	98-06-5	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	ISOPROPYLBENZENE	CMS-GW-MW138-03	98-82-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW138-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW138-03	99-87-6	4U		UG/L	C2J250362	STL Pittsburgh	C2J250362013	25-Oct-02	29-Oct-02	29-Oct-02	29-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDI_CROL	IDL_FACTOR	PCT_MOIST	COMMENTS	DVTRIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW13B-03	8260B				4	100			2IN			
CMS-GW-MW13B-03	8260B				4	100			2IN			
CMS-GW-MW13B-03	8260B				4	100			2IN			
CMS-GW-MW13B-03	8260B				4	100			2IN			
CMS-GW-MW13B-03	8260B	0.29	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.27	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.89	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.28	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.42	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.63	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.6	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.33	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.66	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.61	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.3	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.5	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.6	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.82	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.31	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.78	4		4	100			2IN	96		
CMS-GW-MW13B-03	8260B	0.47	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.51	8		4	100			2IN	8U		
CMS-GW-MW13B-03	8260B	0.68	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.5	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.3	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.46	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.2	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.51	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.82	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.69	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.68	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.33	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.1	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.2	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.1	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.77	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.77	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.79	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.57	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.59	8		4	100			2IN	8U		
CMS-GW-MW13B-03	8260B	1.2	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.54	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.66	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.5	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.7	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	2.8	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.59	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.53	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.35	4		4	100			2IN	5		
CMS-GW-MW13B-03	8260B	1.2	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	2.9	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.3	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.33	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.45	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.18	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	3.2	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	1.5	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.62	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.35	4		4	100			2IN	4U		
CMS-GW-MW13B-03	8260B	0.56	4		4	100			2IN	4U		

SAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW13D-03	OV	TOLUENE-D8	CMS-GW-MW13D-03	2037-26-5	96	PCT_REC		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW13D-03	17060-07-0	91	PCT_REC		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW13D-03	460-00-4	96	PCT_REC		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW13D-03	1866-53-7	89	PCT_REC		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	ETHYLBENZENE	CMS-GW-MW13D-03	100-41-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	STYRENE	CMS-GW-MW13D-03	100-42-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW13D-03	10061-01-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW13D-03	10061-02-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	N-PROPYLBENZENE	CMS-GW-MW13D-03	103-65-1	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	N-BUTYLBENZENE	CMS-GW-MW13D-03	104-51-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	4-CHLOROTOLUENE	CMS-GW-MW13D-03	106-43-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW13D-03	106-46-7	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW13D-03	106-93-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW13D-03	107-06-2	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW13D-03	108-67-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	BROMOBENZENE	CMS-GW-MW13D-03	108-96-1	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TOLUENE	CMS-GW-MW13D-03	108-98-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CHLOROBENZENE	CMS-GW-MW13D-03	108-90-7	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW13D-03	120-82-1	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW13D-03	124-48-1	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TETRACHLOROETHENE	CMS-GW-MW13D-03	127-18-4	220 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW13D-03	135-98-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW13D-03	136777-81-2	20 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW13D-03	142-28-9	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW13D-03	156-59-2	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW13D-03	156-60-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW13D-03	541-73-1	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW13D-03	56-23-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW13D-03	583-58-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW13D-03	594-20-7	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW13D-03	630-20-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CHLOROFORM	CMS-GW-MW13D-03	67-66-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	BENZENE	CMS-GW-MW13D-03	71-43-2	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW13D-03	71-55-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	BROMOMETHANE	CMS-GW-MW13D-03	74-83-9	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CHLOROMETHANE	CMS-GW-MW13D-03	74-87-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	DIBROMOMETHANE	CMS-GW-MW13D-03	74-95-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW13D-03	74-97-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	CHLOROETHANE	CMS-GW-MW13D-03	75-00-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	VINYL CHLORIDE	CMS-GW-MW13D-03	75-01-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	METHYLENE CHLORIDE	CMS-GW-MW13D-03	75-09-2	20 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	BROMOFORM	CMS-GW-MW13D-03	75-25-2	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW13D-03	75-27-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW13D-03	75-34-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW13D-03	75-35-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW13D-03	75-69-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	DICHLOROFLUOROMETHANE	CMS-GW-MW13D-03	75-71-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW13D-03	78-87-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW13D-03	79-00-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TRICHOETHENE	CMS-GW-MW13D-03	79-01-6	5.2 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW13D-03	79-34-5	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW13D-03	87-61-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW13D-03	87-68-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	NAPHTHALENE	CMS-GW-MW13D-03	91-20-3	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	O-XYLENE	CMS-GW-MW13D-03	95-47-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	2-CHLOROTOLUENE	CMS-GW-MW13D-03	95-49-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW13D-03	95-50-1	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW13D-03	95-63-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW13D-03	95-12-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW13D-03	96-18-4	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW13D-03	98-06-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	ISOPROPYLBENZENE	CMS-GW-MW13D-03	98-82-8	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW13D-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW13D-03	99-87-6	10 U	UG/L		C2J250362	STL Pittsburgh	C2J250362014	25-Oct-02	28-Oct-02	28-Oct-02	

INISAMPLE	METHOD	MDL	IDL	CRDL	CRQL	DIL FACTOR	PCT_MOIST	COMMENTS	DVTRIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW13D-03	8260B					10	100			2N			
CMS-GW-MW13D-03	8260B					10	100			2N			
CMS-GW-MW13D-03	8260B					10	100			2N			
CMS-GW-MW13D-03	8260B					10	100			2N			
CMS-GW-MW13D-03	8260B	0.72	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.57	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.69	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.5	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.5	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.94	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.4	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.5	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.5	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.78	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2	10			10	100			2N	225		
CMS-GW-MW13D-03	8260B	1.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.3	20			10	100			2N	20IU		
CMS-GW-MW13D-03	8260B	1.7	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.8	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.7	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.7	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.82	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.7	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.8	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.9	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.9	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.4	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.5	20			10	100			2N	20IU		
CMS-GW-MW13D-03	8260B	3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.6	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	4.3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	6.6	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.5	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.87	10			10	100			2N	5.2IU		
CMS-GW-MW13D-03	8260B	2.9	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.5	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	7.2	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.93	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	2.6	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.1	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.44	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	8	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	3.8	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.3	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	0.88	10			10	100			2N	10IU		
CMS-GW-MW13D-03	8260B	1.4	10			10	100			2N	10IU		

IN SAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW14M-03	OV	TOLUENE-D6	CMS-GW-MW14M-03	2037-26-5	94		PCT_REC		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW14M-03	17060-07-0	120		PCT_REC		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW14M-03	460-00-4	95		PCT_REC		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW14M-03	1868-53-7	100		PCT_REC		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	ETHYLBENZENE	CMS-GW-MW14M-03	100-41-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	STYRENE	CMS-GW-MW14M-03	100-42-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW14M-03	10061-01-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW14M-03	10061-02-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	N-PROPYLBENZENE	CMS-GW-MW14M-03	103-65-1	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	N-BUTYLBENZENE	CMS-GW-MW14M-03	104-51-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	4-CHLOROTOLUENE	CMS-GW-MW14M-03	106-43-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW14M-03	106-46-7	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW14M-03	106-93-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW14M-03	107-06-2	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW14M-03	108-67-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	BROMOBENZENE	CMS-GW-MW14M-03	108-96-1	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TOLUENE	CMS-GW-MW14M-03	108-88-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CHLOROBENZENE	CMS-GW-MW14M-03	108-90-7	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW14M-03	120-82-1	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW14M-03	124-48-1	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TETRACHLOROETHENE	CMS-GW-MW14M-03	127-18-4	1900		UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW14M-03	135-98-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW14M-03	136777-61-2	200	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW14M-03	142-28-9	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW14M-03	156-59-2	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW14M-03	156-60-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW14M-03	541-73-1	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW14M-03	56-23-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW14M-03	593-59-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW14M-03	594-20-7	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW14M-03	630-20-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CHLOROPHORM	CMS-GW-MW14M-03	67-66-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	BENZENE	CMS-GW-MW14M-03	71-43-2	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW14M-03	71-55-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	BROMOMETHANE	CMS-GW-MW14M-03	74-83-9	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CHLOROMETHANE	CMS-GW-MW14M-03	74-87-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	DIBROMOMETHANE	CMS-GW-MW14M-03	74-95-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW14M-03	74-97-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	CHLOROETHANE	CMS-GW-MW14M-03	75-00-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	VINYL CHLORIDE	CMS-GW-MW14M-03	75-01-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	METHYLENE CHLORIDE	CMS-GW-MW14M-03	75-09-2	200	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	BROMOPHORM	CMS-GW-MW14M-03	75-25-2	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW14M-03	75-27-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW14M-03	75-34-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW14M-03	75-35-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW14M-03	76-69-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW14M-03	75-71-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW14M-03	78-57-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW14M-03	79-00-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TRICHLOROETHENE	CMS-GW-MW14M-03	79-01-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW14M-03	79-34-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW14M-03	87-61-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW14M-03	87-68-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	NAPHTHALENE	CMS-GW-MW14M-03	91-20-3	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	O-XYLENE	CMS-GW-MW14M-03	95-47-5	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	2-CHLOROTOLUENE	CMS-GW-MW14M-03	95-49-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW14M-03	95-50-1	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW14M-03	95-63-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW14M-03	96-12-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW14M-03	96-18-4	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW14M-03	98-06-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	ISOPROPYLBENZENE	CMS-GW-MW14M-03	98-82-8	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW14M-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW14M-03	99-87-6	100	U	UG/L		C2J250362	STL Pittsburgh	C2J250362015	25-Oct-02	29-Oct-02	29-Oct-02

INSAMPLE	METHOD	MDL	IDL	CRDL_CRDL	DIL_FACTOR	PCT_MOST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW14M-03	8260B				100	100			2N			
CMS-GW-MW14M-03	8260B				100	100			2N			
CMS-GW-MW14M-03	8260B				100	100			2N			
CMS-GW-MW14M-03	8260B				100	100			2N			
CMS-GW-MW14M-03	8260B	7.2	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	6.7	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	22	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	6.9	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	11	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	16	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	25	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	12	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	8.4	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	14	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	15	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	32	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	12	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	15	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	21	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	7.8	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	20	100		100	100			2N	1900		
CMS-GW-MW14M-03	8260B	12	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	13	200		100	100			2N	200U		
CMS-GW-MW14M-03	8260B	17	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	36	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	31	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	11	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	31	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	13	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	20	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	17	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	17	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	8.2	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	27	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	30	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	28	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	19	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	19	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	20	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	14	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	15	200		100	100			2N	200U		
CMS-GW-MW14M-03	8260B	30	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	13	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	22	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	36	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	43	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	66	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	15	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	13	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	8.7	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	29	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	25	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	72	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	31	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	6.3	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	26	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	11	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	4.4	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	60	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	38	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	13	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	8.8	100		100	100			2N	100U		
CMS-GW-MW14M-03	8260B	14	100		100	100			2N	100U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-GE03-03	OV	TOLUENE-D8	CMS-GW-GE03-03	2037-26-5	95		PCT_REC			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-GE03-03	17060-07-0	108		PCT_REC			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GE03-03	460-00-4	96		PCT_REC			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-GE03-03	1868-53-7	99		PCT_REC			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	ETHYLBENZENE	CMS-GW-GE03-03	100-41-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	STYRENE	CMS-GW-GE03-03	100-42-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GE03-03	10061-01-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GE03-03	10061-02-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	N-PROPYLBENZENE	CMS-GW-GE03-03	103-65-1	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	N-BUTYLBENZENE	CMS-GW-GE03-03	104-51-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	4-CHLOROTOLUENE	CMS-GW-GE03-03	106-43-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GE03-03	106-46-7	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2-DIBROMOETHANE	CMS-GW-GE03-03	106-93-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROETHANE	CMS-GW-GE03-03	107-06-2	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GE03-03	108-87-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	BROMOBENZENE	CMS-GW-GE03-03	108-88-1	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TOLUENE	CMS-GW-GE03-03	108-88-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CHLOROBENZENE	CMS-GW-GE03-03	108-90-7	1.5		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GE03-03	120-82-1	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-GE03-03	124-48-1	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TETRACHLOROETHENE	CMS-GW-GE03-03	127-18-4	11		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	SEC-BUTYLBENZENE	CMS-GW-GE03-03	135-98-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GE03-03	136777-61-2	21U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GE03-03	142-28-9	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GE03-03	156-58-2	5.6		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GE03-03	156-60-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GE03-03	541-73-1	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CARBON TETRACHLORIDE	CMS-GW-GE03-03	56-23-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1-DICHLOROPROPENE	CMS-GW-GE03-03	563-68-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	2,2-DICHLOROPROPANE	CMS-GW-GE03-03	594-20-7	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GE03-03	630-20-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CHLOROFORM	CMS-GW-GE03-03	67-66-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	BENZENE	CMS-GW-GE03-03	71-43-2	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GE03-03	71-55-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	BROMOMETHANE	CMS-GW-GE03-03	74-83-9	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CHLOROMETHANE	CMS-GW-GE03-03	74-87-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	DIBROMOMETHANE	CMS-GW-GE03-03	74-95-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	BROMOCHLOROMETHANE	CMS-GW-GE03-03	74-97-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	CHLOROETHANE	CMS-GW-GE03-03	75-00-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	VINYL CHLORIDE	CMS-GW-GE03-03	75-01-4	0.39U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	METHYLENE CHLORIDE	CMS-GW-GE03-03	75-09-2	21U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	BROMOFORM	CMS-GW-GE03-03	75-26-2	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	BROMODICHLOROMETHANE	CMS-GW-GE03-03	75-27-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1-DICHLOROETHANE	CMS-GW-GE03-03	75-34-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1-DICHLOROETHENE	CMS-GW-GE03-03	75-35-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-GE03-03	75-69-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-GE03-03	75-71-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GE03-03	78-87-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GE03-03	79-00-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TRICHLOROETHENE	CMS-GW-GE03-03	79-01-6	0.74U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GE03-03	79-34-5	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GE03-03	87-61-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	HEXACHLOROBTADIENE	CMS-GW-GE03-03	87-68-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	NAPHTHALENE	CMS-GW-GE03-03	91-20-3	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	O-XYLENE	CMS-GW-GE03-03	95-47-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	2-CHLOROTOLUENE	CMS-GW-GE03-03	95-49-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GE03-03	95-50-1	0.22U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GE03-03	95-63-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GE03-03	96-12-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GE03-03	96-18-4	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	TERT-BUTYLBENZENE	CMS-GW-GE03-03	98-06-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	ISOPROPYLBENZENE	CMS-GW-GE03-03	98-82-8	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02
CMS-GW-GE03-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GE03-03	99-87-6	11U		UG/L			C2J250362 STL Pittsburgh	C2J250362016	25-Oct-02	30-Oct-02	30-Oct-02

NSAMPLE	METHOD	MOL	IDL	CRDL CRQL	DIL FACTOR	PCT MOIST	COMMENTS	INVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID COMMENT
CMS-GW-GE06-03	8260B				1	100		2N				
CMS-GW-GE06-03	8260B				1	100		2N				
CMS-GW-GE06-03	8260B				1	100		2N				
CMS-GW-GE06-03	8260B				1	100		2N				
CMS-GW-GE06-03	8260B	0.072	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.067	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.22	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.069	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.11	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.16	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.25	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.12	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.084	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.14	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.15	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.32	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.12	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.15	1		1	100		2N		1.5		
CMS-GW-GE06-03	8260B	0.21	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.078	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.2	1		1	100		2N		11		
CMS-GW-GE06-03	8260B	0.12	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.13	2		1	100		2N		2U		
CMS-GW-GE06-03	8260B	0.17	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.38	1		1	100		2N		5.6		
CMS-GW-GE06-03	8260B	0.31	1		1	100		2N		1UJ		
CMS-GW-GE06-03	8260B	0.11	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.31	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.2	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.17	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.17	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.082	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.27	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.3	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.28	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.19	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.19	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.2	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.14	1		1	100		2N		0.38U		
CMS-GW-GE06-03	8260B	0.15	2		1	100		2N		2U		
CMS-GW-GE06-03	8260B	0.3	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.22	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.38	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.43	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.66	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.15	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.067	1		1	100		2N		0.74U		
CMS-GW-GE06-03	8260B	0.29	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.25	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.72	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.31	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.083	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.26	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.11	1		1	100		2N		0.22U		
CMS-GW-GE06-03	8260B	0.044	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.8	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.38	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.13	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.088	1		1	100		2N		1U		
CMS-GW-GE06-03	8260B	0.14	1		1	100		2N		1U		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-GEC1-03	OV	TOLUENE-D8	CMS-GW-GEC1-03	2037-26-5	82		PCT_REC	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-GEC1-03	17060-07-0	109		PCT_REC	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GEC1-03	480-00-4	100		PCT_REC	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	DIBROMODIFLUOROMETHANE	CMS-GW-GEC1-03	1868-53-7	104		PCT_REC	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	ETHYLBENZENE	CMS-GW-GEC1-03	100-41-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	STYRENE	CMS-GW-GEC1-03	100-42-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GEC1-03	10081-01-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GEC1-03	10061-02-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	N-PROPYLBENZENE	CMS-GW-GEC1-03	103-65-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	N-BUTYLBENZENE	CMS-GW-GEC1-03	104-51-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	4-CHLOROTOLUENE	CMS-GW-GEC1-03	105-43-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GEC1-03	106-46-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DIBROMOETHANE	CMS-GW-GEC1-03	106-93-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DICHLOROETHANE	CMS-GW-GEC1-03	107-06-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GEC1-03	108-87-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	BROMOBENZENE	CMS-GW-GEC1-03	108-86-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TOLUENE	CMS-GW-GEC1-03	108-88-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CHLOROBENZENE	CMS-GW-GEC1-03	108-90-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GEC1-03	120-82-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-GEC1-03	124-48-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TETRACHLOROETHENE	CMS-GW-GEC1-03	127-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	SEC-BUTYLBENZENE	CMS-GW-GEC1-03	135-98-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GEC1-03	136777-61-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GEC1-03	142-28-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GEC1-03	156-59-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GEC1-03	158-90-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GEC1-03	541-73-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CARBON TETRACHLORIDE	CMS-GW-GEC1-03	55-23-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1-DICHLOROPROPANE	CMS-GW-GEC1-03	552-59-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GEC1-03	584-20-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GEC1-03	630-20-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CHLOROFORM	CMS-GW-GEC1-03	67-66-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	BENZENE	CMS-GW-GEC1-03	71-43-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GEC1-03	71-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	BROMOMETHANE	CMS-GW-GEC1-03	74-83-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CHLOROMETHANE	CMS-GW-GEC1-03	74-87-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	DIBROMOMETHANE	CMS-GW-GEC1-03	74-95-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	BROMOCHLOROMETHANE	CMS-GW-GEC1-03	74-97-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	CHLOROETHANE	CMS-GW-GEC1-03	75-00-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	VINYL CHLORIDE	CMS-GW-GEC1-03	75-01-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	METHYLENE CHLORIDE	CMS-GW-GEC1-03	75-09-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	BROMOFORM	CMS-GW-GEC1-03	75-25-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	BROMODICHLOROMETHANE	CMS-GW-GEC1-03	75-27-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1-DICHLOROETHANE	CMS-GW-GEC1-03	75-34-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1-DICHLOROETHENE	CMS-GW-GEC1-03	75-35-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TRICHLORODIFLUOROMETHANE	CMS-GW-GEC1-03	75-69-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-GEC1-03	75-71-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GEC1-03	78-87-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GEC1-03	79-00-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TRICHLOROETHENE	CMS-GW-GEC1-03	79-01-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GEC1-03	79-34-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GEC1-03	87-61-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	HEXACHLOROBUTADIENE	CMS-GW-GEC1-03	87-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	NAPHTHALENE	CMS-GW-GEC1-03	91-20-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	O-XYLENE	CMS-GW-GEC1-03	95-47-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	2-CHLOROTOLUENE	CMS-GW-GEC1-03	95-49-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GEC1-03	95-50-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GEC1-03	95-63-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GEC1-03	96-12-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GEC1-03	96-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	TERT-BUTYLBENZENE	CMS-GW-GEC1-03	98-06-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	ISOPROPYLBENZENE	CMS-GW-GEC1-03	98-82-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GEC1-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GEC1-03	99-87-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362017	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MOL	IDL	ORCL	ORCL	DIL FACTOR	PCT MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-GEC1-03	8260B						1	100		2IN			
CMS-GW-GEC1-03	8260B						1	100		2IN			
CMS-GW-GEC1-03	8260B						1	100		2IN			
CMS-GW-GEC1-03	8260B						1	100		2IN			
CMS-GW-GEC1-03	8260B	0.072	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.067	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.221	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.069	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.11	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.16	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.26	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.12	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.084	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.14	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.15	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.32	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.12	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.15	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.21	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.078	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.2	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.12	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.13	2				1	100		2IN	2U		
CMS-GW-GEC1-03	8260B	0.17	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.38	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.31	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.11	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.31	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.13	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.2	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.17	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.17	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.082	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.27	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.3	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.28	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.19	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.19	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.2	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.14	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.15	2				1	100		2IN	2U		
CMS-GW-GEC1-03	8260B	0.3	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.13	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.22	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.38	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.43	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.66	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.15	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.13	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.007	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.29	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.26	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.72	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.31	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.083	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.26	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.11	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.044	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.8	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.38	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.13	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.088	1				1	100		2IN	1U		
CMS-GW-GEC1-03	8260B	0.14	1				1	100		2IN	1U		

NSAMPLE	CLASS	PARAMETER	PPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-GECS-03	OV	TOLUENE-D6	CMS-GW-GECS-03	2037-26-5		97	PCT_REC		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-GECS-03	17660-07-0		100	PCT_REC		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GECS-03	460-00-4		94	PCT_REC		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-GECS-03	1868-53-7		99	PCT_REC		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	ETHYLBENZENE	CMS-GW-GECS-03	100-41-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	STYRENE	CMS-GW-GECS-03	100-42-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GECS-03	10061-01-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GECS-03	10061-02-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	N-PROPYLBENZENE	CMS-GW-GECS-03	103-65-1		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	N-BUTYLBENZENE	CMS-GW-GECS-03	104-51-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	4-CHLOROTOLUENE	CMS-GW-GECS-03	106-43-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GECS-03	106-46-7		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DIBROMOETHANE	CMS-GW-GECS-03	106-93-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DICHLOROETHANE	CMS-GW-GECS-03	107-06-2		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GECS-03	108-67-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	BROMOBENZENE	CMS-GW-GECS-03	108-86-1		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TOLUENE	CMS-GW-GECS-03	108-88-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CHLOROBENZENE	CMS-GW-GECS-03	108-90-7		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GECS-03	120-82-1		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-GECS-03	124-48-1		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TETRACHLOROETHENE	CMS-GW-GECS-03	127-18-4	0.86J		UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	SEC-BUTYLBENZENE	CMS-GW-GECS-03	135-98-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GECS-03	136777-61-2		2U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GECS-03	142-28-9		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GECS-03	156-59-2	21		UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GECS-03	156-60-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GECS-03	541-73-1		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CARBON TETRACHLORIDE	CMS-GW-GECS-03	58-23-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1-DICHLOROPROPENE	CMS-GW-GECS-03	563-65-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GECS-03	584-20-7		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GECS-03	630-20-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CHLOROFORM	CMS-GW-GECS-03	67-66-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	BENZENE	CMS-GW-GECS-03	71-43-2		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GECS-03	71-55-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	BROMOMETHANE	CMS-GW-GECS-03	74-83-9		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CHLOROMETHANE	CMS-GW-GECS-03	74-87-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	DIBROMOMETHANE	CMS-GW-GECS-03	74-95-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	BROMOCHLOROMETHANE	CMS-GW-GECS-03	74-97-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	CHLOROETHANE	CMS-GW-GECS-03	75-00-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	VINYL CHLORIDE	CMS-GW-GECS-03	75-01-4		1.8	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	METHYLENE CHLORIDE	CMS-GW-GECS-03	75-09-2		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	BROMOFORM	CMS-GW-GECS-03	75-25-2		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	BROMODICHLOROMETHANE	CMS-GW-GECS-03	75-27-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1-DICHLOROETHANE	CMS-GW-GECS-03	75-34-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1-DICHLOROETHENE	CMS-GW-GECS-03	75-35-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-GECS-03	75-60-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	DICHLOROFLUOROMETHANE	CMS-GW-GECS-03	75-71-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GECS-03	78-87-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GECS-03	79-00-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TRICHLOROETHENE	CMS-GW-GECS-03	79-01-6	0.62J		UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GECS-03	79-34-5		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GECS-03	87-61-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	HEXACHLOROBUTADIENE	CMS-GW-GECS-03	87-66-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	NAPHTHALENE	CMS-GW-GECS-03	91-20-3		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	O-XYLENE	CMS-GW-GECS-03	95-47-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	2-CHLOROTOLUENE	CMS-GW-GECS-03	95-49-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GECS-03	95-50-1		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GECS-03	95-63-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GECS-03	96-12-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GECS-03	96-18-4		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	TERT-BUTYLBENZENE	CMS-GW-GECS-03	98-06-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	ISOPROPYLBENZENE	CMS-GW-GECS-03	98-82-8		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-GECS-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GECS-03	99-87-6		1U	UG/L		C2J250362	STL Pittsburgh	C2J250362018	25-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CHQL	DIL_FACTOR	PCT	MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-GECS-03	8260B						1	100			2IN			
CMS-GW-GECS-03	8260B						1	100			2IN			
CMS-GW-GECS-03	8260B						1	100			2IN			
CMS-GW-GECS-03	8260B						1	100			2IN			
CMS-GW-GECS-03	8260B	0.072	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.067	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.22	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.069	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.11	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.16	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.26	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.12	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.084	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.14	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.15	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.32	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.12	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.15	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.21	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.078	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.21	1				1	100			2IN	0.86J		
CMS-GW-GECS-03	8260B	0.12	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.13	2				1	100			2IN		2U	
CMS-GW-GECS-03	8260B	0.17	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.38	1				1	100			2IN		2U	
CMS-GW-GECS-03	8260B	0.31	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.11	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.31	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.13	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.2	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.17	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.17	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.082	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.27	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.3	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.28	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.19	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.19	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.2	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.14	1				1	100			2IN		1.6	
CMS-GW-GECS-03	8260B	0.15	2				1	100			2IN		2U	
CMS-GW-GECS-03	8260B	0.3	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.13	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.22	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.38	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.43	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.88	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.15	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.13	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.087	1				1	100			2IN	0.62J		
CMS-GW-GECS-03	8260B	0.29	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.25	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.72	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.31	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.043	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.26	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.11	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.044	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.8	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.36	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.13	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.046	1				1	100			2IN		1U	
CMS-GW-GECS-03	8260B	0.14	1				1	100			2IN		1U	

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SOG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-GE07-03	OV	TOLUENE-D8	CMS-GW-GE07-03	2037-26-5	95		PCT_REC		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-GE07-03	17060-07-0	96		PCT_REC		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GE07-03	460-00-4	92		PCT_REC		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-GE07-03	1868-53-7	91		PCT_REC		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	ETHYLBENZENE	CMS-GW-GE07-03	100-41-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	STYRENE	CMS-GW-GE07-03	100-42-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GE07-03	10061-01-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GE07-03	10061-02-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	N-PROPYLBENZENE	CMS-GW-GE07-03	103-85-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	N-BUTYLBENZENE	CMS-GW-GE07-03	104-51-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	4-CHLOROTOLUENE	CMS-GW-GE07-03	106-43-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GE07-03	106-46-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DIBROMOETHANE	CMS-GW-GE07-03	106-93-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DICHLOROETHANE	CMS-GW-GE07-03	107-08-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GE07-03	108-67-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	BROMOBENZENE	CMS-GW-GE07-03	108-86-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TOLUENE	CMS-GW-GE07-03	108-88-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CHLOROBENZENE	CMS-GW-GE07-03	108-90-7	0.31J		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GE07-03	129-82-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-GE07-03	124-48-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TETRACHLOROETHENE	CMS-GW-GE07-03	127-18-4	0.21J		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	SEC-BUTYLBENZENE	CMS-GW-GE07-03	135-88-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GE07-03	136-77-6 1-2	2U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GE07-03	142-28-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GE07-03	156-59-2	0.48J		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GE07-03	156-60-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GE07-03	1541-73-1	0.27J		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CARBON TETRACHLORIDE	CMS-GW-GE07-03	58-23-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1-DICHLOROPROPANE	CMS-GW-GE07-03	563-66-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GE07-03	594-20-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GE07-03	630-20-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CHLOROFORM	CMS-GW-GE07-03	67-66-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	BENZENE	CMS-GW-GE07-03	71-43-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GE07-03	71-55-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	BROMOMETHANE	CMS-GW-GE07-03	74-83-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CHLOROMETHANE	CMS-GW-GE07-03	74-87-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	DIBROMOMETHANE	CMS-GW-GE07-03	74-95-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	BROMOCHLOROMETHANE	CMS-GW-GE07-03	74-97-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	CHLOROETHANE	CMS-GW-GE07-03	75-00-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	VINYL CHLORIDE	CMS-GW-GE07-03	75-01-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	METHYLENE CHLORIDE	CMS-GW-GE07-03	76-09-2	2U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	BROMOFORM	CMS-GW-GE07-03	75-25-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	BROMODICHLOROMETHANE	CMS-GW-GE07-03	75-27-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1-DICHLOROETHANE	CMS-GW-GE07-03	75-34-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1-DICHLOROETHENE	CMS-GW-GE07-03	75-35-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-GE07-03	75-69-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-GE07-03	75-71-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GE07-03	78-87-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GE07-03	79-00-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TRICHLOROETHENE	CMS-GW-GE07-03	79-01-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GE07-03	79-34-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GE07-03	87-61-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	HEXACHLOROBUTADIENE	CMS-GW-GE07-03	87-68-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	NAPHTHALENE	CMS-GW-GE07-03	91-20-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	O-XYLENE	CMS-GW-GE07-03	95-47-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	2-CHLOROTOLUENE	CMS-GW-GE07-03	95-49-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GE07-03	95-50-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GE07-03	95-63-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GE07-03	96-12-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GE07-03	96-16-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	TERT-BUTYLBENZENE	CMS-GW-GE07-03	98-06-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	ISOPROPYLBENZENE	CMS-GW-GE07-03	98-82-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02
CMS-GW-GE07-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GE07-03	99-87-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362019	25-Oct-02	25-Oct-02	25-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRDL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-GEC7-03	8260B					1	100		2IN				
CMS-GW-GEC7-03	8260B					1	100		2IN				
CMS-GW-GEC7-03	8260B					1	100		2IN				
CMS-GW-GEC7-03	8260B					1	100		2IN				
CMS-GW-GEC7-03	8260B	0.072	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.067	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.22	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.069	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.11	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.16	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.25	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.12	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.084	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.14	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.15	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.32	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.12	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.15	1			1	100		2IN		0.31U		
CMS-GW-GEC7-03	8260B	0.21	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.078	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.2	1			1	100		2IN		0.21U		
CMS-GW-GEC7-03	8260B	0.12	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.13	2			1	100		2IN		2U		
CMS-GW-GEC7-03	8260B	0.17	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.38	1			1	100		2IN		0.48U		
CMS-GW-GEC7-03	8260B	0.31	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.11	1			1	100		2IN		0.27U		
CMS-GW-GEC7-03	8260B	0.31	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.2	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.17	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.17	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.082	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.27	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.3	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.28	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.18	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.19	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.2	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.14	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.15	2			1	100		2IN		2U		
CMS-GW-GEC7-03	8260B	0.3	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.22	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.38	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.43	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.66	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.15	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.087	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.29	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.25	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.72	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.31	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.083	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.26	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.11	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.044	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.8	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.36	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.086	1			1	100		2IN		1U		
CMS-GW-GEC7-03	8260B	0.14	1			1	100		2IN		1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-GE04-03	OV	TOLUENE-D8	CMS-GW-GE04-03	2037-26-5	88		PCT_REC		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-GE04-03	17060-07-0	123		PCT_REC		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GE04-03	480-00-4	108		PCT_REC		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-GE04-03	1888-53-7	112		PCT_REC		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	ETHYLBENZENE	CMS-GW-GE04-03	100-41-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	STYRENE	CMS-GW-GE04-03	100-42-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GE04-03	10061-01-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GE04-03	10061-02-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	N-PROPYLBENZENE	CMS-GW-GE04-03	103-65-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	N-BUTYLBENZENE	CMS-GW-GE04-03	104-51-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	4-CHLOROTOLUENE	CMS-GW-GE04-03	108-43-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GE04-03	106-46-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2-DIBROMOETHANE	CMS-GW-GE04-03	106-93-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2-DICHLOROETHANE	CMS-GW-GE04-03	107-06-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GE04-03	108-67-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	BROMOBENZENE	CMS-GW-GE04-03	108-96-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TOLUENE	CMS-GW-GE04-03	108-98-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CHLOROBENZENE	CMS-GW-GE04-03	108-90-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GE04-03	120-82-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-GE04-03	124-48-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TETRACHLOROETHENE	CMS-GW-GE04-03	127-18-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	SEC-BUTYLBENZENE	CMS-GW-GE04-03	135-98-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GE04-03	136777-61-2	2U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GE04-03	142-28-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GE04-03	156-59-2	2.8		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GE04-03	166-90-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GE04-03	541-73-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CARBON TETRACHLORIDE	CMS-GW-GE04-03	56-23-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1,1-DICHLOROPROPENE	CMS-GW-GE04-03	563-58-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	2,2-DICHLOROPROPANE	CMS-GW-GE04-03	584-20-7	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GE04-03	630-20-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CHLOROFORM	CMS-GW-GE04-03	67-66-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	BENZENE	CMS-GW-GE04-03	71-43-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GE04-03	71-55-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	BROMOMETHANE	CMS-GW-GE04-03	74-83-9	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CHLOROMETHANE	CMS-GW-GE04-03	74-87-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	DIBROMOMETHANE	CMS-GW-GE04-03	74-95-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	BROMOCHLOROMETHANE	CMS-GW-GE04-03	74-97-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	CHLOROETHANE	CMS-GW-GE04-03	75-00-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	VINYL CHLORIDE	CMS-GW-GE04-03	75-01-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	METHYLENE CHLORIDE	CMS-GW-GE04-03	75-09-2	2U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	BROMOFORM	CMS-GW-GE04-03	75-25-2	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	BROMODICHLOROMETHANE	CMS-GW-GE04-03	75-27-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1-DICHLOROETHANE	CMS-GW-GE04-03	75-34-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1-DICHLOROETHENE	CMS-GW-GE04-03	75-35-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-GE04-03	75-69-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-GE04-03	75-71-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GE04-03	78-87-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GE04-03	79-00-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TRICHLOROETHENE	CMS-GW-GE04-03	79-01-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GE04-03	79-34-5	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GE04-03	87-61-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	HEXACHLOROBUTADIENE	CMS-GW-GE04-03	87-68-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	NAPHTHALENE	CMS-GW-GE04-03	91-20-3	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	O-XYLENE	CMS-GW-GE04-03	95-47-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	2-CHLOROTOLUENE	CMS-GW-GE04-03	95-49-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GE04-03	95-50-1	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GE04-03	95-63-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GE04-03	96-12-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GE04-03	96-18-4	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	TERT-BUTYLBENZENE	CMS-GW-GE04-03	98-06-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	ISOPROPYLBENZENE	CMS-GW-GE04-03	98-82-8	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE04-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GE04-03	99-87-6	1U		UG/L		C2J250362	STL Pittsburgh	C2J250362020	25-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-GE04-03	8260B					1	100			2IN			
CMS-GW-GE04-03	8260B					1	100			2IN			
CMS-GW-GE04-03	8260B					1	100			2IN			
CMS-GW-GE04-03	8260B					1	100			2IN			
CMS-GW-GE04-03	8260B	0.072	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.067	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.22	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.069	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.11	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.16	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.25	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.12	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.084	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.14	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.15	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.32	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.12	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.15	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.21	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.078	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.2	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.12	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.13	2			1	100			2IN	2U		
CMS-GW-GE04-03	8260B	0.17	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.38	1			1	100			2IN	2.8		
CMS-GW-GE04-03	8260B	0.31	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.11	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.31	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.13	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.2	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.17	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.17	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.082	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.27	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.3	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.28	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.19	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.19	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.2	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.14	1			1	100			2IN	1		
CMS-GW-GE04-03	8260B	0.15	2			1	100			2IN	2U		
CMS-GW-GE04-03	8260B	0.3	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.13	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.22	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.38	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.43	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.68	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.15	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.13	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.087	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.29	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.25	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.72	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.31	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.063	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.26	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.11	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.044	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.9	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.38	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.13	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.088	1			1	100			2IN	1U		
CMS-GW-GE04-03	8260B	0.14	1			1	100			2IN	1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-GE02-03	OV	TOLUENE-D6	CMS-GW-GE02-03	2037-26-5	91		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2-DICHLOROETHANE D4	CMS-GW-GE02-03	17080-07-0	126		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GE02-03	400-00-4	109		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-GE02-03	1868-53-7	109		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	ETHYLBENZENE	CMS-GW-GE02-03	100-41-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	STYRENE	CMS-GW-GE02-03	100-42-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GE02-03	10061-01-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GE02-03	10061-02-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	N-PROPYLBENZENE	CMS-GW-GE02-03	103-65-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	N-BUTYLBENZENE	CMS-GW-GE02-03	104-51-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	4-CHLOROTOLUENE	CMS-GW-GE02-03	106-43-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GE02-03	106-46-7	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2-DIBROMOETHANE	CMS-GW-GE02-03	106-93-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2-DICHLOROETHANE	CMS-GW-GE02-03	107-06-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GE02-03	108-67-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	BROMOBENZENE	CMS-GW-GE02-03	108-86-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TOLUENE	CMS-GW-GE02-03	108-88-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CHLOROBENZENE	CMS-GW-GE02-03	108-90-7	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GE02-03	120-82-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-GE02-03	124-48-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TETRACHLOROETHENE	CMS-GW-GE02-03	127-18-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	SEC-BUTYLBENZENE	CMS-GW-GE02-03	135-98-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GE02-03	136777-61-2	2U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GE02-03	142-28-9	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GE02-03	156-59-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GE02-03	156-60-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GE02-03	164-173-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CARBON TETRACHLORIDE	CMS-GW-GE02-03	56-23-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1-DICHLOROPROPENE	CMS-GW-GE02-03	563-59-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	2,2-DICHLOROPROPANE	CMS-GW-GE02-03	594-20-7	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GE02-03	630-20-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CHLOROFORM	CMS-GW-GE02-03	67-66-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	BENZENE	CMS-GW-GE02-03	71-43-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GE02-03	71-55-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	BROMOMETHANE	CMS-GW-GE02-03	74-83-9	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CHLOROMETHANE	CMS-GW-GE02-03	74-87-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	DIBROMOMETHANE	CMS-GW-GE02-03	74-95-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	BROMOCHLOROMETHANE	CMS-GW-GE02-03	74-97-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	CHLOROETHANE	CMS-GW-GE02-03	75-00-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	VINYL CHLORIDE	CMS-GW-GE02-03	75-01-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	METHYLENE CHLORIDE	CMS-GW-GE02-03	75-09-2	2U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	BROMOFORM	CMS-GW-GE02-03	75-25-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	BROMODICHLOROMETHANE	CMS-GW-GE02-03	75-27-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1-DICHLOROETHANE	CMS-GW-GE02-03	75-34-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1-DICHLOROETHENE	CMS-GW-GE02-03	75-35-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-GE02-03	75-69-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-GE02-03	75-71-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GE02-03	78-67-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GE02-03	79-00-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TRICHLOROETHENE	CMS-GW-GE02-03	79-01-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GE02-03	79-34-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GE02-03	87-61-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	HEXACHLOROBUTADIENE	CMS-GW-GE02-03	87-68-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	NAPHTHALENE	CMS-GW-GE02-03	91-20-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	O-XYLENE	CMS-GW-GE02-03	95-47-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	2-CHLOROTOLUENE	CMS-GW-GE02-03	95-48-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GE02-03	95-50-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GE02-03	95-63-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GE02-03	96-12-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GE02-03	96-18-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	TERT-BUTYLBENZENE	CMS-GW-GE02-03	98-06-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	ISOPROPYLBENZENE	CMS-GW-GE02-03	98-82-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE02-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GE02-03	99-87-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362021	25-Oct-02	27-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	DL_FACTOR	PCT_MOIST	COMMENTS	DVYIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-GEC2-03	8260B					1	100		2IN			
CMS-GW-GEC2-03	8260B					1	100		2IN			
CMS-GW-GEC2-03	8260B					1	100		2IN			
CMS-GW-GEC2-03	8260B					1	100		2IN			
CMS-GW-GEC2-03	8260B	0.072	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.067	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.22	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.060	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.18	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.25	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.064	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.14	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.32	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.21	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.076	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.13	2			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.31	1			1	100		2IN		1UU	
CMS-GW-GEC2-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.062	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.27	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.3	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.26	1			1	100		2IN		1UU	
CMS-GW-GEC2-03	8260B	0.19	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.19	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.2	1			1	100		2IN		1UU	
CMS-GW-GEC2-03	8260B	0.14	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.15	2			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.3	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.22	1			1	100		2IN		1UU	
CMS-GW-GEC2-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.43	1			1	100		2IN		1UU	
CMS-GW-GEC2-03	8260B	0.66	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.16	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.067	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.29	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.25	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.72	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.083	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.26	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.044	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.8	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.066	1			1	100		2IN		1U	
CMS-GW-GEC2-03	8260B	0.14	1			1	100		2IN		1U	

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW06S-03	OV	TOLUENE-DB	CMS-GW-MW06S-03	2037-26-5	96		PCT_REC	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2-DICHLOROETHANE-04	CMS-GW-MW06S-03	17060-07-0	119		PCT_REC	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW06S-03	480-00-4	101		PCT_REC	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW06S-03	1868-53-7	104		PCT_REC	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	ETHYLBENZENE	CMS-GW-MW06S-03	100-41-4	1.2J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	STYRENE	CMS-GW-MW06S-03	100-42-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW06S-03	10061-01-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW06S-03	10061-02-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	N-PROPYLBENZENE	CMS-GW-MW06S-03	103-65-1	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	N-BUTYLBENZENE	CMS-GW-MW06S-03	104-51-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW06S-03	105-43-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW06S-03	106-46-7	4.9J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW06S-03	106-93-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW06S-03	107-06-2	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW06S-03	108-67-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	BROMOBENZENE	CMS-GW-MW06S-03	108-96-1	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TOLUENE	CMS-GW-MW06S-03	108-88-3	3.3J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CHLOROBENZENE	CMS-GW-MW06S-03	108-90-7	160		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW06S-03	120-82-1	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW06S-03	124-48-1	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TETRACHLOROETHENE	CMS-GW-MW06S-03	127-18-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW06S-03	135-98-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW06S-03	136777-61-2	9.2J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW06S-03	142-28-9	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW06S-03	156-59-2	2.8J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW06S-03	156-60-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW06S-03	541-73-1	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW06S-03	56-23-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW06S-03	563-69-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	2,3-DICHLOROPROPANE	CMS-GW-MW06S-03	594-20-7	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW06S-03	630-20-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CHLOROFORM	CMS-GW-MW06S-03	67-66-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	BENZENE	CMS-GW-MW06S-03	71-43-2	5.8J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW06S-03	71-55-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	BROMOMETHANE	CMS-GW-MW06S-03	74-83-9	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CHLOROMETHANE	CMS-GW-MW06S-03	74-87-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	DIBROMOMETHANE	CMS-GW-MW06S-03	74-95-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW06S-03	74-97-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	CHLOROETHANE	CMS-GW-MW06S-03	75-00-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	VINYL CHLORIDE	CMS-GW-MW06S-03	75-01-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW06S-03	75-09-2	12U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	BROMOFORM	CMS-GW-MW06S-03	75-26-2	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW06S-03	75-27-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW06S-03	75-34-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW06S-03	75-35-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW06S-03	75-69-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW06S-03	75-71-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW06S-03	78-87-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW06S-03	79-00-5	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TRICHLOROETHENE	CMS-GW-MW06S-03	79-01-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW06S-03	79-34-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW06S-03	87-61-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW06S-03	87-68-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	NAPHTHALENE	CMS-GW-MW06S-03	91-20-3	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	O-XYLENE	CMS-GW-MW06S-03	95-47-6	9.5J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW06S-03	95-49-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW06S-03	95-50-1	13J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW06S-03	95-63-6	2.1J		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW06S-03	96-12-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW06S-03	96-18-4	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW06S-03	98-06-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW06S-03	98-82-8	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW06S-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW06S-03	99-87-6	6U		UG/L	C2J250362	STL Pittsburgh	C2J250362022	C2J250362022	25-Oct-02	29-Oct-02	29-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRCL_CRCL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW06S-03	8260B					6	100		2/N			
CMS-GW-MW06S-03	8260B					6	100		2/N			
CMS-GW-MW06S-03	8260B					6	100		2/N			
CMS-GW-MW06S-03	8260B					6	100		2/N			
CMS-GW-MW06S-03	8260B	0.43	6			6	100		2/N	1.2 U		
CMS-GW-MW06S-03	8260B	0.4	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.3	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.42	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.63	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.84	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.5	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.75	6			6	100		2/N	4.9 U		
CMS-GW-MW06S-03	8260B	0.5	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.94	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.92	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.9	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.74	6			6	100		2/N	3.3 U		
CMS-GW-MW06S-03	8260B	0.9	6			6	100		2/N	160		
CMS-GW-MW06S-03	8260B	1.2	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.47	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.2	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.71	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.77	12			6	100		2/N	9.2 U		
CMS-GW-MW06S-03	8260B	1	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	2.3	6			6	100		2/N	2.8 U		
CMS-GW-MW06S-03	8260B	1.9	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.67	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.9	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.76	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.2	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.49	6			6	100		2/N	6.8 U		
CMS-GW-MW06S-03	8260B	1.6	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.8	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.7	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.2	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.2	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.2	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.86	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.88	12			6	100		2/N	12 U		
CMS-GW-MW06S-03	8260B	1.8	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.81	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.3	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	2.3	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	2.8	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	3.9	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.89	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.79	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.52	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.7	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.5	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	4.3	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	1.9	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.5	6			6	100		2/N	9.5		
CMS-GW-MW06S-03	8260B	1.5	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.67	6			6	100		2/N	13		
CMS-GW-MW06S-03	8260B	0.26	6			6	100		2/N	2.1 U		
CMS-GW-MW06S-03	8260B	4.8	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	2.3	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.78	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.53	6			6	100		2/N	6 U		
CMS-GW-MW06S-03	8260B	0.84	6			6	100		2/N	6 U		

IN.SAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	ISDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-DU-102302A-03	OV	TOLUENE-D6	CMS-DU-102302A-03	2037-26-5	93		PCT_REC		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2-DICHLOROETHANE-D4	CMS-DU-102302A-03	17060-07-0	112		PCT_REC		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	4-BROMOFLUOROBENZENE	CMS-DU-102302A-03	460-00-4	101		PCT_REC		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	DIBROMOFLUOROMETHANE	CMS-DU-102302A-03	1868-53-7	100		PCT_REC		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	ETHYL BENZENE	CMS-DU-102302A-03	100-41-4	2.7	J	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	STYRENE	CMS-DU-102302A-03	100-42-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-DU-102302A-03	10061-01-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-DU-102302A-03	10061-02-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	N-PROPYLBENZENE	CMS-DU-102302A-03	103-65-1	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	N-BUTYLBENZENE	CMS-DU-102302A-03	104-61-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	4-CHLOROTOLUENE	CMS-DU-102302A-03	106-43-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,4-DICHLOROBENZENE	CMS-DU-102302A-03	106-46-7	6.2	J	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2-DIBROMOETHANE	CMS-DU-102302A-03	106-93-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2-DICHLOROETHANE	CMS-DU-102302A-03	107-06-2	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-DU-102302A-03	108-87-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	BROMOBENZENE	CMS-DU-102302A-03	108-80-1	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TOLUENE	CMS-DU-102302A-03	108-88-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CHLOROBENZENE	CMS-DU-102302A-03	108-90-7	190		UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2,4-TRICHLOROBENZENE	CMS-DU-102302A-03	120-82-1	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	DIBROMOCHLOROMETHANE	CMS-DU-102302A-03	124-48-1	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TETRACHLOROETHENE	CMS-DU-102302A-03	127-18-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	SEC-BUTYLBENZENE	CMS-DU-102302A-03	135-98-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	M-XYLENE & P-XYLENE	CMS-DU-102302A-03	136777-61-2	12	J	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,3-DICHLOROPROPANE	CMS-DU-102302A-03	142-28-9	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CIS-1,2-DICHLOROETHENE	CMS-DU-102302A-03	156-59-2	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-DU-102302A-03	156-60-0	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,3-DICHLOROBENZENE	CMS-DU-102302A-03	541-73-1	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CARBON TETRACHLORIDE	CMS-DU-102302A-03	56-23-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1-DICHLOROETHENE	CMS-DU-102302A-03	563-65-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	2,2-DICHLOROPROPANE	CMS-DU-102302A-03	594-20-7	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-DU-102302A-03	630-20-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CHLOROPORM	CMS-DU-102302A-03	67-66-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	BENZENE	CMS-DU-102302A-03	71-43-2	11		UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1,1-TRICHLOROETHANE	CMS-DU-102302A-03	71-55-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	BROMOMETHANE	CMS-DU-102302A-03	74-83-9	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CHLOROMETHANE	CMS-DU-102302A-03	74-87-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	DIBROMOMETHANE	CMS-DU-102302A-03	74-95-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	BROMOCHLOROMETHANE	CMS-DU-102302A-03	74-97-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	CHLOROETHANE	CMS-DU-102302A-03	75-06-3	14		UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	VINYL CHLORIDE	CMS-DU-102302A-03	75-01-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	METHYLENE CHLORIDE	CMS-DU-102302A-03	75-09-2	3.6	J	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	BROMOPORM	CMS-DU-102302A-03	75-25-2	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	BROMODICHLOROMETHANE	CMS-DU-102302A-03	75-27-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1-DICHLOROETHANE	CMS-DU-102302A-03	75-34-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1-DICHLOROETHENE	CMS-DU-102302A-03	75-35-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TRICHLOROFLUOROMETHANE	CMS-DU-102302A-03	75-69-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	DICHLORODIFLUOROMETHANE	CMS-DU-102302A-03	75-71-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2-DICHLOROPROPANE	CMS-DU-102302A-03	76-87-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1,2-TRICHLOROETHANE	CMS-DU-102302A-03	79-00-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TRICHLOROETHENE	CMS-DU-102302A-03	79-01-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-DU-102302A-03	79-34-5	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2,3-TRICHLOROBENZENE	CMS-DU-102302A-03	87-61-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	HEXACHLOROBUTADIENE	CMS-DU-102302A-03	87-68-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	NAPHTHALENE	CMS-DU-102302A-03	91-20-3	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	O-XYLENE	CMS-DU-102302A-03	95-47-6	11		UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	2-CHLOROTOLUENE	CMS-DU-102302A-03	95-48-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2-DICHLOROBENZENE	CMS-DU-102302A-03	95-50-1	13		UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-DU-102302A-03	95-63-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-DU-102302A-03	96-12-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	1,2,3-TRICHLOROPROPANE	CMS-DU-102302A-03	96-18-4	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	TERT-BUTYLBENZENE	CMS-DU-102302A-03	98-06-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	ISOPROPYLBENZENE	CMS-DU-102302A-03	98-82-8	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02
CMS-DU-102302A-03	OV	P-ISOPROPYL TOLUENE	CMS-DU-102302A-03	99-87-6	10	U	UG/L		C2J250362	STL Pittsburgh	C2J250362023	25-Oct-02	28-Oct-02	28-Oct-02

INSAMPLE	METHOD	MDL	IDL	CRDL	CRDL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-DU-102302A-03	8260B					10	100			2IN			
CMS-DU-102302A-03	8260B					10	100			2IN			
CMS-DU-102302A-03	8260B					10	100			2IN			
CMS-DU-102302A-03	8260B					10	100			2IN			
CMS-DU-102302A-03	8260B	0.72	10			10	100			2IN	2.7U		
CMS-DU-102302A-03	8260B	0.87	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2.2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	0.69	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.1	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2.5	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.2	10			10	100			2IN	5.2U		
CMS-DU-102302A-03	8260B	0.84	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.4	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.5	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.5	10			10	100			2IN	100		
CMS-DU-102302A-03	8260B	2.1	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	0.78	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.3	20			10	100			2IN	12U		
CMS-DU-102302A-03	8260B	1.7	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.1	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.1	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.1	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.7	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.7	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	0.82	10			10	100			2IN	11		
CMS-DU-102302A-03	8260B	2.7	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.9	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.9	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2	10			10	100			2IN	14U		
CMS-DU-102302A-03	8260B	1.4	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.5	20			10	100			2IN	3.6U		
CMS-DU-102302A-03	8260B	3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2.2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	4.3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	6.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.5	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	0.87	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2.9	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	2.5	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	7.2	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.1	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	0.83	10			10	100			2IN	11		
CMS-DU-102302A-03	8260B	2.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.1	10			10	100			2IN	13		
CMS-DU-102302A-03	8260B	0.44	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	8	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	3.6	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.3	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	0.86	10			10	100			2IN	10U		
CMS-DU-102302A-03	8260B	1.4	10			10	100			2IN	10U		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW07S-03	OV	TOLUENE-D8	CMS-GW-MW07S-03	2037-26-5	87		PCT_REC		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW07S-03	17060-07-0	124		PCT_REC		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW07S-03	460-00-4	106		PCT_REC		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW07S-03	1868-53-7	117		PCT_REC		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	ETHYL BENZENE	CMS-GW-MW07S-03	100-41-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	STYRENE	CMS-GW-MW07S-03	100-42-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW07S-03	10061-01-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW07S-03	10061-02-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	N-PROPYLBENZENE	CMS-GW-MW07S-03	103-65-1	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	N-BUTYLBENZENE	CMS-GW-MW07S-03	104-61-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW07S-03	106-43-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW07S-03	106-46-7	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW07S-03	106-93-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW07S-03	107-06-2	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW07S-03	108-87-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	BROMOBENZENE	CMS-GW-MW07S-03	108-86-1	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TOLUENE	CMS-GW-MW07S-03	108-88-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CHLOROBENZENE	CMS-GW-MW07S-03	108-90-7	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW07S-03	120-82-1	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW07S-03	124-48-1	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TETRACHLOROETHENE	CMS-GW-MW07S-03	127-18-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW07S-03	135-98-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW07S-03	136777-61-2	2U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW07S-03	142-28-9	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW07S-03	156-59-2	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW07S-03	156-60-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW07S-03	154-73-1	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW07S-03	56-23-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1-DICHLOROPROPANE	CMS-GW-MW07S-03	563-85-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW07S-03	564-20-7	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW07S-03	680-20-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CHLOROFORM	CMS-GW-MW07S-03	67-66-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	BENZENE	CMS-GW-MW07S-03	71-43-2	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW07S-03	71-55-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	BROMOMETHANE	CMS-GW-MW07S-03	74-83-9	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CHLOROMETHANE	CMS-GW-MW07S-03	74-87-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	DIBROMOMETHANE	CMS-GW-MW07S-03	74-95-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW07S-03	74-97-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	CHLOROETHANE	CMS-GW-MW07S-03	75-00-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	VINYL CHLORIDE	CMS-GW-MW07S-03	75-01-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW07S-03	75-09-2	2U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	BROMOFORM	CMS-GW-MW07S-03	75-25-2	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW07S-03	75-27-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW07S-03	75-34-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW07S-03	75-35-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW07S-03	75-69-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW07S-03	75-71-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW07S-03	78-57-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW07S-03	78-00-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TRICHLOROETHENE	CMS-GW-MW07S-03	79-01-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW07S-03	79-34-5	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2,3-TRICHLOROETHENE	CMS-GW-MW07S-03	87-61-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	HEXACHLOROBTADIENE	CMS-GW-MW07S-03	87-68-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	NAPHTHALENE	CMS-GW-MW07S-03	91-20-3	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	O-XYLENE	CMS-GW-MW07S-03	95-47-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW07S-03	95-48-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW07S-03	95-50-1	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW07S-03	95-63-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW07S-03	96-12-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW07S-03	96-18-4	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW07S-03	98-06-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW07S-03	98-82-8	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW07S-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW07S-03	99-87-6	1U		UG/L		CJ250362	STL Pittsburgh	CJ250362024	25-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	IDL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW07S-03	8260B				1	100			2IN			
CMS-GW-MW07S-03	8260B				1	100			2IN			
CMS-GW-MW07S-03	8260B				1	100			2IN			
CMS-GW-MW07S-03	8260B				1	100			2IN			
CMS-GW-MW07S-03	8260B	0.072	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.067	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.22	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.069	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.11	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.16	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.25	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.12	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.084	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.14	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.15	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.32	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.12	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.15	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.21	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.078	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.2	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.12	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.13	2		1	100			2IN	2U		
CMS-GW-MW07S-03	8260B	0.17	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.38	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.31	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.11	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.31	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.2	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.17	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.17	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.082	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.27	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.3	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.28	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.19	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.19	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.2	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.14	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.15	2		1	100			2IN	2U		
CMS-GW-MW07S-03	8260B	0.3	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.22	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.38	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.43	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.66	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.15	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.087	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.29	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.26	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.72	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.31	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.083	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.26	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.11	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.044	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.9	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.36	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.088	1		1	100			2IN	1U		
CMS-GW-MW07S-03	8260B	0.14	1		1	100			2IN	1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW15D-03	OV	TOLUENE-D8	CMS-GW-MW15D-03	2007-26-5	83		PCT_REC	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW15D-03	17060-07-0	98		PCT_REC	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW15D-03	460-00-4	99		PCT_REC	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW15D-03	1868-53-7	91		PCT_REC	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	ETHYLBENZENE	CMS-GW-MW15D-03	100-41-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	STYRENE	CMS-GW-MW15D-03	100-42-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW15D-03	10081-01-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW15D-03	10061-02-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	N-PROPYLBENZENE	CMS-GW-MW15D-03	103-65-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	N-BUTYLBENZENE	CMS-GW-MW15D-03	104-51-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	4-CHLOROTOLUENE	CMS-GW-MW15D-03	106-43-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW15D-03	106-46-7	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW15D-03	106-93-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW15D-03	107-08-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW15D-03	108-87-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	BROMOBENZENE	CMS-GW-MW15D-03	108-88-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TOLUENE	CMS-GW-MW15D-03	108-88-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CHLOROBENZENE	CMS-GW-MW15D-03	108-90-7	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW15D-03	120-82-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW15D-03	124-48-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TETRACHLOROETHENE	CMS-GW-MW15D-03	127-18-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW15D-03	135-98-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW15D-03	136777-81-2	20		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW15D-03	142-28-9	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW15D-03	156-59-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW15D-03	156-60-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW15D-03	541-73-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW15D-03	56-23-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW15D-03	563-65-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW15D-03	594-20-7	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW15D-03	630-20-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CHLOROFORM	CMS-GW-MW15D-03	67-66-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	BENZENE	CMS-GW-MW15D-03	71-43-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW15D-03	71-55-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	BROMOMETHANE	CMS-GW-MW15D-03	74-83-9	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CHLOROMETHANE	CMS-GW-MW15D-03	74-87-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	DIBROMOMETHANE	CMS-GW-MW15D-03	74-95-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW15D-03	74-97-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	CHLOROETHANE	CMS-GW-MW15D-03	75-00-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	VINYL CHLORIDE	CMS-GW-MW15D-03	75-01-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	METHYLENE CHLORIDE	CMS-GW-MW15D-03	75-09-2	0.2		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	BROMOFORM	CMS-GW-MW15D-03	75-25-2	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW15D-03	75-27-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW15D-03	75-34-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW15D-03	75-35-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW15D-03	75-69-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW15D-03	75-71-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW15D-03	78-67-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW15D-03	79-00-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TRICHLOROETHENE	CMS-GW-MW15D-03	79-01-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW15D-03	79-34-5	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW15D-03	87-61-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW15D-03	87-68-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	NAPHTHALENE	CMS-GW-MW15D-03	91-20-3	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	O-XYLENE	CMS-GW-MW15D-03	95-47-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	2-CHLOROTOLUENE	CMS-GW-MW15D-03	95-49-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW15D-03	95-50-1	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW15D-03	95-63-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW15D-03	96-12-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW15D-03	96-18-4	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW15D-03	98-06-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	ISOPROPYLBENZENE	CMS-GW-MW15D-03	98-82-8	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW15D-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW15D-03	99-87-6	10		UG/L	C2J250362	STL Pittsburgh	C2J250362025		25-Oct-02	28-Oct-02	28-Oct-02

INSAMPLE	METHOD	MDL	IDL	ORCL_ORGL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW15D-03	8260B					1	100		2N			
CMS-GW-MW15D-03	8260B					1	100		2N			
CMS-GW-MW15D-03	8260B					1	100		2N			
CMS-GW-MW15D-03	8260B					1	100		2N			
CMS-GW-MW15D-03	8260B	0.072	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.067	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.22	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.009	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.11	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.16	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.25	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.12	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.064	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.14	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.15	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.32	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.12	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.16	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.21	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.078	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.2	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.12	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.13	2			1	100		2N		2U	
CMS-GW-MW15D-03	8260B	0.17	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.38	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.31	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.11	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.31	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.13	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.2	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.17	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.17	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.082	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.27	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.3	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.28	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.19	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.19	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.2	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.14	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.15	2			1	100		2N		0.2J	
CMS-GW-MW15D-03	8260B	0.3	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.13	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.22	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.38	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.43	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.66	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.15	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.13	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.087	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.29	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.25	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.72	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.31	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.083	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.26	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.11	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.044	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.8	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.38	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.13	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.068	1			1	100		2N		1U	
CMS-GW-MW15D-03	8260B	0.14	1			1	100		2N		1U	

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW11B-03	OV	TOLUENE-D6	CMS-GW-MW11B-03	2037-26-5	102		PCT_REC	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2-DICHLOROETHANE D4	CMS-GW-MW11B-03	17080-07-0	104		PCT_REC	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW11B-03	460-00-4	116		PCT_REC	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW11B-03	1868-53-7	110		PCT_REC	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	ETHYLBENZENE	CMS-GW-MW11B-03	100-41-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	STYRENE	CMS-GW-MW11B-03	100-42-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW11B-03	10061-01-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW11B-03	10061-02-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	N-PROPYLBENZENE	CMS-GW-MW11B-03	103-65-1	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	N-BUTYLBENZENE	CMS-GW-MW11B-03	104-51-8	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	4-CHLOROTOLUENE	CMS-GW-MW11B-03	108-43-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW11B-03	106-46-7	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW11B-03	108-93-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW11B-03	107-06-2	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW11B-03	108-67-8	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	BROMOBENZENE	CMS-GW-MW11B-03	108-86-1	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TOLUENE	CMS-GW-MW11B-03	108-88-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CHLOROBENZENE	CMS-GW-MW11B-03	108-90-7	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW11B-03	120-82-1	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW11B-03	124-48-1	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TETRACHLOROETHENE	CMS-GW-MW11B-03	127-18-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW11B-03	135-98-8	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW11B-03	136777-61-2	210		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW11B-03	142-28-9	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW11B-03	156-59-2	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW11B-03	156-60-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW11B-03	541-73-1	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW11B-03	56-23-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW11B-03	593-58-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW11B-03	594-20-7	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW11B-03	690-20-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CHLOROFORM	CMS-GW-MW11B-03	67-66-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	BENZENE	CMS-GW-MW11B-03	71-43-2	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW11B-03	71-55-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	BROMOMETHANE	CMS-GW-MW11B-03	74-83-9	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CHLOROMETHANE	CMS-GW-MW11B-03	74-87-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	DIBROMOMETHANE	CMS-GW-MW11B-03	74-95-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW11B-03	74-97-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	CHLOROETHANE	CMS-GW-MW11B-03	75-00-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	VINYL CHLORIDE	CMS-GW-MW11B-03	75-01-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	METHYLENE CHLORIDE	CMS-GW-MW11B-03	75-09-2	210		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	BROMOFORM	CMS-GW-MW11B-03	75-25-2	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW11B-03	75-27-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW11B-03	75-34-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW11B-03	75-35-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW11B-03	75-69-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW11B-03	75-71-9	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW11B-03	78-87-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW11B-03	79-00-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TRICHLOROETHENE	CMS-GW-MW11B-03	79-01-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW11B-03	79-34-5	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW11B-03	87-61-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW11B-03	87-68-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	NAPHTHALENE	CMS-GW-MW11B-03	91-20-3	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	O-XYLENE	CMS-GW-MW11B-03	95-47-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	2-CHLOROTOLUENE	CMS-GW-MW11B-03	95-49-8	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW11B-03	95-50-1	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW11B-03	95-63-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW11B-03	96-12-8	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW11B-03	96-18-4	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW11B-03	98-06-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	ISOPROPYLBENZENE	CMS-GW-MW11B-03	98-82-8	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW11B-03	99-87-6	110		UG/L	CJ250362	STL Pittsburgh	CJ250362026		25-Oct-02	27-Oct-02	27-Oct-02

HSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOST	COMMENTS	DUVIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW11B-03	8260B				1	100			2/N			
CMS-GW-MW11B-03	8260B				1	100			2/N			
CMS-GW-MW11B-03	8260B				1	100			2/N			
CMS-GW-MW11B-03	8260B				1	100			2/N			
CMS-GW-MW11B-03	8260B	0.072	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.067	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.22	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.089	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.11	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.18	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.25	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.12	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.064	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.14	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.15	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.32	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.12	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.15	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.21	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.078	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.2	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.12	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.13	2		1	100			2/N	2/U		
CMS-GW-MW11B-03	8260B	0.17	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.38	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.31	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.11	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.31	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.13	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.2	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.17	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.17	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.062	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.27	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.3	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.28	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.19	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.19	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.2	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.14	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.15	2		1	100			2/N	2/U		
CMS-GW-MW11B-03	8260B	0.3	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.13	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.22	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.36	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.43	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.66	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.15	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.13	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.067	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.29	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.25	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.72	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.31	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.083	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.26	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.11	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.044	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.9	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.38	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.13	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.068	1		1	100			2/N	1/U		
CMS-GW-MW11B-03	8260B	0.14	1		1	100			2/N	1/U		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW11B-03MSD	OV	TOLUENE-D8	CMS-GW-MW11B-03MSD	2037-26-5	86		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW11B-03MSD	17060-07-0	113		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW11B-03MSD	480-00-4	99		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW11B-03MSD	1866-53-7	106		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	ETHYLENE	CMS-GW-MW11B-03MSD	100-41-4	97		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	STYRENE	CMS-GW-MW11B-03MSD	100-42-5	102		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW11B-03MSD	10061-01-5	112		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW11B-03MSD	10061-02-6	111		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	N-PROPYLBENZENE	CMS-GW-MW11B-03MSD	103-65-1	101		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	N-BUTYLBENZENE	CMS-GW-MW11B-03MSD	104-51-8	129		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	4-CHLOROTOLUENE	CMS-GW-MW11B-03MSD	106-43-4	104		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,4-DICHLOROBENZENE	CMS-GW-MW11B-03MSD	106-46-7	103		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DIBROMOETHANE	CMS-GW-MW11B-03MSD	106-93-4	108		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DICHLOROETHANE	CMS-GW-MW11B-03MSD	107-08-2	118		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW11B-03MSD	106-87-6	111		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	BROMOBENZENE	CMS-GW-MW11B-03MSD	106-88-1	97		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TOLUENE	CMS-GW-MW11B-03MSD	106-88-3	103		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CHLOROBENZENE	CMS-GW-MW11B-03MSD	106-90-7	97		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW11B-03MSD	120-82-1	135		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW11B-03MSD	124-48-1	108		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TETRACHLOROETHENE	CMS-GW-MW11B-03MSD	127-18-4	107		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	SEC-BUTYLBENZENE	CMS-GW-MW11B-03MSD	135-98-8	119		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	M-XYLENE & P-XYLENE	CMS-GW-MW11B-03MSD	136777-61-2	97		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,3-DICHLOROPROPANE	CMS-GW-MW11B-03MSD	142-28-9	102		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW11B-03MSD	156-59-2	104		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW11B-03MSD	156-60-5	100		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,3-DICHLOROBENZENE	CMS-GW-MW11B-03MSD	154-73-1	102		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CARBON TETRACHLORIDE	CMS-GW-MW11B-03MSD	56-23-5	126		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1-DICHLOROPROPENE	CMS-GW-MW11B-03MSD	562-58-6	108		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DICHLOROPROPANE	CMS-GW-MW11B-03MSD	584-20-7	133		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW11B-03MSD	630-20-3	110		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CHLOROFORM	CMS-GW-MW11B-03MSD	67-66-3	112		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	BENZENE	CMS-GW-MW11B-03MSD	71-43-2	96		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW11B-03MSD	71-55-6	128		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	BROMOMETHANE	CMS-GW-MW11B-03MSD	74-83-9	103		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CHLOROMETHANE	CMS-GW-MW11B-03MSD	74-87-3	66		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	DIBROMOMETHANE	CMS-GW-MW11B-03MSD	74-95-3	111		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	BROMOCHLOROMETHANE	CMS-GW-MW11B-03MSD	74-97-5	110		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	CHLOROETHANE	CMS-GW-MW11B-03MSD	75-00-3	45 N		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	VINYL CHLORIDE	CMS-GW-MW11B-03MSD	75-01-4	74		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	METHYLENE CHLORIDE	CMS-GW-MW11B-03MSD	75-09-2	95		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	BROMOFORM	CMS-GW-MW11B-03MSD	75-25-2	123		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	BROMODICHLOROMETHANE	CMS-GW-MW11B-03MSD	75-27-4	110		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1-DICHLOROETHANE	CMS-GW-MW11B-03MSD	75-34-3	92		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1-DICHLOROETHANE	CMS-GW-MW11B-03MSD	75-35-4	96		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW11B-03MSD	75-69-4	95		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW11B-03MSD	75-71-8	91		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DICHLOROPROPANE	CMS-GW-MW11B-03MSD	78-57-2	92		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW11B-03MSD	79-00-5	100		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TRICHLOROETHENE	CMS-GW-MW11B-03MSD	79-01-6	122		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW11B-03MSD	79-34-5	95		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW11B-03MSD	87-61-6	139		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	HEXACHLOROBUTADIENE	CMS-GW-MW11B-03MSD	87-68-3	191 N		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	NAPHTHALENE	CMS-GW-MW11B-03MSD	91-20-3	133		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	O-XYLENE	CMS-GW-MW11B-03MSD	95-47-6	101		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	2-CHLOROTOLUENE	CMS-GW-MW11B-03MSD	95-48-8	98		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DICHLOROBENZENE	CMS-GW-MW11B-03MSD	95-50-1	101		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW11B-03MSD	95-63-6	111		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW11B-03MSD	96-12-8	130		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW11B-03MSD	96-18-4	115		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	TERT-BUTYLBENZENE	CMS-GW-MW11B-03MSD	98-06-6	118		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	ISOPROPYLBENZENE	CMS-GW-MW11B-03MSD	98-82-8	107		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MSD	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW11B-03MSD	99-87-6	122		PCT_REC		C2J250362	STL Pittsburgh	C2J250362026D	25-Oct-02	27-Oct-02	27-Oct-02

INSAMPLE	METHOD	MDL	IDL	ORDL_ORGL	DIL_FACTOR	PCT_MOST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW11B-03MSD	8260B					1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B					1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B					1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B					1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.072	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.067	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.22	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.069	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.11	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.16	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.26	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.12	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.064	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.14	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.15	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.32	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.12	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.15	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.21	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.078	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.2	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.12	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.13	2			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.17	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.38	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.31	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.11	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.31	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.2	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.17	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.17	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.062	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.27	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.3	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.26	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.19	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.19	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.2	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.14	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.15	2			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.3	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.22	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.38	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.43	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.66	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.15	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.067	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.29	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.25	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.72	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.31	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.083	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.26	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.11	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.044	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.8	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.38	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.068	1			1	100		2MSD			
CMS-GW-MW11B-03MSD	8260B	0.14	1			1	100		2MSD			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW11B-03MS	OV	TOLUENE-D8	CMS-GW-MW11B-03MS	2037-26-5		93	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW11B-03MS	17060-07-0		103	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW11B-03MS	480-00-4		102	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW11B-03MS	1868-53-7		99	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	ETHYLBENZENE	CMS-GW-MW11B-03MS	100-41-4		105	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	STYRENE	CMS-GW-MW11B-03MS	100-42-5		106	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW11B-03MS	10061-01-5		111	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW11B-03MS	10061-02-6		116	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	N-PROPYLBENZENE	CMS-GW-MW11B-03MS	103-65-1		107	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	N-BUTYLBENZENE	CMS-GW-MW11B-03MS	104-51-8		137	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	4-CHLOROTOLUENE	CMS-GW-MW11B-03MS	106-43-4		113	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,4-DICHLOROBENZENE	CMS-GW-MW11B-03MS	106-46-7		104	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2-DIBROMOETHANE	CMS-GW-MW11B-03MS	106-93-4		114	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2-DICHLOROETHANE	CMS-GW-MW11B-03MS	107-06-2		114	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW11B-03MS	108-67-8		115	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	BROMOBENZENE	CMS-GW-MW11B-03MS	106-96-1		98	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TOLUENE	CMS-GW-MW11B-03MS	108-88-3		113	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CHLOROBENZENE	CMS-GW-MW11B-03MS	108-90-7		103	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW11B-03MS	120-82-1		132	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW11B-03MS	124-48-1		114	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TETRACHLOROETHENE	CMS-GW-MW11B-03MS	127-18-4		114	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	SEC-BUTYLBENZENE	CMS-GW-MW11B-03MS	135-98-8		124	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	M-XYLENE & P-XYLENE	CMS-GW-MW11B-03MS	136777-61-2		107	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,3-DICHLOROPROPANE	CMS-GW-MW11B-03MS	142-28-9		105	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW11B-03MS	156-59-2		110	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW11B-03MS	156-60-5		103	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,3-DICHLOROBENZENE	CMS-GW-MW11B-03MS	541-73-1		105	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CARBON TETRACHLORIDE	CMS-GW-MW11B-03MS	56-23-5		138	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1-DICHLOROPROPENE	CMS-GW-MW11B-03MS	563-59-6		112	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	2,2-DICHLOROPROPANE	CMS-GW-MW11B-03MS	594-20-7		134	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1,1,3-TETRACHLOROETHANE	CMS-GW-MW11B-03MS	630-20-6		122	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CHLOROPROPANE	CMS-GW-MW11B-03MS	67-66-3		112	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	BENZENE	CMS-GW-MW11B-03MS	71-43-2		99	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW11B-03MS	71-55-6		129	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	BROMOMETHANE	CMS-GW-MW11B-03MS	74-83-9		104	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CHLOROMETHANE	CMS-GW-MW11B-03MS	74-87-3		70	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	DIBROMOMETHANE	CMS-GW-MW11B-03MS	74-95-3		107	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	BROMOCHLOROMETHANE	CMS-GW-MW11B-03MS	74-97-5		110	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	CHLOROETHANE	CMS-GW-MW11B-03MS	75-00-3		47	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	VINYL CHLORIDE	CMS-GW-MW11B-03MS	75-01-4		79	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	METHYLENE CHLORIDE	CMS-GW-MW11B-03MS	75-09-2		92	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	BROMOFORM	CMS-GW-MW11B-03MS	75-25-2		120	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	BROMODICHLOROMETHANE	CMS-GW-MW11B-03MS	75-27-4		115	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1-DICHLOROETHANE	CMS-GW-MW11B-03MS	75-34-3		97	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1-DICHLOROETHENE	CMS-GW-MW11B-03MS	75-35-4		106	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW11B-03MS	75-69-4		86	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW11B-03MS	75-71-8		87	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2-DICHLOROPROPANE	CMS-GW-MW11B-03MS	76-87-5		96	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW11B-03MS	79-00-5		106	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TRICHLOROETHENE	CMS-GW-MW11B-03MS	79-01-6		123	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW11B-03MS	79-34-5		98	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW11B-03MS	87-61-6		147	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	HEXACHLOROBUTADIENE	CMS-GW-MW11B-03MS	87-68-3		191	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	NAPHTHALENE	CMS-GW-MW11B-03MS	91-20-3		130	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	O-XYLENE	CMS-GW-MW11B-03MS	96-47-6		109	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	2-CHLOROTOLUENE	CMS-GW-MW11B-03MS	95-49-8		103	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2-DICHLOROBENZENE	CMS-GW-MW11B-03MS	95-50-1		101	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW11B-03MS	95-63-6		115	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW11B-03MS	96-12-6		126	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW11B-03MS	96-18-4		116	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	TERT-BUTYLBENZENE	CMS-GW-MW11B-03MS	98-06-6		126	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	ISOPROPYLBENZENE	CMS-GW-MW11B-03MS	98-82-8		120	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11B-03MS	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW11B-03MS	99-87-6		131	PCT_REC	CJ250362	STL Pittsburgh	CJ250362026S		25-Oct-02	27-Oct-02	27-Oct-02

IN SAMPLE	METHOD	MDL	IDL	ORCL	ORCL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB	QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW11B-03MS	8260B						1	100			2MS			
CMS-GW-MW11B-03MS	8260B						1	100			2MS			
CMS-GW-MW11B-03MS	8260B						1	100			2MS			
CMS-GW-MW11B-03MS	8260B						1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.072	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.067	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.22	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.060	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.11	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.16	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.25	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.12	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.084	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.14	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.15	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.32	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.12	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.15	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.21	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.078	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.2	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.12	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.13	2				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.17	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.38	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.31	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.11	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.31	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.10	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.2	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.17	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.17	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.082	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.27	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.3	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.28	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.19	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.19	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.2	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.14	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.15	2				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.3	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.10	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.22	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.38	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.43	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.66	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.15	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.13	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.067	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.29	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.25	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.72	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.31	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.083	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.26	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.11	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.044	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.8	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.38	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.13	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.088	1				1	100			2MS			
CMS-GW-MW11B-03MS	8260B	0.14	1				1	100			2MS			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW11M-03	OV	TOLUENE-D8	CMS-GW-MW11M-03	2037-26-5	88		PCCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW11M-03	17060-07-0	122		PCCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW11M-03	460-00-4	107		PCCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW11M-03	1868-53-7	112		PCCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	ETHYLBENZENE	CMS-GW-MW11M-03	100-41-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	STYRENE	CMS-GW-MW11M-03	100-42-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW11M-03	10061-01-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW11M-03	10061-02-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	N-PROPYLBENZENE	CMS-GW-MW11M-03	103-85-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	N-BUTYLBENZENE	CMS-GW-MW11M-03	104-51-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	4-CHLOROTOLUENE	CMS-GW-MW11M-03	106-43-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW11M-03	106-48-7	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW11M-03	106-93-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW11M-03	107-06-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW11M-03	108-67-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	BROMOBENZENE	CMS-GW-MW11M-03	108-86-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TOLUENE	CMS-GW-MW11M-03	108-88-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CHLOROBENZENE	CMS-GW-MW11M-03	108-90-7	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW11M-03	120-82-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW11M-03	124-46-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TETRACHLOROETHENE	CMS-GW-MW11M-03	127-18-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW11M-03	135-98-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW11M-03	136777-81-2	2U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW11M-03	142-28-9	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW11M-03	156-59-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW11M-03	156-60-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW11M-03	541-73-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW11M-03	56-23-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW11M-03	563-55-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW11M-03	584-20-7	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW11M-03	630-20-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CHLOROFORM	CMS-GW-MW11M-03	67-68-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	BENZENE	CMS-GW-MW11M-03	71-43-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW11M-03	71-55-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	BROMOMETHANE	CMS-GW-MW11M-03	74-83-9	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CHLOROMETHANE	CMS-GW-MW11M-03	74-87-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	DIBROMOMETHANE	CMS-GW-MW11M-03	74-95-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW11M-03	74-97-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	CHLOROETHANE	CMS-GW-MW11M-03	75-00-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	VINYL CHLORIDE	CMS-GW-MW11M-03	75-01-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	METHYLENE CHLORIDE	CMS-GW-MW11M-03	75-08-2	2U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	BROMOFORM	CMS-GW-MW11M-03	75-25-2	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW11M-03	75-27-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW11M-03	75-34-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW11M-03	75-35-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW11M-03	75-69-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW11M-03	75-71-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW11M-03	78-87-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW11M-03	79-00-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TRICHLOROETHENE	CMS-GW-MW11M-03	79-01-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW11M-03	79-34-5	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW11M-03	87-61-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW11M-03	87-68-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	NAPHTHALENE	CMS-GW-MW11M-03	91-20-3	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	O-XYLENE	CMS-GW-MW11M-03	95-47-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	2-CHLOROTOLUENE	CMS-GW-MW11M-03	95-49-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW11M-03	95-50-1	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW11M-03	95-63-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW11M-03	96-12-8	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW11M-03	96-18-4	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW11M-03	98-06-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	ISOPROPYLBENZENE	CMS-GW-MW11M-03	98-82-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	
CMS-GW-MW11M-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW11M-03	99-87-6	1U		UG/L	CJ2J250362	STL Pittsburgh	CJ2J250362027	25-Oct-02	27-Oct-02	27-Oct-02	

IN.SAMPLE	METHOD	MDL	REL	CRDL_CRCL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW11M-03	8260B					1	100		2N			
CMS-GW-MW11M-03	8260B					1	100		2N			
CMS-GW-MW11M-03	8260B					1	100		2N			
CMS-GW-MW11M-03	8260B					1	100		2N			
CMS-GW-MW11M-03	8260B	0.072	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.067	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.22	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.069	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.11	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.16	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.26	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.12	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.064	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.14	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.15	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.32	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.12	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.16	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.21	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.078	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.2	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.12	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.13	2			1	100		2N	2U		
CMS-GW-MW11M-03	8260B	0.17	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.38	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.31	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.11	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.31	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.13	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.2	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.17	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.17	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.082	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.27	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.3	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.26	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.19	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.19	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.2	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.14	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.15	2			1	100		2N	2U		
CMS-GW-MW11M-03	8260B	0.3	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.13	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.22	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.36	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.43	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.66	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.15	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.13	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.087	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.29	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.26	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.72	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.31	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.083	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.26	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.11	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.044	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.8	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.38	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.13	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.068	1			1	100		2N	1U		
CMS-GW-MW11M-03	8260B	0.14	1			1	100		2N	1U		

INSAMPLE	CLASS	PARAMETER	FPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW12D-03	OV	TOLUENE-06	CMS-GW-MW12D-03	2037-26-5	98		PCT_REC	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2-DICHLOROETHANE-04	CMS-GW-MW12D-03	17060-07-0	93		PCT_REC	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW12D-03	460-00-4	93		PCT_REC	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW12D-03	1888-53-7	88		PCT_REC	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	ETHYLBENZENE	CMS-GW-MW12D-03	100-41-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	STYHENE	CMS-GW-MW12D-03	100-42-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW12D-03	10061-01-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW12D-03	10061-02-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	N-PROPYLBENZENE	CMS-GW-MW12D-03	103-65-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	N-BUTYLBENZENE	CMS-GW-MW12D-03	104-51-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	4-CHLOROTOLUENE	CMS-GW-MW12D-03	106-43-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW12D-03	106-46-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW12D-03	106-93-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW12D-03	107-06-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW12D-03	108-67-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	BROMOBENZENE	CMS-GW-MW12D-03	108-96-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TOLUENE	CMS-GW-MW12D-03	108-98-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CHLOROBENZENE	CMS-GW-MW12D-03	108-90-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW12D-03	120-82-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW12D-03	124-48-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TETRACHLOROETHENE	CMS-GW-MW12D-03	127-18-4	0.64 J		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW12D-03	135-98-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW12D-03	136777-61-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW12D-03	142-28-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW12D-03	156-59-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW12D-03	156-60-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW12D-03	541-73-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW12D-03	56-23-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1-DICHLOROPROPANE	CMS-GW-MW12D-03	593-59-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW12D-03	594-20-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW12D-03	600-20-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CHLOROFORM	CMS-GW-MW12D-03	67-66-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	BENZENE	CMS-GW-MW12D-03	71-43-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW12D-03	71-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	BROMOMETHANE	CMS-GW-MW12D-03	74-83-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CHLOROMETHANE	CMS-GW-MW12D-03	74-87-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	DIBROMOMETHANE	CMS-GW-MW12D-03	74-95-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW12D-03	74-97-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	CHLOROETHANE	CMS-GW-MW12D-03	75-00-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	VINYL CHLORIDE	CMS-GW-MW12D-03	75-01-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	METHYLENE CHLORIDE	CMS-GW-MW12D-03	75-09-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	BROMOFORM	CMS-GW-MW12D-03	75-25-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW12D-03	75-27-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW12D-03	75-34-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW12D-03	75-35-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW12D-03	75-69-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW12D-03	75-71-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW12D-03	76-87-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW12D-03	79-00-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TRICHLOROETHENE	CMS-GW-MW12D-03	79-01-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW12D-03	79-34-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW12D-03	87-61-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW12D-03	87-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	NAPHTHALENE	CMS-GW-MW12D-03	91-20-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	O-XYLENE	CMS-GW-MW12D-03	95-47-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	2-CHLOROTOLUENE	CMS-GW-MW12D-03	95-49-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW12D-03	95-50-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW12D-03	95-63-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW12D-03	96-12-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW12D-03	96-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW12D-03	98-06-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	ISOPROPYLBENZENE	CMS-GW-MW12D-03	98-82-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW12D-03	99-87-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362028		25-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRDL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW12D-03	8260B					1	100		2N				
CMS-GW-MW12D-03	8260B					1	100		2N				
CMS-GW-MW12D-03	8260B					1	100		2N				
CMS-GW-MW12D-03	8260B					1	100		2N				
CMS-GW-MW12D-03	8260B	0.072	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.067	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.069	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.18	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.25	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.084	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.14	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.32	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.21	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.076	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.2	1			1	100		2N		0.64U		
CMS-GW-MW12D-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.13	2			1	100		2N		2U		
CMS-GW-MW12D-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.082	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.27	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.28	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.14	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.15	2			1	100		2N		2U		
CMS-GW-MW12D-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.36	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.43	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.66	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.087	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.29	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.25	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.72	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.083	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.26	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.044	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.9	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.36	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.088	1			1	100		2N		1U		
CMS-GW-MW12D-03	8260B	0.14	1			1	100		2N		1U		

SAMPLE	CLASS	PARAMETER	EPASANO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW12D-03MSD	OV	TOLUENE-D8	CMS-GW-MW12D-03MSD	2037-26-5	96		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DICHLOROETHANE D4	CMS-GW-MW12D-03MSD	17060-07-0	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW12D-03MSD	460-00-4	96		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW12D-03MSD	1868-53-7	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	ETHYLBENZENE	CMS-GW-MW12D-03MSD	100-41-4	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	STYRENE	CMS-GW-MW12D-03MSD	100-42-5	103		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW12D-03MSD	10661-01-5	104		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW12D-03MSD	10661-02-5	107		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	N-PROPYLBENZENE	CMS-GW-MW12D-03MSD	103-65-1	96		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	N-BUTYLBENZENE	CMS-GW-MW12D-03MSD	104-61-6	102		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	4-CHLOROTOLUENE	CMS-GW-MW12D-03MSD	105-40-4	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,4-DICHLOROBENZENE	CMS-GW-MW12D-03MSD	106-46-7	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DIBROMOETHANE	CMS-GW-MW12D-03MSD	106-93-4	106		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DICHLOROETHANE	CMS-GW-MW12D-03MSD	107-06-2	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW12D-03MSD	108-67-8	99		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	BROMOBENZENE	CMS-GW-MW12D-03MSD	106-56-1	95		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TOLUENE	CMS-GW-MW12D-03MSD	108-98-3	124-N		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CHLOROBENZENE	CMS-GW-MW12D-03MSD	108-90-7	99		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW12D-03MSD	120-82-1	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW12D-03MSD	124-48-1	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TETRACHLOROETHENE	CMS-GW-MW12D-03MSD	127-18-4	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	SEC-BUTYLBENZENE	CMS-GW-MW12D-03MSD	135-98-8	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	M-XYLENE & P-XYLENE	CMS-GW-MW12D-03MSD	136777-61-2	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,3-DICHLOROPROPANE	CMS-GW-MW12D-03MSD	142-28-9	109		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW12D-03MSD	156-59-2	97		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW12D-03MSD	158-90-5	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,3-DICHLOROBENZENE	CMS-GW-MW12D-03MSD	541-79-1	97		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CARBON TETRACHLORIDE	CMS-GW-MW12D-03MSD	56-23-5	97		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1-DICHLOROPROPENE	CMS-GW-MW12D-03MSD	563-59-8	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DICHLOROPROPANE	CMS-GW-MW12D-03MSD	594-20-7	95		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW12D-03MSD	630-20-5	102		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CHLOROPYRAS	CMS-GW-MW12D-03MSD	87-56-3	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	BENZENE	CMS-GW-MW12D-03MSD	71-43-2	99		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW12D-03MSD	71-55-6	97		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	BROMOMETHANE	CMS-GW-MW12D-03MSD	74-83-9	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CHLOROMETHANE	CMS-GW-MW12D-03MSD	74-87-3	116		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	DIBROMOMETHANE	CMS-GW-MW12D-03MSD	74-95-3	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	BROMOCHLOROMETHANE	CMS-GW-MW12D-03MSD	74-97-5	102		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	CHLOROETHANE	CMS-GW-MW12D-03MSD	75-00-3	76		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	VINYL CHLORIDE	CMS-GW-MW12D-03MSD	75-01-4	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	METHYLENE CHLORIDE	CMS-GW-MW12D-03MSD	75-09-2	93		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	BROMOFORM	CMS-GW-MW12D-03MSD	75-25-2	103		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	BROMODICHLOROMETHANE	CMS-GW-MW12D-03MSD	75-27-4	102		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1-DICHLOROETHANE	CMS-GW-MW12D-03MSD	75-34-3	98		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1-DICHLOROETHENE	CMS-GW-MW12D-03MSD	75-35-4	104		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW12D-03MSD	75-69-4	91		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW12D-03MSD	75-71-6	103		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DICHLOROPROPANE	CMS-GW-MW12D-03MSD	75-87-5	104		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW12D-03MSD	79-00-0	110		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TRICHLOROETHENE	CMS-GW-MW12D-03MSD	79-01-6	109		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW12D-03MSD	79-34-5	103		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW12D-03MSD	87-61-6	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	HEXACHLOROBUTADIENE	CMS-GW-MW12D-03MSD	87-69-3	96		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	NAPHTHALENE	CMS-GW-MW12D-03MSD	81-20-3	103		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	O-XYLENE	CMS-GW-MW12D-03MSD	95-47-6	102		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	2-CHLOROTOLUENE	CMS-GW-MW12D-03MSD	95-49-8	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DICHLOROBENZENE	CMS-GW-MW12D-03MSD	95-50-1	99		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW12D-03MSD	95-83-6	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW12D-03MSD	96-12-8	110		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW12D-03MSD	96-18-4	113		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	TERT-BUTYLBENZENE	CMS-GW-MW12D-03MSD	98-06-8	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	ISOPROPYLBENZENE	CMS-GW-MW12D-03MSD	98-82-8	101		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	
CMS-GW-MW12D-03MSD	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW12D-03MSD	98-87-6	100		PCT_REC	CJ2J250362	STL Pittsburgh	CJ2J250362028D	25-Oct-02	28-Oct-02	28-Oct-02	

INSAMPLE	METHOD	MDL	IDL	CRCL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTRIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW12D-03MSD	8260B					1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B					1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B					1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B					1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.072	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.067	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.22	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.068	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.11	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.16	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.25	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.12	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.064	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.14	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.15	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.32	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.12	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.15	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.21	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.076	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.2	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.12	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.13	2			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.17	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.38	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.31	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.11	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.31	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.2	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.17	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.17	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.082	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.27	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.3	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.28	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.19	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.19	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.2	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.14	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.15	2			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.3	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.22	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.38	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.43	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.66	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.15	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.087	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.29	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.25	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.72	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.31	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.083	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.26	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.11	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.044	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.8	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.38	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.13	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.088	1			1	100		2MSD			
CMS-GW-MW12D-03MSD	8260B	0.14	1			1	100		2MSD			

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	LOASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW12D-03MS	OV	TOLUENE-DR	CMS-GW-MW12D-03MS	2037-26-5	97	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW12D-03MS	17060-07-0	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW12D-03MS	460-00-4	97	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW12D-03MS	1858-53-7	94	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	ETHYLBENZENE	CMS-GW-MW12D-03MS	100-41-4	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	STYRENE	CMS-GW-MW12D-03MS	100-42-5	101	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CIS 1,3-DICHLOROPROPENE	CMS-GW-MW12D-03MS	10061-01-5	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	TRANS 1,3-DICHLOROPROPENE	CMS-GW-MW12D-03MS	10061-02-6	104	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	N-PROPYLBENZENE	CMS-GW-MW12D-03MS	103-65-1	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	N-BUTYLBENZENE	CMS-GW-MW12D-03MS	104-51-8	102	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	4-CHLOROTOLUENE	CMS-GW-MW12D-03MS	106-43-4	96	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,4-DICHLOROBENZENE	CMS-GW-MW12D-03MS	106-46-7	95	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2-DIBROMOETHANE	CMS-GW-MW12D-03MS	106-93-4	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2-DICHLOROETHANE	CMS-GW-MW12D-03MS	107-06-2	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW12D-03MS	108-67-8	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	BROMOBENZENE	CMS-GW-MW12D-03MS	108-96-1	96	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	TOLUENE	CMS-GW-MW12D-03MS	108-88-3	124	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CHLOROBENZENE	CMS-GW-MW12D-03MS	108-90-7	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW12D-03MS	120-82-1	94	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW12D-03MS	124-48-1	101	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	TETRACHLOROETHENE	CMS-GW-MW12D-03MS	127-18-4	107	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	SEC-BUTYLBENZENE	CMS-GW-MW12D-03MS	135-98-8	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	M-XYLENE & P-XYLENE	CMS-GW-MW12D-03MS	136777-61-2	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,3-DICHLOROPROPANE	CMS-GW-MW12D-03MS	142-28-9	104	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CIS 1,2-DICHLOROETHENE	CMS-GW-MW12D-03MS	156-59-2	97	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	TRANS 1,2-DICHLOROETHENE	CMS-GW-MW12D-03MS	156-60-5	101	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,3-DICHLOROBENZENE	CMS-GW-MW12D-03MS	541-73-1	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CARBON TETRACHLORIDE	CMS-GW-MW12D-03MS	56-23-5	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1-DICHLOROPROPENE	CMS-GW-MW12D-03MS	563-59-6	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	2,2-DICHLOROPROPANE	CMS-GW-MW12D-03MS	564-20-7	102	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW12D-03MS	8330-20-6	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CHLOROFORM	CMS-GW-MW12D-03MS	67-66-3	104	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	BENZENE	CMS-GW-MW12D-03MS	71-43-2	101	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW12D-03MS	71-55-6	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	BROMOMETHANE	CMS-GW-MW12D-03MS	74-83-9	98	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CHLOROMETHANE	CMS-GW-MW12D-03MS	74-87-3	118	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	DIBROMOMETHANE	CMS-GW-MW12D-03MS	74-95-3	96	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	BROMOCHLOROMETHANE	CMS-GW-MW12D-03MS	74-97-5	102	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	CHLOROETHANE	CMS-GW-MW12D-03MS	75-00-3	81	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	VINYL CHLORIDE	CMS-GW-MW12D-03MS	75-01-4	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	METHYLENE CHLORIDE	CMS-GW-MW12D-03MS	75-09-2	93	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	BROMOFORM	CMS-GW-MW12D-03MS	75-25-2	103	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	BROMODICHLOROMETHANE	CMS-GW-MW12D-03MS	75-27-4	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1-DICHLOROETHANE	CMS-GW-MW12D-03MS	75-34-3	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1-DICHLOROETHENE	CMS-GW-MW12D-03MS	75-35-4	107	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW12D-03MS	75-69-4	95	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW12D-03MS	75-71-8	104	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2-DICHLOROPROPANE	CMS-GW-MW12D-03MS	76-87-5	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW12D-03MS	79-00-5	105	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	TRICHLOROETHENE	CMS-GW-MW12D-03MS	79-01-6	101	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW12D-03MS	79-34-5	97	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW12D-03MS	87-61-6	95	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	HEXACHLOROBUTADIENE	CMS-GW-MW12D-03MS	87-68-3	95	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	NAPHTHALENE	CMS-GW-MW12D-03MS	91-20-3	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	O-XYLENE	CMS-GW-MW12D-03MS	95-47-6	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	2-CHLOROTOLUENE	CMS-GW-MW12D-03MS	95-49-8	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2-DICHLOROBENZENE	CMS-GW-MW12D-03MS	95-50-1	96	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW12D-03MS	95-63-6	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW12D-03MS	96-12-8	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW12D-03MS	96-18-4	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	1-ETHYLBENZENE	CMS-GW-MW12D-03MS	98-06-6	100	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	ISOPROPYLBENZENE	CMS-GW-MW12D-03MS	98-82-8	102	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02
CMS-GW-MW12D-03MS	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW12D-03MS	99-87-6	99	PCT_REC			CJ2J250362	STL Pittsburgh	CJ2J2503620285	25-Oct-02	28-Oct-02	28-Oct-02

INSAMPLE	METHOD	MDL	IDL	ORDL_ORGL	DIL_FACTOR	PCT_MOIST	COMMENTS	DTYIER	LAB	QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW12D-03MS	8260B					1	100			2MS			
CMS-GW-MW12D-03MS	8260B					1	100			2MS			
CMS-GW-MW12D-03MS	8260B					1	100			2MS			
CMS-GW-MW12D-03MS	8260B					1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.072	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.067	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.22	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.069	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.11	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.16	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.25	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.12	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.084	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.14	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.15	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.32	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.12	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.18	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.21	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.078	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.2	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.12	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.13	2			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.17	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.36	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.31	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.11	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.31	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.13	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.2	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.17	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.17	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.082	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.27	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.3	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.28	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.19	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.19	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.2	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.14	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.15	2			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.3	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.13	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.22	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.38	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.43	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.66	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.15	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.13	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.067	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.29	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.25	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.72	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.31	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.083	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.26	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.11	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.044	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.8	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.39	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.13	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.069	1			1	100			2MS			
CMS-GW-MW12D-03MS	8260B	0.14	1			1	100			2MS			

NSAMPLE	CLASS	PARAMETER	EPAASMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-MW12B-03	OV	TOLUENE-D8	CMS-GW-MW12B-03	2037-26-5	91		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW12B-03	17060-07-0	121		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW12B-03	460-00-4	110		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW12B-03	1868-93-7	110		PCT_REC		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	ETHYLBENZENE	CMS-GW-MW12B-03	100-41-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	STYRENE	CMS-GW-MW12B-03	100-42-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW12B-03	10061-01-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW12B-03	10061-02-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	N-PROPYLBENZENE	CMS-GW-MW12B-03	103-65-1	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	N-BUTYLBENZENE	CMS-GW-MW12B-03	104-51-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	4-CHLOROTOLUENE	CMS-GW-MW12B-03	106-43-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW12B-03	106-46-7	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW12B-03	106-93-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW12B-03	107-06-2	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW12B-03	108-67-8	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	BROMOBENZENE	CMS-GW-MW12B-03	108-96-1	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TOLUENE	CMS-GW-MW12B-03	108-88-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CHLOROBENZENE	CMS-GW-MW12B-03	108-90-7	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW12B-03	120-82-1	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW12B-03	124-48-1	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TETRACHLOROETHENE	CMS-GW-MW12B-03	127-18-4	0.89 J		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW12B-03	135-98-8	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW12B-03	136777-61-2	2U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW12B-03	142-28-9	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW12B-03	156-59-2	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW12B-03	156-60-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW12B-03	141-73-1	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW12B-03	56-23-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1-DICHLOROPROPANE	CMS-GW-MW12B-03	593-59-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW12B-03	594-20-7	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW12B-03	630-20-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CHLOROFORM	CMS-GW-MW12B-03	67-66-3	0.26 J		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	BENZENE	CMS-GW-MW12B-03	71-43-2	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW12B-03	71-55-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	BROMOMETHANE	CMS-GW-MW12B-03	74-83-9	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CHLOROMETHANE	CMS-GW-MW12B-03	74-87-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	DIBROMOMETHANE	CMS-GW-MW12B-03	74-95-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW12B-03	74-97-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	CHLOROETHANE	CMS-GW-MW12B-03	75-00-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	VINYL CHLORIDE	CMS-GW-MW12B-03	75-01-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	METHYLENE CHLORIDE	CMS-GW-MW12B-03	75-09-2	2U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	BROMOFORM	CMS-GW-MW12B-03	75-25-2	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW12B-03	75-27-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW12B-03	75-34-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW12B-03	75-35-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW12B-03	75-69-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW12B-03	75-71-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW12B-03	78-87-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW12B-03	79-00-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TRICHLOROETHENE	CMS-GW-MW12B-03	79-01-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW12B-03	79-34-5	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW12B-03	87-61-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW12B-03	87-68-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	NAPHTHALENE	CMS-GW-MW12B-03	91-20-3	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	O-XYLENE	CMS-GW-MW12B-03	95-47-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	2-CHLOROTOLUENE	CMS-GW-MW12B-03	95-49-8	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW12B-03	95-50-1	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW12B-03	95-63-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW12B-03	96-12-8	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW12B-03	96-18-4	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW12B-03	96-06-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	ISOPROPYLBENZENE	CMS-GW-MW12B-03	98-82-8	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW12B-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW12B-03	99-87-6	1U		UG/L		CJ2J250362	STL Pittsburgh	CJ2J250362029	25-Oct-02	27-Oct-02	27-Oct-02

INSAMPLE	METHOD	MDL	IDL	CHOL	CHOL	DIL FACTOR	PCT MOIST	COMMENTS	DVTR	LAS_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW12B-03	8260B					1	100		2IN				
CMS-GW-MW12B-03	8260B					1	100		2IN				
CMS-GW-MW12B-03	8260B					1	100		2IN				
CMS-GW-MW12B-03	8260B					1	100		2IN				
CMS-GW-MW12B-03	8260B	0.072	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.067	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.22	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.069	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.11	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.16	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.25	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.12	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.084	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.14	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.15	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.32	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.12	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.15	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.21	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.078	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.2	1			1	100		2IN		0.29U		
CMS-GW-MW12B-03	8260B	0.12	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.13	2			1	100		2IN		2U		
CMS-GW-MW12B-03	8260B	0.17	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.38	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.31	1			1	100		2IN		1UJ		
CMS-GW-MW12B-03	8260B	0.11	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.31	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.2	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.17	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.17	1			1	100		2IN		0.25U		
CMS-GW-MW12B-03	8260B	0.082	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.27	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.3	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.28	1			1	100		2IN		1UJ		
CMS-GW-MW12B-03	8260B	0.19	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.19	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.2	1			1	100		2IN		1UJ		
CMS-GW-MW12B-03	8260B	0.14	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.15	2			1	100		2IN		2U		
CMS-GW-MW12B-03	8260B	0.3	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.22	1			1	100		2IN		1UJ		
CMS-GW-MW12B-03	8260B	0.36	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.43	1			1	100		2IN		1UJ		
CMS-GW-MW12B-03	8260B	0.66	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.15	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.067	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.29	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.25	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.72	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.31	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.083	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.26	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.11	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.044	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.8	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.36	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.13	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.068	1			1	100		2IN		1U		
CMS-GW-MW12B-03	8260B	0.14	1			1	100		2IN		1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
CMS-GW-GE03-03	OV	TOLUENE-D8	CMS-GW-GE03-03	2037-26-5	100		PCT_REC	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-GE03-03	17060-07-0	122		PCT_REC	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-GE03-03	460-00-4	116		PCT_REC	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-GE03-03	1868-53-7	115		PCT_REC	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	ETHYLBENZENE	CMS-GW-GE03-03	100-41-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	STYRENE	CMS-GW-GE03-03	100-42-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-GE03-03	10661-01-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-GE03-03	10061-02-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	N-PROPYLENE	CMS-GW-GE03-03	103-65-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	N-BUTYLENE	CMS-GW-GE03-03	104-61-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	4-CHLOROTOLUENE	CMS-GW-GE03-03	106-43-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,4-DICHLOROBENZENE	CMS-GW-GE03-03	106-46-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2-DIBROMOETHANE	CMS-GW-GE03-03	106-93-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROETHANE	CMS-GW-GE03-03	107-06-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-GE03-03	108-67-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	BROMOBENZENE	CMS-GW-GE03-03	108-86-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TOLUENE	CMS-GW-GE03-03	108-98-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CHLOROBENZENE	CMS-GW-GE03-03	108-90-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-GE03-03	120-82-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	DIBROMODICHLOROMETHANE	CMS-GW-GE03-03	124-48-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TETRACHLOROETHENE	CMS-GW-GE03-03	127-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	SEC-BUTYLBENZENE	CMS-GW-GE03-03	135-88-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	M-XYLENE & P-XYLENE	CMS-GW-GE03-03	136777-61-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,3-DICHLOROPROPANE	CMS-GW-GE03-03	142-28-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-GE03-03	156-59-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-GE03-03	158-60-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,3-DICHLOROBENZENE	CMS-GW-GE03-03	164-73-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CARBON TETRACHLORIDE	CMS-GW-GE03-03	56-23-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1-DICHLOROPROPANE	CMS-GW-GE03-03	552-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	2,2-DICHLOROPROPANE	CMS-GW-GE03-03	554-20-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-GE03-03	630-20-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CHLOROFORM	CMS-GW-GE03-03	67-66-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	BENZENE	CMS-GW-GE03-03	71-43-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-GE03-03	71-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	BROMOMETHANE	CMS-GW-GE03-03	74-83-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CHLOROMETHANE	CMS-GW-GE03-03	74-87-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	DIBROMOMETHANE	CMS-GW-GE03-03	74-95-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	BROMODICHLOROMETHANE	CMS-GW-GE03-03	74-97-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	CHLOROETHANE	CMS-GW-GE03-03	75-00-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	VINYL CHLORIDE	CMS-GW-GE03-03	75-01-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	METHYLENE CHLORIDE	CMS-GW-GE03-03	75-09-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	BROMOFORM	CMS-GW-GE03-03	75-25-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	BROMODICHLOROMETHANE	CMS-GW-GE03-03	75-27-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1-DICHLOROETHANE	CMS-GW-GE03-03	75-34-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1-DICHLOROETHENE	CMS-GW-GE03-03	75-35-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-GE03-03	75-69-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-GE03-03	75-71-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROPROPANE	CMS-GW-GE03-03	78-67-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-GE03-03	79-00-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TRICHLOROETHENE	CMS-GW-GE03-03	79-01-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-GE03-03	79-34-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-GE03-03	87-61-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	HEXACHLOROBUTADIENE	CMS-GW-GE03-03	87-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	NAPHTHALENE	CMS-GW-GE03-03	91-20-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	O-XYLENE	CMS-GW-GE03-03	95-47-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	2-CHLOROTOLUENE	CMS-GW-GE03-03	95-48-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2-DICHLOROBENZENE	CMS-GW-GE03-03	95-50-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-GE03-03	95-63-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-GE03-03	96-12-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-GE03-03	96-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	TERT-BUTYLBENZENE	CMS-GW-GE03-03	98-06-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	ISOPROPYLBENZENE	CMS-GW-GE03-03	98-82-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-GE03-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-GE03-03	99-87-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362030		25-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	OIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-GEC3-03	8260B					1	100		2IN			
CMS-GW-GEC3-03	8260B					1	100		2IN			
CMS-GW-GEC3-03	8260B					1	100		2IN			
CMS-GW-GEC3-03	8260B					1	100		2IN			
CMS-GW-GEC3-03	8260B	0.072	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.067	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.22	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.069	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.16	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.25	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.094	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.14	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.32	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.21	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.078	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.12	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.13	2			1	100		2IN		2U	
CMS-GW-GEC3-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.17	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.092	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.27	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.3	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.28	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.19	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.19	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.2	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.14	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.15	2			1	100		2IN		2U	
CMS-GW-GEC3-03	8260B	0.3	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.22	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.36	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.43	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.66	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.15	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.097	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.29	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.25	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.72	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.31	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.093	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.26	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.11	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.044	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.8	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.38	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.13	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.088	1			1	100		2IN		1U	
CMS-GW-GEC3-03	8260B	0.14	1			1	100		2IN		1U	

INSAMPLE	CLASS	PARAMETER	SPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW01S-03	OV	TOLUENE-D8	CMS-GW-MW01S-03	2037-26-5	90		PCT REC		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW01S-03	17060-07-0	112		PCT REC		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW01S-03	460-00-4	101		PCT REC		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW01S-03	1866-53-7	100		PCT REC		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	ETHYLBENZENE	CMS-GW-MW01S-03	100-41-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	STYRENE	CMS-GW-MW01S-03	100-42-5	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW01S-03	10051-01-5	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW01S-03	10051-02-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	N-PROPYLBENZENE	CMS-GW-MW01S-03	103-65-1	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	N-BUTYLBENZENE	CMS-GW-MW01S-03	104-51-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW01S-03	108-43-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW01S-03	106-46-7	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW01S-03	106-93-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW01S-03	107-06-2	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW01S-03	108-67-8	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	BROMOBENZENE	CMS-GW-MW01S-03	108-86-1	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TOLUENE	CMS-GW-MW01S-03	106-86-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CHLOROBENZENE	CMS-GW-MW01S-03	108-90-7	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW01S-03	120-82-1	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW01S-03	124-48-1	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TETRACHLOROETHENE	CMS-GW-MW01S-03	127-18-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW01S-03	135-98-8	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	MAXYLENE & P-XYLENE	CMS-GW-MW01S-03	136777-61-2	210		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW01S-03	142-26-9	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW01S-03	156-58-2	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW01S-03	156-60-5	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW01S-03	541-73-1	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW01S-03	56-23-5	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1-DICHLOROETHYLENE	CMS-GW-MW01S-03	583-68-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW01S-03	584-00-7	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW01S-03	630-20-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CHLOROFORM	CMS-GW-MW01S-03	67-66-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	BENZENE	CMS-GW-MW01S-03	71-43-2	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW01S-03	71-55-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	BROMOMETHANE	CMS-GW-MW01S-03	74-83-9	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CHLOROMETHANE	CMS-GW-MW01S-03	74-87-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	DIBROMOMETHANE	CMS-GW-MW01S-03	74-95-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW01S-03	74-97-5	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	CHLOROETHANE	CMS-GW-MW01S-03	75-00-9	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	VINYL CHLORIDE	CMS-GW-MW01S-03	75-01-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW01S-03	75-08-2	210		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	BROMOFORM	CMS-GW-MW01S-03	75-25-2	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW01S-03	75-27-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW01S-03	75-34-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW01S-03	75-35-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW01S-03	75-69-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	DICHLOROFLUOROMETHANE	CMS-GW-MW01S-03	75-71-8	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW01S-03	78-67-5	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW01S-03	79-00-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TRICHLOROETHENE	CMS-GW-MW01S-03	79-01-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW01S-03	79-34-8	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW01S-03	87-61-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW01S-03	87-68-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	NAFTHALENE	CMS-GW-MW01S-03	91-20-3	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	O-XYLENE	CMS-GW-MW01S-03	95-47-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW01S-03	95-49-8	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW01S-03	95-50-1	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW01S-03	95-63-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW01S-03	96-12-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW01S-03	96-18-4	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW01S-03	98-06-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW01S-03	98-82-8	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW01S-03	OV	IP-ISOPROPYLTOLUENE	CMS-GW-MW01S-03	99-87-6	110		UG/L		C2J250362	STL Pittsburgh	C2J250362031	25-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CORCL_CORCL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_OC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW01S-03	8260B				1	100			2N			
CMS-GW-MW01S-03	8260B				1	100			2N			
CMS-GW-MW01S-03	8260B				1	100			2N			
CMS-GW-MW01S-03	8260B				1	100			2N			
CMS-GW-MW01S-03	8260B	0.072	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.067	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.22	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.069	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.11	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.16	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.25	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.12	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.084	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.14	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.15	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.32	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.12	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.15	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.21	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.078	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.2	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.12	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.13	2		1	100			2N		2U	
CMS-GW-MW01S-03	8260B	0.17	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.36	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.31	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.11	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.31	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.13	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.2	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.17	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.17	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.062	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.27	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.3	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.28	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.19	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.19	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.2	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.14	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.15	2		1	100			2N		2U	
CMS-GW-MW01S-03	8260B	0.3	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.13	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.22	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.36	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.43	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.66	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.15	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.13	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.067	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.29	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.25	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.72	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.31	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.083	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.26	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.11	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.044	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.6	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.38	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.13	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.085	1		1	100			2N		1U	
CMS-GW-MW01S-03	8260B	0.14	1		1	100			2N		1U	

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTH DATE	ANAL DATE
CMS-GW-MW11S-03	OV	TOLUENE-D8	CMS-GW-MW11S-03	2037-26-5	99		PCT REC		C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW11S-03	17060-07-0	103		PCT REC		C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	4-BROMODIFLUOROBENZENE	CMS-GW-MW11S-03	480-00-4	106		PCT REC		C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	DIBROMODIFLUOROMETHANE	CMS-GW-MW11S-03	1868-53-7	106		PCT REC		C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	ETHYLBENZENE	CMS-GW-MW11S-03	100-41-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	STYRENE	CMS-GW-MW11S-03	100-42-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CIS 1,3-DICHLOROPROPENE	CMS-GW-MW11S-03	19061-01-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TRANS 1,3-DICHLOROPROPENE	CMS-GW-MW11S-03	10061-02-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	N-PROPYLBENZENE	CMS-GW-MW11S-03	103-85-1	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	N-BUTYLBENZENE	CMS-GW-MW11S-03	104-51-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	4-CHLOROTOLUENE	CMS-GW-MW11S-03	105-43-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW11S-03	106-46-7	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW11S-03	106-93-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW11S-03	107-06-2	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW11S-03	107-87-8	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	BROMOBENZENE	CMS-GW-MW11S-03	108-86-1	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TOLUENE	CMS-GW-MW11S-03	106-86-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CHLOROBENZENE	CMS-GW-MW11S-03	108-90-7	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW11S-03	120-82-1	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW11S-03	124-48-1	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TETRACHLOROETHENE	CMS-GW-MW11S-03	127-18-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW11S-03	135-98-8	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW11S-03	130777-61-2	210	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW11S-03	142-28-9	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CIS 1,2-DICHLOROETHENE	CMS-GW-MW11S-03	156-59-2	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TRANS 1,2-DICHLOROETHENE	CMS-GW-MW11S-03	156-60-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW11S-03	541-73-1	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW11S-03	56-23-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW11S-03	563-58-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	2,2-DIBROMOPROPANE	CMS-GW-MW11S-03	564-26-7	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW11S-03	630-20-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CHLOROFORM	CMS-GW-MW11S-03	67-66-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	BENZENE	CMS-GW-MW11S-03	71-43-2	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW11S-03	71-55-0	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	BROMOMETHANE	CMS-GW-MW11S-03	74-83-9	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CHLOROMETHANE	CMS-GW-MW11S-03	74-87-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	DIBROMOMETHANE	CMS-GW-MW11S-03	74-95-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW11S-03	74-97-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	CHLOROETHANE	CMS-GW-MW11S-03	75-00-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	VINYL CHLORIDE	CMS-GW-MW11S-03	75-01-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	METHYLENE CHLORIDE	CMS-GW-MW11S-03	75-08-2	210	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	BROMOFORM	CMS-GW-MW11S-03	75-25-2	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW11S-03	75-27-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW11S-03	75-34-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW11S-03	75-35-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TRICHLORODIFLUOROMETHANE	CMS-GW-MW11S-03	75-69-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW11S-03	75-71-8	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW11S-03	78-87-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW11S-03	79-00-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TRICHLOROETHENE	CMS-GW-MW11S-03	79-01-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW11S-03	79-34-5	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW11S-03	87-61-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW11S-03	87-68-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	NAPHTHALENE	CMS-GW-MW11S-03	91-20-3	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	O-XYLENE	CMS-GW-MW11S-03	95-47-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	2-CHLOROTOLUENE	CMS-GW-MW11S-03	95-49-8	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW11S-03	95-50-1	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW11S-03	95-63-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW11S-03	96-12-8	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW11S-03	96-18-4	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW11S-03	98-06-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	ISOPROPYLBENZENE	CMS-GW-MW11S-03	98-82-8	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02
CMS-GW-MW11S-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW11S-03	99-87-6	110	UG/L			C2J250362	STL Pittsburgh	C2J250362032	25-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRCL_CRCL	DIL_FACTOR	PCT_MOIST	COMMENTS	DIYIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW11S-03	8260B				1	100			2IN			
CMS-GW-MW11S-03	8260B				1	100			2IN			
CMS-GW-MW11S-03	8260B				1	100			2IN			
CMS-GW-MW11S-03	8260B				1	100			2IN			
CMS-GW-MW11S-03	8260B	0.072	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.067	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.22	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.069	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.11	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.16	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.25	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.12	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.084	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.14	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.15	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.32	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.12	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.15	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.21	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.076	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.2	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.12	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.13	2		1	100			2IN	2U		
CMS-GW-MW11S-03	8260B	0.17	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.38	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.31	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.11	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.31	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.2	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.17	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.17	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.082	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.27	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.3	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.28	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.19	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.19	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.2	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.14	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.15	2		1	100			2IN	2U		
CMS-GW-MW11S-03	8260B	0.3	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.22	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.38	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.43	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.56	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.15	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.087	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.29	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.25	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.72	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.31	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.083	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.26	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.11	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.044	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.8	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.38	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.13	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.088	1		1	100			2IN	1U		
CMS-GW-MW11S-03	8260B	0.14	1		1	100			2IN	1U		

NSAMPLE	CLASS	PARAMETER	EPA/SMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW055-03	OV	TOLUENE	CMS-GW-MW055-03	12037-26-5	94					STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2-DICHLOROETHANE D4	CMS-GW-MW055-03	17060-07-0	119	PCT REC				STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW055-03	460-00-4	104	PCT REC				STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW055-03	1268-53-7	98	PCT REC				STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	ETHYLBENZENE	CMS-GW-MW055-03	100-41-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	STYRENE	CMS-GW-MW055-03	100-42-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW055-03	10061-01-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW055-03	10061-02-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	N-PROPYLBENZENE	CMS-GW-MW055-03	103-65-1	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	N-BUTYLBENZENE	CMS-GW-MW055-03	104-51-8	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	4-CHLOROTOLUENE	CMS-GW-MW055-03	105-43-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW055-03	106-46-7	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW055-03	106-93-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW055-03	107-06-2	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW055-03	108-67-8	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	BROMOBENZENE	CMS-GW-MW055-03	108-66-1	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TOLUENE	CMS-GW-MW055-03	108-66-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	CHLOROBENZENE	CMS-GW-MW055-03	108-90-7	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW055-03	120-82-1	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW055-03	124-48-1	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TETRACHLOROETHENE	CMS-GW-MW055-03	127-18-4	28000		UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW055-03	135-98-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW055-03	136777-61-2	2000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW055-03	142-28-9	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW055-03	156-58-2	1600		UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW055-03	156-60-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW055-03	151-73-1	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW055-03	58-23-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW055-03	1563-56-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW055-03	1694-20-7	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW055-03	1690-20-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	ICM CROFORM	CMS-GW-MW055-03	67-66-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	BENZENE	CMS-GW-MW055-03	71-43-2	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW055-03	71-55-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	BROMOMETHANE	CMS-GW-MW055-03	74-83-9	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	CHLOROMETHANE	CMS-GW-MW055-03	74-87-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	DIBROMOMETHANE	CMS-GW-MW055-03	74-95-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW055-03	74-97-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	CHLOROETHANE	CMS-GW-MW055-03	75-00-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	VINYL CHLORIDE	CMS-GW-MW055-03	75-01-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	METHYLENE CHLORIDE	CMS-GW-MW055-03	75-09-2	2000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	BROMOFORM	CMS-GW-MW055-03	75-25-2	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW055-03	75-27-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW055-03	75-34-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW055-03	75-35-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW055-03	75-68-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	DICHLOROFLUOROMETHANE	CMS-GW-MW055-03	75-71-9	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW055-03	78-57-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW055-03	79-00-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TRICHLOROETHENE	CMS-GW-MW055-03	79-01-6	1600		UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW055-03	79-34-5	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2,3-TRICHLOROETHANE	CMS-GW-MW055-03	87-61-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW055-03	87-66-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	NAPHTHALENE	CMS-GW-MW055-03	91-20-3	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	O-XYLENE	CMS-GW-MW055-03	95-47-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	2-CHLOROTOLUENE	CMS-GW-MW055-03	95-49-8	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW055-03	95-50-1	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW055-03	95-63-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW055-03	86-12-8	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW055-03	96-18-4	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW055-03	98-06-6	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	ISOPROPYLBENZENE	CMS-GW-MW055-03	98-82-8	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW055-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW055-03	99-87-8	1000	U	UG/L			STL Pittsburgh	CJ2J50362033	25-Oct-02	29-Oct-02	29-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL CRUL	DIL FACTOR	PCT MOIST	COMMENTS	DVTIER	LAB QC TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
CMS-GW-MW055-03	8260B				1000	100			2N			
CMS-GW-MW055-03	8260B				1000	100			2N			
CMS-GW-MW055-03	8260B				1000	100			2N			
CMS-GW-MW055-03	8260B				1000	100			2N			
CMS-GW-MW055-03	8260B	72	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	67	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	220	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	69	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	110	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	160	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	250	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	120	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	84	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	140	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	150	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	320	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	120	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	150	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	210	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	78	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	200	1000		1000	100			2N	28000		
CMS-GW-MW055-03	8260B	120	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	130	2000		1000	100			2N	2000/U		
CMS-GW-MW055-03	8260B	170	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	380	1000		1000	100			2N	1600/J		
CMS-GW-MW055-03	8260B	310	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	110	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	310	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	130	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	200	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	170	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	170	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	82	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	270	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	300	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	280	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	190	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	180	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	200	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	140	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	150	2000		1000	100			2N	2000/U		
CMS-GW-MW055-03	8260B	300	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	130	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	220	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	380	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	430	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	660	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	150	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	130	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	87	1000		1000	100			2N	1800		
CMS-GW-MW055-03	8260B	290	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	250	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	720	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	310	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	63	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	260	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	110	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	44	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	800	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	380	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	130	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	66	1000		1000	100			2N	1000/U		
CMS-GW-MW055-03	8260B	140	1000		1000	100			2N	1000/U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-DU-102402A-03	OV	TOLUENE-D8	CMS-DU-102402A-03	2037-26-5	98		PCT_REC		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2-DICHLOROETHANE-D4	CMS-DU-102402A-03	17060-07-0	111		PCT_REC		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	4-BROMOFLUOROBENZENE	CMS-DU-102402A-03	460-00-4	103		PCT_REC		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	DIBROMOFLUOROMETHANE	CMS-DU-102402A-03	1868-53-7	99		PCT_REC		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	ETHYLBENZENE	CMS-DU-102402A-03	100-41-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	STYRENE	CMS-DU-102402A-03	100-42-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-DU-102402A-03	10061-01-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-DU-102402A-03	10061-02-6	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	N-PROPYLBENZENE	CMS-DU-102402A-03	103-65-1	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	N-BUTYLBENZENE	CMS-DU-102402A-03	104-51-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	4-CHLOROTOLUENE	CMS-DU-102402A-03	106-43-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,4-DICHLOROBENZENE	CMS-DU-102402A-03	106-46-7	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2-DIBROMOETHANE	CMS-DU-102402A-03	106-93-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2-DICHLOROETHANE	CMS-DU-102402A-03	107-06-2	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-DU-102402A-03	108-67-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	BROMOBENZENE	CMS-DU-102402A-03	108-86-1	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	TOLUENE	CMS-DU-102402A-03	108-88-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CHLOROBENZENE	CMS-DU-102402A-03	108-90-7	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2,4-TRICHLOROBENZENE	CMS-DU-102402A-03	120-82-1	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	DIBROMOCHLOROMETHANE	CMS-DU-102402A-03	124-48-1	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	TETRACHLOROETHENE	CMS-DU-102402A-03	127-18-4	37000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	SEC-BUTYLBENZENE	CMS-DU-102402A-03	135-98-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	M-XYLENE & P-XYLENE	CMS-DU-102402A-03	136777-61-2	2000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,3-DICHLOROPROPANE	CMS-DU-102402A-03	142-28-9	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CIS-1,2-DICHLOROETHENE	CMS-DU-102402A-03	156-59-2	520	J	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-DU-102402A-03	158-60-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,3-DICHLOROBENZENE	CMS-DU-102402A-03	541-73-1	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CARBON TETRACHLORIDE	CMS-DU-102402A-03	56-23-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1-DICHLOROPROPENE	CMS-DU-102402A-03	583-59-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	2,2-DICHLOROPROPANE	CMS-DU-102402A-03	594-20-7	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-DU-102402A-03	630-20-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CHLOROFORM	CMS-DU-102402A-03	67-66-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	BENZENE	CMS-DU-102402A-03	71-43-2	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1,1-TRICHLOROETHANE	CMS-DU-102402A-03	71-55-6	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	BROMOMETHANE	CMS-DU-102402A-03	74-83-9	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CHLOROMETHANE	CMS-DU-102402A-03	74-87-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	DIBROMOMETHANE	CMS-DU-102402A-03	74-95-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	BROMOCHLOROMETHANE	CMS-DU-102402A-03	74-97-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	CHLOROETHANE	CMS-DU-102402A-03	75-00-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	VINYL CHLORIDE	CMS-DU-102402A-03	75-01-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	METHYLENE CHLORIDE	CMS-DU-102402A-03	75-09-2	2000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	BROMOFORM	CMS-DU-102402A-03	75-25-2	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	BROMODICHLOROMETHANE	CMS-DU-102402A-03	75-27-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1-DICHLOROETHANE	CMS-DU-102402A-03	75-34-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1-DICHLOROETHENE	CMS-DU-102402A-03	75-35-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	TRICHLOROFLUOROMETHANE	CMS-DU-102402A-03	75-69-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	DICHLORODIFLUOROMETHANE	CMS-DU-102402A-03	75-71-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2-DICHLOROPROPANE	CMS-DU-102402A-03	78-87-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1,2-TRICHLOROETHANE	CMS-DU-102402A-03	79-00-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	TRICHLOROETHENE	CMS-DU-102402A-03	79-01-6	2200	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-DU-102402A-03	79-34-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2,3-TRICHLOROBENZENE	CMS-DU-102402A-03	87-61-6	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	HEXACHLOROBUTADIENE	CMS-DU-102402A-03	87-68-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1-NAPHTHALENE	CMS-DU-102402A-03	91-20-3	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	O-XYLENE	CMS-DU-102402A-03	95-47-5	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	2-CHLOROTOLUENE	CMS-DU-102402A-03	95-49-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2-DICHLOROBENZENE	CMS-DU-102402A-03	95-50-1	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-DU-102402A-03	95-63-6	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-DU-102402A-03	96-12-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	1,2,3-TRICHLOROPROPANE	CMS-DU-102402A-03	96-18-4	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	tert-BUTYLBENZENE	CMS-DU-102402A-03	98-06-6	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	ISOPROPYLBENZENE	CMS-DU-102402A-03	98-82-8	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02
CMS-DU-102402A-03	OV	p-ISOPROPYLTOLUENE	CMS-DU-102402A-03	99-87-6	1000	U	UG/L		C2J250362	STL Pittsburgh	C2J250362034	25-Oct-02	30-Oct-02	30-Oct-02

NSAMPLE	METHOD	MDL	IDL	ORDL_CROL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-DU-102402A-03	8260B				1000	100		2	N			
CMS-DU-102402A-03	8260B				1000	100		2	N			
CMS-DU-102402A-03	8260B				1000	100		2	N			
CMS-DU-102402A-03	8260B				1000	100		2	N			
CMS-DU-102402A-03	8260B	72	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	67	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	220	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	89	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	110	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	160	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	250	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	120	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	84	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	140	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	150	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	320	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	120	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	150	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	210	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	78	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	200	1000		1000	100		2	N	37000		
CMS-DU-102402A-03	8260B	120	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	130	1000		1000	100		2	N	2000	U	
CMS-DU-102402A-03	8260B	170	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	380	1000		1000	100		2	N	520	J	
CMS-DU-102402A-03	8260B	310	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	110	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	310	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	130	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	200	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	170	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	170	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	82	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	270	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	300	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	280	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	180	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	190	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	200	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	140	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	150	1000		1000	100		2	N	2000	U	
CMS-DU-102402A-03	8260B	300	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	130	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	220	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	380	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	430	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	660	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	150	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	130	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	87	1000		1000	100		2	N	2200		
CMS-DU-102402A-03	8260B	290	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	250	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	720	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	310	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	83	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	260	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	110	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	44	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	800	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	360	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	130	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	88	1000		1000	100		2	N	1000	U	
CMS-DU-102402A-03	8260B	140	1000		1000	100		2	N	1000	U	

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW07D-03	OV	TOLUENE-D8	CMS-GW-MW07D-03	2037-26-5	91		PCT_REC	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2-DICHLOROETHANE D4	CMS-GW-MW07D-03	17060 07-0	103		PCT_REC	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW07D-03	460-00-4	94		PCT_REC	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW07D-03	1868-63-7	96		PCT_REC	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	ETHYLBENZENE	CMS-GW-MW07D-03	100-41-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	STYRENE	CMS-GW-MW07D-03	100-42-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW07D-03	10061-01-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW07D-03	10061-02-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	N-PROPYLBENZENE	CMS-GW-MW07D-03	103-65-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	N-BUTYLBENZENE	CMS-GW-MW07D-03	104-51-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	4-CHLOROTOLUENE	CMS-GW-MW07D-03	106-43-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW07D-03	106-46-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW07D-03	106-93-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW07D-03	107-06-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW07D-03	108-67-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	BROMOBENZENE	CMS-GW-MW07D-03	108-86-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TOLUENE	CMS-GW-MW07D-03	108-88-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CHLOROBENZENE	CMS-GW-MW07D-03	108-90-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW07D-03	120-82-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW07D-03	124-48-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TETRACHLOROETHENE	CMS-GW-MW07D-03	127-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW07D-03	135-98-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW07D-03	136777-61-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW07D-03	142-28-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW07D-03	156-59-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW07D-03	156-60-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW07D-03	541-73-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW07D-03	58-23-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW07D-03	563-69-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW07D-03	594-20-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW07D-03	630-20-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CHLOROFORM	CMS-GW-MW07D-03	67-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	BENZENE	CMS-GW-MW07D-03	71-43-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW07D-03	71-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	BROMOMETHANE	CMS-GW-MW07D-03	74-83-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CHLOROMETHANE	CMS-GW-MW07D-03	74-87-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	DIBROMOMETHANE	CMS-GW-MW07D-03	74-95-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW07D-03	74-97-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	CHLOROETHANE	CMS-GW-MW07D-03	75-00-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	VINYL CHLORIDE	CMS-GW-MW07D-03	75-01-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	METHYLENE CHLORIDE	CMS-GW-MW07D-03	75-09-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	BROMOFORM	CMS-GW-MW07D-03	75-25-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW07D-03	75-27-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW07D-03	75-34-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW07D-03	75-35-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW07D-03	76-69-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW07D-03	75-71-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW07D-03	78-87-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW07D-03	79-00-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TRICHLOROETHENE	CMS-GW-MW07D-03	79-01-6	0.31U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW07D-03	79-34-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW07D-03	87-61-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW07D-03	87-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	NAPHTHALENE	CMS-GW-MW07D-03	91-20-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	O-XYLENE	CMS-GW-MW07D-03	95-47-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	2-CHLOROTOLUENE	CMS-GW-MW07D-03	95-49-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW07D-03	95-50-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW07D-03	95-63-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW07D-03	96-12-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW07D-03	96-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW07D-03	98-06-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	ISOPROPYLBENZENE	CMS-GW-MW07D-03	98-82-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02
CMS-GW-MW07D-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW07D-03	99-87-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J250362035		25-Oct-02	29-Oct-02	29-Oct-02

RESAMPLE	METHOD	MOL	IDL	CRDL	CAQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW07D-03	8260B					1	100		2N				
CMS-GW-MW07D-03	8260B					1	100		2N				
CMS-GW-MW07D-03	8260B					1	100		2N				
CMS-GW-MW07D-03	8260B					1	100		2N				
CMS-GW-MW07D-03	8260B	0.072	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.067	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.069	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.16	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.26	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.084	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.14	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.32	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.21	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.078	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.12	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.13	2			1	100		2N		2U		
CMS-GW-MW07D-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.17	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.082	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.27	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.28	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.19	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.2	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.14	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.15	2			1	100		2N		2U		
CMS-GW-MW07D-03	8260B	0.3	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.22	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.43	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.68	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.15	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.067	1			1	100		2N		0.31U		
CMS-GW-MW07D-03	8260B	0.29	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.25	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.72	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.31	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.063	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.26	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.11	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.044	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.8	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.38	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.13	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.088	1			1	100		2N		1U		
CMS-GW-MW07D-03	8260B	0.14	1			1	100		2N		1U		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J270000145B	OV	TOLUENE-DR	C2J270000145B	2037-26-5	79		PCT_REC		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2-DICHLOROETHANE-D4	C2J270000145B	17060-07-0	86		PCT_REC		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	4-BROMOFLUOROBENZENE	C2J270000145B	460-00-4	93		PCT_REC		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	DIBROMOFLUOROMETHANE	C2J270000145B	1866-53-7	88		PCT_REC		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	ETHYLBENZENE	C2J270000145B	100-41-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	STYRENE	C2J270000145B	100-42-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CIS-1,3-DICHLOROPROPENE	C2J270000145B	10051-07-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TRANS-1,3-DICHLOROPROPENE	C2J270000145B	10061-02-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	N-PROPYLBENZENE	C2J270000145B	103-65-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	N-BUTYLBENZENE	C2J270000145B	104-51-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	4-CHLOROTOLUENE	C2J270000145B	106-43-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,4-DICHLOROBENZENE	C2J270000145B	106-46-7	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2-DIBROMOETHANE	C2J270000145B	106-93-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2-DICHLOROETHANE	C2J270000145B	107-06-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,3,5-TRIMETHYLBENZENE	C2J270000145B	108-67-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	BROMOBENZENE	C2J270000145B	108-66-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TOLUENE	C2J270000145B	108-88-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CHLOROBENZENE	C2J270000145B	108-90-7	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2,4-TRICHLOROBENZENE	C2J270000145B	120-82-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	DIBROMOCHLOROMETHANE	C2J270000145B	124-48-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TETRACHLOROETHENE	C2J270000145B	127-18-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	SEC-BUTYLBENZENE	C2J270000145B	136-98-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	M-XYLENE & P-XYLENE	C2J270000145B	136777-61-2	21U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,3-DICHLOROPROPANE	C2J270000145B	143-28-9	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CIS-1,2-DICHLOROETHENE	C2J270000145B	156-58-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TRANS-1,2-DICHLOROETHENE	C2J270000145B	156-60-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,3-DICHLOROBENZENE	C2J270000145B	541-73-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CARBON TETRACHLORIDE	C2J270000145B	56-23-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1-DICHLOROPROPENE	C2J270000145B	563-25-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	2,3-DICHLOROPROPANE	C2J270000145B	594-20-7	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1,1,2-TETRACHLOROETHANE	C2J270000145B	600-20-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CHLOROFORM	C2J270000145B	67-66-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	BENZENE	C2J270000145B	71-43-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1,1-TRICHLOROETHANE	C2J270000145B	71-55-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	BROMOMETHANE	C2J270000145B	74-83-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CHLOROMETHANE	C2J270000145B	74-87-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	DIBROMOMETHANE	C2J270000145B	74-95-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	BROMOCHLOROMETHANE	C2J270000145B	74-97-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	CHLOROETHANE	C2J270000145B	75-00-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	VINYL CHLORIDE	C2J270000145B	75-01-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	METHYLENE CHLORIDE	C2J270000145B	75-08-2	21U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	BROMOFORM	C2J270000145B	75-25-2	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	BROMODICHLOROMETHANE	C2J270000145B	75-27-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1-DICHLOROETHANE	C2J270000145B	75-34-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1-DICHLOROETHENE	C2J270000145B	75-35-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TRICHLOROFLUOROMETHANE	C2J270000145B	75-69-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	DICHLOROFLUOROMETHANE	C2J270000145B	75-71-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2-DICHLOROPROPANE	C2J270000145B	78-67-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1,2-TRICHLOROETHANE	C2J270000145B	79-00-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TRICHLOROETHENE	C2J270000145B	79-01-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,1,2,2-TETRACHLOROETHANE	C2J270000145B	79-34-5	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2,3-TRICHLOROBENZENE	C2J270000145B	87-61-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	HEXACHLOROBUTADIENE	C2J270000145B	87-68-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	NAPHTHALENE	C2J270000145B	91-20-3	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	O-XYLENE	C2J270000145B	95-47-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	2-CHLOROTOLUENE	C2J270000145B	95-49-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2-DICHLOROBENZENE	C2J270000145B	95-50-1	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2,4-TRIMETHYLBENZENE	C2J270000145B	95-63-9	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J270000145B	96-12-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	1,2,3-TRICHLOROPROPANE	C2J270000145B	96-18-4	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	TERT-BUTYLBENZENE	C2J270000145B	98-06-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	ISOPROPYLBENZENE	C2J270000145B	98-82-8	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02
C2J270000145B	OV	ISOPROPYLTOLUENE	C2J270000145B	99-87-6	11U		UG/L		C2J250362	STL Pittsburgh	C2J270000145B	27-Oct-02	27-Oct-02	27-Oct-02

NSAMPLE	METHOD	MOL	IDL	CRDL_CROL	IDL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J270000145B	8260B					1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B					1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B					1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B					1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.072	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.067	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.22	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.069	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.11	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.16	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.25	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.12	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.084	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.14	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.15	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.32	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.12	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.15	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.21	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.076	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.2	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.12	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.13	2			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.17	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.36	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.31	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.11	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.31	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.2	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.17	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.17	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.062	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.27	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.3	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.26	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.19	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.19	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.2	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.14	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.15	2			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.3	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.22	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.36	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.43	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.66	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.15	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.067	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.29	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.26	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.72	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.31	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.083	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.26	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.11	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.044	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.8	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.36	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.066	1			1	100 INTRA-LAB BLANK	2	MB			
C2J270000145B	8260B	0.14	1			1	100 INTRA-LAB BLANK	2	MB			

RSAMPLE	CLASS	PARAMETER	EPAS/MNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SUG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
C2J2700001450	OV	TOLUENE-DB	C2J2700001450	2057-26-5	88		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2-DICHLOROETHANE D4	C2J2700001450	17060-07-0	115		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	4-BROMOFLUOROBENZENE	C2J2700001450	460-00-4	102		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	DIBROMOFLUOROMETHANE	C2J2700001450	1868-53-7	104		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	ETHYLBENZENE	C2J2700001450	100-41-4	95		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	STYRENE	C2J2700001450	100-42-5	96		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CIS-1,3-DICHLOROPROPENE	C2J2700001450	10061-01-5	107		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	TRANS-1,3-DICHLOROPROPENE	C2J2700001450	10061-02-6	108		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	N-PROPYLBENZENE	C2J2700001450	103-65-1	96		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	N-BUTYLBENZENE	C2J2700001450	104-51-8	124		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	4-CHLOROTOLUENE	C2J2700001450	106-43-4	96		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,4-DICHLOROBENZENE	C2J2700001450	106-46-7	95		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2-DIBROMOETHANE	C2J2700001450	106-93-4	109		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2-DICHLOROETHANE	C2J2700001450	107-06-2	117		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,3,5-TRIMETHYLBENZENE	C2J2700001450	108-67-8	108		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	BROMOBENZENE	C2J2700001450	106-56-1	91		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	TOLUENE	C2J2700001450	108-98-3	103		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CHLOROBENZENE	C2J2700001450	106-90-7	95		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2,4-TRICHLOROBENZENE	C2J2700001450	120-82-1	126		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	DIBROMODICHLOROMETHANE	C2J2700001450	124-48-1	109		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	TETRACHLOROETHENE	C2J2700001450	127-18-4	100		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	SEC-BUTYLBENZENE	C2J2700001450	135-98-8	114		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	M-XYLENE & P-XYLENE	C2J2700001450	136777-61-2	95		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,3-DICHLOROPROPANE	C2J2700001450	142-28-9	89		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CIS-1,2-DICHLOROETHENE	C2J2700001450	156-59-2	103		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	TRANS-1,2-DICHLOROETHENE	C2J2700001450	156-60-5	94		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,3-DICHLOROBENZENE	C2J2700001450	154-73-1	96		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CARBON TETRACHLORIDE	C2J2700001450	56-23-5	126		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1-DICHLOROPROPANE	C2J2700001450	590-59-4	103		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	2,2-DICHLOROPROPANE	C2J2700001450	594-20-7	126		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1,1,2-TETRACHLOROETHANE	C2J2700001450	630-20-6	108		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CHLOROFORM	C2J2700001450	67-66-3	106		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	BENZENE	C2J2700001450	71-43-2	86		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1,1-TRICHLOROETHANE	C2J2700001450	71-55-6	122		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	BROMOMETHANE	C2J2700001450	74-83-9	92		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CHLOROMETHANE	C2J2700001450	74-87-3	62		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	DIBROMOMETHANE	C2J2700001450	74-95-3	108		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	BROMODICHLOROMETHANE	C2J2700001450	74-97-5	105		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	CHLOROETHANE	C2J2700001450	75-00-3	43 N		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	VINYL CHLORIDE	C2J2700001450	75-01-4	70		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	METHYLENE CHLORIDE	C2J2700001450	75-09-2	95		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	BROMOFORM	C2J2700001450	75-25-2	125		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	BROMODICHLOROMETHANE	C2J2700001450	75-27-4	107		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1-DICHLOROETHANE	C2J2700001450	75-34-3	91		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1-DICHLOROETHENE	C2J2700001450	75-35-4	96		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	TRICHLOROFLUOROMETHANE	C2J2700001450	75-69-4	93		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	DICHLORODIFLUOROMETHANE	C2J2700001450	75-71-6	91		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2-DICHLOROPROPANE	C2J2700001450	78-57-5	93		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1,2-TRICHLOROETHANE	C2J2700001450	79-00-5	102		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	TRICHLOROETHENE	C2J2700001450	79-01-6	109		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,1,2,2-TETRACHLOROETHANE	C2J2700001450	79-34-5	91		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2,3-TRICHLOROBENZENE	C2J2700001450	87-61-6	136		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	HEXACHLOROBUTADIENE	C2J2700001450	87-68-3	172 N		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	NAPHTHALENE	C2J2700001450	91-20-3	128		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	O-XYLENE	C2J2700001450	95-47-6	97		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	P-CHLOROTOLUENE	C2J2700001450	95-49-6	96		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2-DICHLOROBENZENE	C2J2700001450	95-50-1	100		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2,4-TRIMETHYLBENZENE	C2J2700001450	95-63-6	107		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J2700001450	96-12-9	128		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	1,2,3-TRICHLOROPROPANE	C2J2700001450	96-18-4	108		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	tert-BUTYLBENZENE	C2J2700001450	98-08-8	113		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	ISOPROPYLBENZENE	C2J2700001450	98-62-8	106		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	
C2J2700001450	OV	IP-ISOPROPYLTOLUENE	C2J2700001450	99-87-6	116		PCT REC	C2J250362	STL Pittsburgh	C2J2700001450		27-Oct-02	27-Oct-02	

NSAMPLE	METHOD	MDL	IDL	ORCL_ORCL	IDL_FACTOR	PCT_MOIST	COMMENTS	DIETRI	LAB	QC TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
C2J270000145C	8260B				1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B				1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B				1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B				1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.072	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.087	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.22	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.089	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.11	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.16	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.25	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.12	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.084	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.14	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.15	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.32	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.12	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.15	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.21	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.078	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.2	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.12	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.13	2		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.17	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.38	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.31	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.11	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.31	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.13	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.2	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.17	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.17	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.082	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.27	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.3	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.28	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.19	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.19	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.2	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.14	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.15	2		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.3	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.13	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.22	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.38	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.43	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.88	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.15	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.13	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.087	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.29	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.25	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.72	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.31	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.083	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.26	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.11	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.044	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.8	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.38	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.13	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.088	1		1	100	CHECK SAMPLE			2/LCS			
C2J270000145C	8260B	0.14	1		1	100	CHECK SAMPLE			2/LCS			

INSAMPLE	CLASS	PARAMETER	SPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J2800003018	OV	TOLUENE-D8	C2J2800003018	2037-26-5	93		PCT_REC	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DICHLOROETHANE-D4	C2J2800003018	17080-07-0	95		PCT_REC	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	4-BROMOFLUOROBENZENE	C2J2800003018	480-00-4	88		PCT_REC	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	DIBROMOFLUOROMETHANE	C2J2800003018	1868-53-7	93		PCT_REC	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	ETHYLBENZENE	C2J2800003018	100-41-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	STYRENE	C2J2800003018	100-42-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CIS-1,3-DICHLOROPROPENE	C2J2800003018	10061-01-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TRANS-1,3-DICHLOROPROPENE	C2J2800003018	10061-02-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	N-PROPYLBENZENE	C2J2800003018	103-65-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	N-BUTYLBENZENE	C2J2800003018	104-51-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	4-CHLOROTOLUENE	C2J2800003018	105-43-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,4-DICHLOROBENZENE	C2J2800003018	106-46-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DIBROMOETHANE	C2J2800003018	106-93-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DICHLOROETHANE	C2J2800003018	107-06-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,3,5-TRIMETHYLBENZENE	C2J2800003018	108-87-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	BROMOBENZENE	C2J2800003018	108-86-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TOLUENE	C2J2800003018	108-88-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CHLOROBENZENE	C2J2800003018	108-90-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2,4-TRICHLOROBENZENE	C2J2800003018	120-82-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	DIBROMOCHLOROMETHANE	C2J2800003018	124-48-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TETRACHLOROETHENE	C2J2800003018	127-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	SEC-BUTYLBENZENE	C2J2800003018	135-98-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	M-XYLENE & P-XYLENE	C2J2800003018	136777-61-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,3-DICHLOROPROPANE	C2J2800003018	142-28-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CIS-1,2-DICHLOROETHENE	C2J2800003018	156-59-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TRANS-1,2-DICHLOROETHENE	C2J2800003018	158-80-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,3-DICHLOROBENZENE	C2J2800003018	541-73-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CARBON TETRACHLORIDE	C2J2800003018	56-23-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1-DICHLOROPROPENE	C2J2800003018	562-58-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DICHLOROPROPANE	C2J2800003018	594-20-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1,1,2-TETRACHLOROETHANE	C2J2800003018	620-20-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CHLOROFORM	C2J2800003018	67-66-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	BENZENE	C2J2800003018	71-43-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1,1-TRICHLOROETHANE	C2J2800003018	71-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	BROMOMETHANE	C2J2800003018	74-83-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CHLOROMETHANE	C2J2800003018	74-87-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	DIBROMOMETHANE	C2J2800003018	74-95-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	BROMOCHLOROMETHANE	C2J2800003018	74-87-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	CHLOROETHANE	C2J2800003018	75-00-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	VINYL CHLORIDE	C2J2800003018	75-01-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	METHYLENE CHLORIDE	C2J2800003018	75-09-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	BROMOFORM	C2J2800003018	75-25-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	BROMODICHLOROMETHANE	C2J2800003018	75-27-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1-DICHLOROETHANE	C2J2800003018	75-34-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1-DICHLOROETHENE	C2J2800003018	75-35-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TRICHLOROFLUOROMETHANE	C2J2800003018	75-69-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	DICHLORODIFLUOROMETHANE	C2J2800003018	75-71-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DICHLOROPROPANE	C2J2800003018	78-87-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1,2-TRICHLOROETHANE	C2J2800003018	79-00-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TRICHLOROETHENE	C2J2800003018	79-01-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,1,2,2-TETRACHLOROETHANE	C2J2800003018	79-34-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2,3-TRICHLOROBENZENE	C2J2800003018	87-61-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	HEXACHLOROBUTADIENE	C2J2800003018	87-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	NAPHTHALENE	C2J2800003018	91-20-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	O-XYLENE	C2J2800003018	95-47-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	2-CHLOROTOLUENE	C2J2800003018	95-49-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DICHLOROBENZENE	C2J2800003018	95-50-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2,4-TRIMETHYLBENZENE	C2J2800003018	95-63-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J2800003018	96-12-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	1,2,3-TRICHLOROPROPANE	C2J2800003018	96-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	TERT-BUTYLBENZENE	C2J2800003018	98-06-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	ISOPROPYLBENZENE	C2J2800003018	98-62-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02
C2J2800003018	OV	P-ISOPROPYLTOLUENE	C2J2800003018	99-87-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J2800003018		28-Oct-02	28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	TOL	CRDL_CRCL	OIL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
C2J280000301B	8260B					1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B					1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B					1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B					1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.072	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.067	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.22	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.068	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.11	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.16	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.26	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.12	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.064	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.14	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.15	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.32	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.12	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.16	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.21	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.078	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.2	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.12	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.13	2			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.17	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.38	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.31	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.11	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.31	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.2	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.17	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.17	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.082	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.27	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.3	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.28	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.18	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.18	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.2	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.14	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.15	2			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.3	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.22	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.38	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.43	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.66	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.15	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.087	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.28	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.26	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.72	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.31	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.083	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.26	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.11	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.044	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.8	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.38	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.13	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.088	1			1	100 INTRA-LAB BLANK	2 MB				
C2J280000301B	8260B	0.14	1			1	100 INTRA-LAB BLANK	2 MB				

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J280000301C	OV	TOLUENE-D8	C2J280000301C	2037-28-5	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2-DICHLOROETHANE-D4	C2J280000301C	17060-07-0	100	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	4-BROMOFLUOROBENZENE	C2J280000301C	460-00-4	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	DIBROMOFLUOROMETHANE	C2J280000301C	1868-53-7	97	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	ETHYLBENZENE	C2J280000301C	100-41-4	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	STYRENE	C2J280000301C	100-42-5	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CIS-1,3-DICHLOROPROPENE	C2J280000301C	10061-01-5	97	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TRANS-1,3-DICHLOROPROPENE	C2J280000301C	10061-02-6	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	N-PROPYLBENZENE	C2J280000301C	103-65-1	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	N-BUTYLBENZENE	C2J280000301C	104-51-8	88	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	4-CHLOROTOLUENE	C2J280000301C	106-43-4	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,4-DICHLOROBENZENE	C2J280000301C	106-46-7	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2-DIBROMOETHANE	C2J280000301C	106-93-4	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2-DICHLOROETHANE	C2J280000301C	107-06-2	100	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,3,5-TRIMETHYLBENZENE	C2J280000301C	108-67-8	97	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	BROMOBENZENE	C2J280000301C	106-96-1	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TOLUENE	C2J280000301C	108-88-3	114	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CHLOROBENZENE	C2J280000301C	108-90-7	94	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2,4-TRICHLOROBENZENE	C2J280000301C	120-82-1	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	DIBROMOCHLOROMETHANE	C2J280000301C	124-48-1	90	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TETRACHLOROETHENE	C2J280000301C	127-18-4	82	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	SEC-BUTYLBENZENE	C2J280000301C	135-98-8	90	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	M-XYLENE & P-XYLENE	C2J280000301C	136777-61-2	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,3-DICHLOROPROPANE	C2J280000301C	142-28-9	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CIS-1,2-DICHLOROETHENE	C2J280000301C	156-59-2	98	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TRANS-1,2-DICHLOROETHENE	C2J280000301C	156-60-3	99	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,3-DICHLOROBENZENE	C2J280000301C	541-73-1	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CARBON TETRACHLORIDE	C2J280000301C	58-23-5	84	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1-DICHLOROPROPENE	C2J280000301C	563-58-6	88	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	2,2-DICHLOROPROPANE	C2J280000301C	594-20-7	80	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1,1,2-TETRACHLOROETHANE	C2J280000301C	690-20-6	92	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CHLOROFORM	C2J280000301C	67-68-3	97	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	BENZENE	C2J280000301C	71-43-2	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1,1-TRICHLOROETHANE	C2J280000301C	71-55-6	89	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	BROMOMETHANE	C2J280000301C	74-83-9	94	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CHLOROMETHANE	C2J280000301C	74-87-3	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	DIBROMOMETHANE	C2J280000301C	74-95-3	96	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	BROMOCHLOROMETHANE	C2J280000301C	74-97-5	107	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	CHLOROETHANE	C2J280000301C	75-00-3	104	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	VINYL CHLORIDE	C2J280000301C	75-01-4	84	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	METHYLENE CHLORIDE	C2J280000301C	75-09-2	94	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	BROMOFORM	C2J280000301C	75-25-2	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	BROMODICHLOROMETHANE	C2J280000301C	75-27-4	97	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1-DICHLOROETHANE	C2J280000301C	75-34-3	99	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1-DICHLOROETHENE	C2J280000301C	75-35-4	88	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TRICHLOROFLUOROMETHANE	C2J280000301C	75-69-4	78	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	DICHLORODIFLUOROMETHANE	C2J280000301C	75-71-8	68	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2-DICHLOROPROPANE	C2J280000301C	78-87-5	99	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1,2-TRICHLOROETHANE	C2J280000301C	79-00-5	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TRICHLOROETHENE	C2J280000301C	79-01-6	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,1,2,2-TETRACHLOROETHANE	C2J280000301C	79-34-5	94	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2,3-TRICHLOROBENZENE	C2J280000301C	87-61-6	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	HEXACHLOROBUTADIENE	C2J280000301C	87-68-3	87	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	NAPHTHALENE	C2J280000301C	91-20-3	92	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	O-XYLENE	C2J280000301C	95-47-5	91	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	2-CHLOROTOLUENE	C2J280000301C	95-49-8	97	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2-DICHLOROBENZENE	C2J280000301C	95-50-1	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2,4-TRIMETHYLBENZENE	C2J280000301C	95-63-6	95	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J280000301C	96-12-8	93	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	1,2,3-TRICHLOROPROPANE	C2J280000301C	96-18-4	98	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	TERT-BUTYLBENZENE	C2J280000301C	98-06-6	88	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	ISOPROPYLBENZENE	C2J280000301C	98-82-8	87	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02
C2J280000301C	OV	P-ISOPROPYLTOLUENE	C2J280000301C	99-87-6	90	PCT_REC			C2J250362	STL Pittsburgh	C2J280000301C		28-Oct-02	28-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	IDVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J280000301C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.072	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.067	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.22	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.069	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.18	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.25	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.064	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.32	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.21	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.078	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.13	2			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.38	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.082	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.27	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.3	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.28	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.19	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.19	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.15	2			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.3	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.22	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.38	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.43	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.68	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.067	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.29	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.25	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.72	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.083	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.26	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.044	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.8	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.38	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.088	1			1	100 CHECK SAMPLE		2/LCS			
C2J280000301C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
C2J2900003698	OV	TOLUENE-D8	C2J2900003698	2037-26-5	94		PCT_REC	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2-DICHLOROETHANE-D4	C2J2900003698	17060-07-0	108		PCT_REC	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	4-BROMOFLUOROBENZENE	C2J2900003698	460-00-4	101		PCT_REC	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	DIBROMOFLUOROMETHANE	C2J2900003698	1868-53-7	102		PCT_REC	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	ETHYLBENZENE	C2J2900003698	100-41-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	STYRENE	C2J2900003698	100-42-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CIS-1,3-DICHLOROPROPENE	C2J2900003698	10061-01-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	TRANS-1,3-DICHLOROPROPENE	C2J2900003698	10061-02-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	N-PROPYLBENZENE	C2J2900003698	103-65-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	N-BUTYLBENZENE	C2J2900003698	104-51-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	4-CHLOROTOLUENE	C2J2900003698	105-43-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,4-DICHLOROBENZENE	C2J2900003698	106-46-7	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2-DIBROMOETHANE	C2J2900003698	106-93-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2-DICHLOROETHANE	C2J2900003698	107-06-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,3,5-TRIMETHYLBENZENE	C2J2900003698	106-67-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	BROMOBENZENE	C2J2900003698	106-96-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	TOLUENE	C2J2900003698	106-68-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CHLOROBENZENE	C2J2900003698	108-90-7	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2,4-TRICHLOROBENZENE	C2J2900003698	120-82-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	DIBROMOCHLOROMETHANE	C2J2900003698	124-48-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1,1-TRICHLOROETHANE	C2J2900003698	127-18-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	SEC-BUTYLBENZENE	C2J2900003698	135-98-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	M-XYLENE & P-XYLENE	C2J2900003698	136777-61-2	21U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,3-DICHLOROPROPANE	C2J2900003698	142-28-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CIS-1,2-DICHLOROETHENE	C2J2900003698	156-59-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	TRANS-1,2-DICHLOROETHENE	C2J2900003698	156-60-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,3-DICHLOROBENZENE	C2J2900003698	541-73-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CARBON TETRACHLORIDE	C2J2900003698	56-23-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1-DICHLOROPROPENE	C2J2900003698	563-56-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	2,3-DICHLOROPROPANE	C2J2900003698	594-20-7	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1,1,2-TETRACHLOROETHANE	C2J2900003698	630-20-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CHLOROFORM	C2J2900003698	67-66-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	BENZENE	C2J2900003698	71-43-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1,1-TRICHLOROETHANE	C2J2900003698	71-55-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	BROMOMETHANE	C2J2900003698	74-83-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CHLOROMETHANE	C2J2900003698	74-87-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	DIBROMOMETHANE	C2J2900003698	74-95-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	BROMODICHLOROMETHANE	C2J2900003698	74-97-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	CHLOROETHANE	C2J2900003698	75-00-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	VINYL CHLORIDE	C2J2900003698	75-01-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	METHYLENE CHLORIDE	C2J2900003698	75-09-2	21U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	BROMOFORM	C2J2900003698	75-25-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	BROMODICHLOROMETHANE	C2J2900003698	75-27-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1-DICHLOROETHANE	C2J2900003698	75-34-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1-DICHLOROETHENE	C2J2900003698	75-35-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	TRICHLOROFLUOROMETHANE	C2J2900003698	75-69-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	DICHLORODIFLUOROMETHANE	C2J2900003698	75-71-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2-DICHLOROPROPANE	C2J2900003698	78-67-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1,2-TRICHLOROETHANE	C2J2900003698	79-00-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	TRICHLOROETHENE	C2J2900003698	79-01-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,1,2,2-TETRACHLOROETHANE	C2J2900003698	79-34-5	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2,3-TRICHLOROBENZENE	C2J2900003698	87-61-2	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	HEXACHLOROBUTADIENE	C2J2900003698	87-68-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	NAPHTHALENE	C2J2900003698	91-20-3	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	O-XYLENE	C2J2900003698	95-47-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	P-CHLOROTOLUENE	C2J2900003698	95-49-9	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2-DICHLOROBENZENE	C2J2900003698	95-50-1	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2,4-TRIMETHYLBENZENE	C2J2900003698	95-63-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J2900003698	98-12-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	1,2,3-TRICHLOROPROPANE	C2J2900003698	98-18-4	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	TERT-BUTYLBENZENE	C2J2900003698	98-06-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	ISOPROPYLBENZENE	C2J2900003698	98-82-8	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	
C2J2900003698	OV	P-ISOPROPYLTOLUENE	C2J2900003698	99-87-6	11U		UG/L	C2J250362	STL Pittsburgh	C2J2900003698		29-Oct-02	29-Oct-02	

NSAMPLE	METHOD	MDL	IDL	CROD_CROK	DIL_FACTOR	POT_MOIST	COMMENTS	DUVIER	LAB	QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J2900003690	8260B					1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B					1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B					1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B					1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.072	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.067	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.22	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.069	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.11	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.16	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.25	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.12	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.084	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.14	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.15	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.32	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.12	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.15	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.21	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.078	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.2	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.12	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.13	2			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.17	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.36	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.31	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.11	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.31	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.13	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.2	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.17	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.17	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.062	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.27	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.3	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.28	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.19	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.19	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.2	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.14	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.15	2			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.3	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.13	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.22	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.36	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.43	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.66	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.15	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.13	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.067	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.29	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.25	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.72	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.31	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.063	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.26	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.11	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.044	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.5	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.36	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.13	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.065	1			1	100 INTRA-LAB BLANK			2MB			
C2J2900003690	8260B	0.14	1			1	100 INTRA-LAB BLANK			2MB			

INSAMPLE	CLASS	PARAMETER	FPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J290000369C	OV	TOLUENE D8	C2J290000369C	2037-26-5	91		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DICHLOROETHANE-D4	C2J290000369C	17060-07-0	88		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	4-BROMOFLUOROBENZENE	C2J290000369C	480-00-4	88		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	DIBROMOFLUOROMETHANE	C2J290000369C	1868-53-7	94		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	ETHYLBENZENE	C2J290000369C	100-41-4	96		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	STYRENE	C2J290000369C	100-42-5	89		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CIS-1,3-DICHLOROPROPENE	C2J290000369C	10061-01-5	90		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TRANS-1,3-DICHLOROPROPENE	C2J290000369C	10061-02-6	90		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	N-PROPYLBENZENE	C2J290000369C	103-65-1	97		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	N-BUTYLBENZENE	C2J290000369C	104-61-8	104		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	4-CHLOROTOLUENE	C2J290000369C	106-43-4	93		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,4-DICHLOROBENZENE	C2J290000369C	106-46-7	90		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DIBROMOETHANE	C2J290000369C	106-93-4	80		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DICHLOROETHANE	C2J290000369C	107-06-2	89		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,3,5-TRIMETHYLBENZENE	C2J290000369C	108-87-8	97		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	BROMOBENZENE	C2J290000369C	108-86-1	91		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TOLUENE	C2J290000369C	108-88-3	111		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CHLOROBENZENE	C2J290000369C	108-90-7	85		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2,4-TRICHLOROBENZENE	C2J290000369C	120-82-1	90		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	DIBROMOCHLOROMETHANE	C2J290000369C	124-48-1	86		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TETRACHLOROETHENE	C2J290000369C	127-18-4	94		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	SEC-BUTYLBENZENE	C2J290000369C	135-88-8	101		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	M-XYLENE & P-XYLENE	C2J290000369C	136777-81-2	93		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,3-DICHLOROPROPANE	C2J290000369C	142-28-9	86		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CIS-1,2-DICHLOROETHENE	C2J290000369C	156-59-2	85		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TRANS-1,2-DICHLOROETHENE	C2J290000369C	156-60-5	94		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,3-DICHLOROBENZENE	C2J290000369C	541-73-1	94		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CARBON TETRACHLORIDE	C2J290000369C	56-23-5	106		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1-DICHLOROPROPENE	C2J290000369C	593-59-8	96		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DICHLOROPROPANE	C2J290000369C	594-20-7	99		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1,1,2-TETRACHLOROETHANE	C2J290000369C	630-20-6	85		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CHLOROFORM	C2J290000369C	67-66-3	93		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	BENZENE	C2J290000369C	71-43-2	87		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1,1-TRICHLOROETHANE	C2J290000369C	71-55-6	101		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	BROMOMETHANE	C2J290000369C	74-83-9	100		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CHLOROMETHANE	C2J290000369C	74-87-3	88		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	DIBROMOMETHANE	C2J290000369C	74-95-3	80		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	BROMOCHLOROMETHANE	C2J290000369C	74-87-5	88		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	CHLOROETHANE	C2J290000369C	75-00-3	84		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	VINYL CHLORIDE	C2J290000369C	75-01-4	96		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	METHYLENE CHLORIDE	C2J290000369C	75-09-2	81		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	BROMOFORM	C2J290000369C	75-25-2	89		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	BROMODICHLOROMETHANE	C2J290000369C	75-27-4	94		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1-DICHLOROETHANE	C2J290000369C	75-34-3	92		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1-DICHLOROETHENE	C2J290000369C	75-35-4	106		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TRICHLOROFLUOROMETHANE	C2J290000369C	75-69-4	128		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	DICHLORODIFLUOROMETHANE	C2J290000369C	75-71-8	102		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DICHLOROPROPANE	C2J290000369C	78-57-6	87		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1,2-TRICHLOROETHANE	C2J290000369C	79-00-5	85		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TRICHLOROETHENE	C2J290000369C	79-01-6	82		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,1,2,2-TETRACHLOROETHANE	C2J290000369C	79-34-5	82		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2,3-TRICHLOROBENZENE	C2J290000369C	87-61-6	88		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	HEXACHLOROBUTADIENE	C2J290000369C	87-68-3	106		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	NAPHTHALENE	C2J290000369C	91-20-3	87		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	O-XYLENE	C2J290000369C	95-47-8	87		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	2-CHLOROTOLUENE	C2J290000369C	95-49-6	94		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DICHLOROBENZENE	C2J290000369C	95-60-1	90		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2,4-TRIMETHYLBENZENE	C2J290000369C	95-63-6	98		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J290000369C	96-12-8	92		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	1,2,3-TRICHLOROPROPANE	C2J290000369C	96-18-4	80		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	TERT-BUTYLBENZENE	C2J290000369C	98-06-6	100		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	ISOPROPYLBENZENE	C2J290000369C	98-82-8	93		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02
C2J290000369C	OV	P-ISOPROPYLTOLUENE	C2J290000369C	99-87-6	100		PCT_REC		C2J250362	STL Pittsburgh	C2J290000369C		29-Oct-02	29-Oct-02

NSAMPLE	METHOD	MDL	IDL	CRCL_CRCL	IDL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J290000366C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.072	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.067	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.22	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.069	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.16	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.26	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.064	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.32	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.21	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.078	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.13	2			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.38	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.082	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.27	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.3	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.28	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.19	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.18	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.15	2			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.3	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.22	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.36	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.43	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.66	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.087	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.29	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.26	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.72	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.083	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.26	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.044	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.8	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.38	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.068	1			1	100 CHECK SAMPLE		2/LCS			
C2J290000366C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J290000369L	OV	TOLUENE-D8	C2J290000369L	2037-26-5	84	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DICHLOROETHANE-D4	C2J290000369L	17060-07-0	128	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	4-BROMOFLUOROBENZENE	C2J290000369L	480-00-4	101	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	DIBROMOFLUOROMETHANE	C2J290000369L	1868-53-7	112	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	ETHYLBENZENE	C2J290000369L	100-41-4	87	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	STYRENE	C2J290000369L	100-42-5	89	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CIS-1,3-DICHLOROPROPENE	C2J290000369L	10061-01-6	95	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TRANS-1,3-DICHLOROPROPENE	C2J290000369L	10061-02-6	99	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	N-PROPYLBENZENE	C2J290000369L	103-65-1	88	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	N-BUTYLBENZENE	C2J290000369L	104-51-8	86	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	4-CHLOROTOLUENE	C2J290000369L	105-43-4	88	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,4-DICHLOROBENZENE	C2J290000369L	105-46-7	89	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DIBROMOETHANE	C2J290000369L	106-93-4	93	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DICHLOROETHANE	C2J290000369L	107-06-2	110	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,3,5-TRIMETHYLBENZENE	C2J290000369L	108-67-8	92	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	BROMOBENZENE	C2J290000369L	108-96-1	91	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TOLUENE	C2J290000369L	108-88-3	108	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CHLOROBENZENE	C2J290000369L	108-90-7	87	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2,4-TRICHLOROBENZENE	C2J290000369L	120-82-1	84	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	DIBROMOCHLOROMETHANE	C2J290000369L	124-48-1	94	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TETRACHLOROETHENE	C2J290000369L	127-18-4	84	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	SEC-BUTYLBENZENE	C2J290000369L	135-98-6	86	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	M-XYLENE & P-XYLENE	C2J290000369L	136777-61-2	86	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DICHLOROPROPANE	C2J290000369L	142-28-9	98	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CIS-1,2-DICHLOROETHENE	C2J290000369L	156-59-2	88	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TRANS-1,2-DICHLOROETHENE	C2J290000369L	156-60-5	90	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,3-DICHLOROBENZENE	C2J290000369L	541-73-1	88	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CARBON TETRACHLORIDE	C2J290000369L	56-23-5	88	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1-DICHLOROPROPENE	C2J290000369L	563-58-6	90	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	2,2-DICHLOROPROPANE	C2J290000369L	594-20-7	92	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1,1,2-TETRACHLOROETHANE	C2J290000369L	630-20-6	93	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CHLOROFORM	C2J290000369L	67-66-3	98	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	BENZENE	C2J290000369L	71-43-2	86	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1,1-TRICHLOROETHANE	C2J290000369L	71-55-6	93	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	BROMOMETHANE	C2J290000369L	74-83-8	100	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CHLOROMETHANE	C2J290000369L	74-87-3	82	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	DIBROMOMETHANE	C2J290000369L	74-95-3	100	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	BROMOCHLOROMETHANE	C2J290000369L	74-97-5	103	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	CHLOROETHANE	C2J290000369L	75-00-3	101	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	VINYL CHLORIDE	C2J290000369L	75-01-4	84	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	METHYLENE CHLORIDE	C2J290000369L	75-09-2	89	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	BROMOFORM	C2J290000369L	75-25-2	101	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	BROMODICHLOROMETHANE	C2J290000369L	75-27-4	103	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1-DICHLOROETHANE	C2J290000369L	75-34-3	99	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1-DICHLOROETHENE	C2J290000369L	75-35-4	94	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TRICHLOROFLUOROMETHANE	C2J290000369L	75-69-4	120	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	DICHLOROFLUOROMETHANE	C2J290000369L	75-71-9	91	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DICHLOROPROPANE	C2J290000369L	78-87-5	92	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1,2-TRICHLOROETHANE	C2J290000369L	79-00-5	99	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TRICHLOROETHENE	C2J290000369L	79-01-6	82	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,1,2,2-TETRACHLOROETHANE	C2J290000369L	79-34-5	92	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2,3-TRICHLOROBENZENE	C2J290000369L	87-61-6	89	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	HEXACHLOROBUTADIENE	C2J290000369L	87-68-3	83	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	NAPHTHALENE	C2J290000369L	91-20-3	95	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	O-XYLENE	C2J290000369L	95-47-6	87	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	2-CHLOROTOLUENE	C2J290000369L	95-49-9	91	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DICHLOROBENZENE	C2J290000369L	95-50-1	91	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2,4-TRIMETHYLBENZENE	C2J290000369L	95-63-6	90	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J290000369L	96-12-8	90	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	1,2,3-TRICHLOROPROPANE	C2J290000369L	96-18-4	113	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	TERT-BUTYLBENZENE	C2J290000369L	98-06-6	88	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	ISOPROPYLBENZENE	C2J290000369L	98-82-6	87	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	
C2J290000369L	OV	P-ISOPROPYLTOLUENE	C2J290000369L	99-87-6	89	PCT_REC		C2J250362	STL Pittsburgh	C2J290000369L		29-Oct-02	29-Oct-02	

NSAMPLE	METHOD	MDL	IDL	CHDL	CHDL	DIL FACTOR	PCT MOIST	COMMENTS	DVTR	LAB QC TYPE	FINAL RESULT	FINAL QUAL	VALID COMMENT
C2J290000369L	8260B							100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B							100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B							100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B							100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.072	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.067	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.22	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.069	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.11	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.16	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.26	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.12	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.084	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.14	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.15	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.32	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.12	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.15	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.21	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.078	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.2	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.12	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.13	2					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.17	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.38	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.31	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.11	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.31	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.13	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.2	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.17	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.17	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.082	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.27	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.3	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.28	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.19	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.19	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.2	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.14	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.15	2					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.3	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.13	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.22	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.38	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.43	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.68	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.15	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.13	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.087	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.29	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.25	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.72	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.31	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.083	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.26	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.11	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.044	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.8	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.38	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.13	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.088	1					100 DUPLICATE CHECK	2	LCSD			
C2J290000369L	8260B	0.14	1					100 DUPLICATE CHECK	2	LCSD			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC_DATE	EXTR_DATE	ANAL DATE
C2J300000211B	OV	TOLUENE-D8	C2J300000211B	2037-26-5	95		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DICHLOROETHANE-D4	C2J300000211B	17060-07-0	115		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	4-BROMOFLUOROBENZENE	C2J300000211B	400-00-4	100		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	DIBROMOFLUOROMETHANE	C2J300000211B	1868-53-7	103		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	ETHYLBENZENE	C2J300000211B	100-41-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	STYRENE	C2J300000211B	100-42-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CIS-1,3-DICHLOROPROPENE	C2J300000211B	10081-01-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TRANS-1,3-DICHLOROPROPENE	C2J300000211B	10061-02-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	N-PROPYLBENZENE	C2J300000211B	103-65-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	N-BUTYLBENZENE	C2J300000211B	104-51-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	4-CHLOROTOLUENE	C2J300000211B	105-43-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,4-DICHLOROBENZENE	C2J300000211B	106-46-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DIBROMOETHANE	C2J300000211B	106-93-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DICHLOROETHANE	C2J300000211B	107-06-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,3,5-TRIMETHYLBENZENE	C2J300000211B	108-67-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	BROMOBENZENE	C2J300000211B	108-86-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TOLUENE	C2J300000211B	108-88-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CHLOROBENZENE	C2J300000211B	108-90-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2,4-TRICHLOROBENZENE	C2J300000211B	120-82-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	DIBROMOCHLOROMETHANE	C2J300000211B	124-48-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TETRACHLOROETHENE	C2J300000211B	127-18-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	SEC-BUTYLBENZENE	C2J300000211B	135-98-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	M-XYLENE & P-XYLENE	C2J300000211B	136777-61-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,3-DICHLOROPROPANE	C2J300000211B	142-28-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CIS-1,2-DICHLOROETHENE	C2J300000211B	156-59-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TRANS-1,2-DICHLOROETHENE	C2J300000211B	156-60-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,3-DICHLOROBENZENE	C2J300000211B	541-73-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CARBON TETRACHLORIDE	C2J300000211B	56-23-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1-DICHLOROPROPENE	C2J300000211B	583-58-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DICHLOROPROPANE	C2J300000211B	584-20-7	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1,1,2-TETRACHLOROETHANE	C2J300000211B	630-20-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CHLOROFORM	C2J300000211B	67-66-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	BENZENE	C2J300000211B	71-43-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1,1-TRICHLOROETHANE	C2J300000211B	71-55-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	BROMOMETHANE	C2J300000211B	74-83-9	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CHLOROMETHANE	C2J300000211B	74-87-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	DIBROMOMETHANE	C2J300000211B	74-95-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	BROMOCHLOROMETHANE	C2J300000211B	74-97-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	CHLOROETHANE	C2J300000211B	75-00-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	VINYL CHLORIDE	C2J300000211B	75-01-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	METHYLENE CHLORIDE	C2J300000211B	75-09-2	2U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	BROMOFORM	C2J300000211B	75-25-2	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	BROMODICHLOROMETHANE	C2J300000211B	75-27-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1-DICHLOROETHANE	C2J300000211B	75-34-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1-DICHLOROETHENE	C2J300000211B	75-35-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TRICHLOROFLUOROMETHANE	C2J300000211B	75-59-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	DICHLOROFLUOROMETHANE	C2J300000211B	75-71-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DICHLOROPROPANE	C2J300000211B	78-67-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1,2-TRICHLOROETHANE	C2J300000211B	79-00-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TRICHLOROETHENE	C2J300000211B	79-01-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,1,2,2-TETRACHLOROETHANE	C2J300000211B	79-34-5	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2,3-TRICHLOROBENZENE	C2J300000211B	87-61-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	HEXACHLOROBUTADIENE	C2J300000211B	87-68-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	NAPHTHALENE	C2J300000211B	91-20-3	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	O-XYLENE	C2J300000211B	95-47-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	2-CHLOROTOLUENE	C2J300000211B	95-49-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DICHLOROBENZENE	C2J300000211B	95-50-1	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2,4-TRIMETHYLBENZENE	C2J300000211B	95-63-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J300000211B	98-12-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	1,2,3-TRICHLOROPROPANE	C2J300000211B	98-16-4	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	TERT-BUTYLBENZENE	C2J300000211B	98-06-8	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	ISOPROPYLBENZENE	C2J300000211B	98-82-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	
C2J300000211B	OV	P-ISOPROPYLTOLUENE	C2J300000211B	99-87-6	1U		UG/L	C2J250362	STL Pittsburgh	C2J300000211B		30-Oct-02	30-Oct-02	

NSAMPLE	METHOD	MDL	HDL	ORCL_CRCL	DIL_FACTOR	POT_MOIST	COMMENTS	DVTRIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J300000211B	8260B					1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B					1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B					1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B					1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.072	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.067	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.22	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.069	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.11	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.16	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.25	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.12	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.084	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.14	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.15	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.32	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.12	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.15	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.21	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.078	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.2	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.12	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.13	2			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.17	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.38	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.31	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.11	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.31	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.13	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.2	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.17	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.17	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.082	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.27	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.3	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.28	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.19	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.19	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.2	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.14	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.15	2			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.3	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.13	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.22	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.38	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.43	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.66	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.15	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.13	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.087	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.29	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.25	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.72	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.31	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.083	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.26	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.11	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.044	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.5	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.38	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.13	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.088	1			1	100 INTRA-LAB BLANK		2MB			
C2J300000211B	8260B	0.14	1			1	100 INTRA-LAB BLANK		2MB			

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	ISOG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J300000211C	OV	TOLUENE-D8	C2J300000211C	2037-26-5	95		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2-DICHLOROETHANE-D4	C2J300000211C	17000-67-0	128		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	4-BROMOFLUOROBENZENE	C2J300000211C	460-00-4	106		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	DIBROMOFLUOROMETHANE	C2J300000211C	1865-53-7	108		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	ETHYLBENZENE	C2J300000211C	100-41-4	96		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	STYRENE	C2J300000211C	100-42-5	98		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CIS-1,3-DICHLOROPROPENE	C2J300000211C	10061-01-5	96		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	TRANS-1,3-DICHLOROPROPENE	C2J300000211C	10061-02-5	102		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	N-PROPYLBENZENE	C2J300000211C	103-65-1	83		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	N-BUTYLBENZENE	C2J300000211C	104-51-8	85		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	4-CHLOROTOLUENE	C2J300000211C	105-43-4	82		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,4-DICHLOROBENZENE	C2J300000211C	106-46-7	85		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2-DIBROMOETHANE	C2J300000211C	106-93-4	101		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2-DICHLOROETHANE	C2J300000211C	107-06-2	114		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,3,5-TRIMETHYLBENZENE	C2J300000211C	108-87-8	90		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	BROMOBENZENE	C2J300000211C	108-86-1	80		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	TOLUENE	C2J300000211C	108-98-3	115		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CHLOROBENZENE	C2J300000211C	108-90-7	93		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2,4-TRICHLOROBENZENE	C2J300000211C	120-82-1	90		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	DIBROMOCHLOROMETHANE	C2J300000211C	124-48-1	103		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	TETRACHLOROETHENE	C2J300000211C	127-18-4	92		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	SEC-BUTYLBENZENE	C2J300000211C	135-98-8	83		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	M-XYLENE & P-XYLENE	C2J300000211C	136777-61-2	91		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,3-DICHLOROPROPANE	C2J300000211C	142-28-9	103		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CIS-1,2-DICHLOROETHENE	C2J300000211C	156-59-2	96		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	TRANS-1,2-DICHLOROETHENE	C2J300000211C	156-60-5	95		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,3-DICHLOROBENZENE	C2J300000211C	541-73-1	85		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CARBON TETRACHLORIDE	C2J300000211C	58-20-5	90		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1-DICHLOROPROPENE	C2J300000211C	590-59-8	81		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	2,2-DICHLOROPROPANE	C2J300000211C	594-20-7	90		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1,1,2-TETRACHLOROETHANE	C2J300000211C	630-20-6	99		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CHLOROFORM	C2J300000211C	67-66-3	106		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	BENZENE	C2J300000211C	71-43-2	82		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1,1-TRICHLOROETHANE	C2J300000211C	71-55-6	102		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	BROMOMETHANE	C2J300000211C	74-83-9	109		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CHLOROMETHANE	C2J300000211C	74-87-3	90		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	DIBROMOMETHANE	C2J300000211C	74-99-3	102		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	BROMOCHLOROMETHANE	C2J300000211C	74-97-5	98		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	CHLOROETHANE	C2J300000211C	75-00-3	107		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	VINYL CHLORIDE	C2J300000211C	75-01-4	83		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	METHYLENE CHLORIDE	C2J300000211C	75-09-2	92		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	BROMOFORM	C2J300000211C	75-25-2	100		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	BROMODICHLOROMETHANE	C2J300000211C	75-27-4	105		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1-DICHLOROETHANE	C2J300000211C	75-34-3	106		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1-DICHLOROETHENE	C2J300000211C	75-35-4	93		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1,1,2-TETRACHLOROETHANE	C2J300000211C	75-69-4	112		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	DICHLOROFLUOROMETHANE	C2J300000211C	75-71-8	89		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2-DICHLOROPROPANE	C2J300000211C	78-87-5	101		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1,2-TRICHLOROETHANE	C2J300000211C	79-06-5	102		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	TRICHLOROETHENE	C2J300000211C	79-01-8	83		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,1,2,2-TETRACHLOROETHANE	C2J300000211C	79-34-5	86		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2,3-TRICHLOROBENZENE	C2J300000211C	87-61-6	92		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	HEXACHLOROBUTADIENE	C2J300000211C	87-66-3	86		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	NAPHTHALENE	C2J300000211C	91-20-3	93		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	O-XYLENE	C2J300000211C	95-47-6	91		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	2-CHLOROTOLUENE	C2J300000211C	95-49-8	84		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2-DICHLOROBENZENE	C2J300000211C	95-50-1	86		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2,4-TRIMETHYLBENZENE	C2J300000211C	95-63-6	87		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J300000211C	96-12-8	96		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	1,2,3-TRICHLOROPROPANE	C2J300000211C	96-18-4	98		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	tert-BUTYLBENZENE	C2J300000211C	98-06-6	84		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	ISOPROPYLBENZENE	C2J300000211C	98-82-8	92		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	
C2J300000211C	OV	p-ISOPROPYLTOLUENE	C2J300000211C	99-87-6	85		PCT_REC	C2J250362	STL Pittsburgh	C2J300000211C		30-Oct-02	30-Oct-02	

NSAMPLE	METHOD	MDL	IDL	CRDL_CRGL	IDL_FACTOR	POT_MOIST	COMMENTS	DUVIER/LAB	QC TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J300000211C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B					1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.072	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.067	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.22	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.069	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.18	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.25	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.084	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.32	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.21	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.076	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.12	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.13	2			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.38	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.17	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.062	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.27	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.3	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.28	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.18	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.19	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.2	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.15	2			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.3	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.22	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.36	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.43	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.66	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.15	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.087	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.29	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.25	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.72	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.31	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.083	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.26	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.11	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.044	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.8	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.36	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.13	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.086	1			1	100 CHECK SAMPLE		2/LCS			
C2J300000211C	8260B	0.14	1			1	100 CHECK SAMPLE		2/LCS			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2J300000211L	OV	TOLUENE-D8	C2J300000211L	2037-28-5	97		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2-DICHLOROETHANE-D4	C2J300000211L	17060-07-0	125		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	4-BROMOFLUOROBENZENE	C2J300000211L	480-00-4	106		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	DIBROMOFLUOROMETHANE	C2J300000211L	1868-53-7	107		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	ETHYLBENZENE	C2J300000211L	100-41-4	89		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	STYHENE	C2J300000211L	100-42-5	93		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CIS-1,3-DICHLOROPROPENE	C2J300000211L	10061-01-5	96		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TRANS-1,3-DICHLOROPROPENE	C2J300000211L	10061-02-6	102		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	N-PROPYL BENZENE	C2J300000211L	103-65-1	85		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	N-BUTYL BENZENE	C2J300000211L	104-61-9	98		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	4-CHLOROTOLUENE	C2J300000211L	106-43-4	84		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,4-DICHLOROBENZENE	C2J300000211L	106-46-7	86		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2-DIBROMOETHANE	C2J300000211L	106-93-4	84		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2-DICHLOROETHANE	C2J300000211L	107-06-2	112		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,3,5-TRIMETHYLBENZENE	C2J300000211L	108-67-8	85		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	BROMOBENZENE	C2J300000211L	108-86-1	91		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TOLUENE	C2J300000211L	108-88-3	107		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CHLOROBENZENE	C2J300000211L	108-90-7	90		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2,4-TRICHLOROBENZENE	C2J300000211L	120-82-1	83		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	DIBROMOCHLOROMETHANE	C2J300000211L	124-48-1	99		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TETRACHLOROETHENE	C2J300000211L	127-18-4	89		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	SEC-BUTYLBENZENE	C2J300000211L	135-88-6	85		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	M-XYLENE & P-XYLENE	C2J300000211L	136777-61-2	87		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,3-DICHLOROPROPANE	C2J300000211L	142-26-9	98		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CIS-1,2-DICHLOROETHENE	C2J300000211L	156-59-2	87		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TRANS-1,2-DICHLOROETHENE	C2J300000211L	156-60-5	83	N	PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,3-DICHLOROBENZENE	C2J300000211L	541-73-1	90		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CARBON TETRACHLORIDE	C2J300000211L	55-23-5	99		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1-DICHLOROPROPENE	C2J300000211L	563-85-6	89		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	2,3-DICHLOROPROPANE	C2J300000211L	594-20-7	90		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1,1,2-TETRACHLOROETHANE	C2J300000211L	690-20-6	98		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CHLOROPURM	C2J300000211L	67-66-3	101		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	BENZENE	C2J300000211L	71-43-2	84		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1,1-TRICHLOROETHANE	C2J300000211L	71-55-6	94		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	BROMOMETHANE	C2J300000211L	74-83-9	109		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CHLOROMETHANE	C2J300000211L	74-87-3	84		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	DIBROMOMETHANE	C2J300000211L	74-95-3	99		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	BROMOCHLOROMETHANE	C2J300000211L	74-97-5	103		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	CHLOROETHANE	C2J300000211L	75-00-3	107		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	VINYL CHLORIDE	C2J300000211L	75-01-4	85		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	METHYLENE CHLORIDE	C2J300000211L	75-08-2	90		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	BROMOFORM	C2J300000211L	75-25-2	101		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	BROMODICHLOROMETHANE	C2J300000211L	75-27-4	108		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1-DICHLOROETHANE	C2J300000211L	75-34-3	71	N	PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1-DICHLOROETHENE	C2J300000211L	75-35-4	79		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TRICHLOROFLUOROMETHANE	C2J300000211L	75-69-4	111		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	DICHLOROFLUOROMETHANE	C2J300000211L	75-71-8	105		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2-DICHLOROPROPANE	C2J300000211L	78-67-5	93		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1,2-TRICHLOROETHANE	C2J300000211L	79-00-5	90		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TRICHLOROETHENE	C2J300000211L	79-01-6	86		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,1,2,2-TETRACHLOROETHANE	C2J300000211L	79-34-5	88		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2,3-TRICHLOROBENZENE	C2J300000211L	87-61-6	84		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	HEXACHLOROBUTADIENE	C2J300000211L	87-66-3	83		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	NAPHTHALENE	C2J300000211L	81-20-3	80		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	O-XYLENE	C2J300000211L	95-47-6	87		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	2-CHLOROTOLUENE	C2J300000211L	95-49-8	85		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2-DICHLOROBENZENE	C2J300000211L	95-50-1	91		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2,4-TRIMETHYLBENZENE	C2J300000211L	96-63-6	88		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2J300000211L	96-12-8	91		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	1,2,3-TRICHLOROPROPANE	C2J300000211L	96-18-4	99		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	TERT-BUTYLBENZENE	C2J300000211L	98-06-6	86		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	ISOPROPYLBENZENE	C2J300000211L	98-82-6	89		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02
C2J300000211L	OV	P-ISOPROPYLTOLUENE	C2J300000211L	99-87-6	85		PCT_REC		C2J250362	STL Pittsburgh	C2J300000211L		30-Oct-02	30-Oct-02

INSTRUMENT	METHOD	MDL	IDL	CRDL	CRQL	DIL FACTOR	PCT MOIST	COMMENTS	LOFTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2J300000211L	8260B						1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B						1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B						1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B						1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.072	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.067	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.22	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.069	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.11	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.16	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.25	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.12	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.084	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.14	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.15	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.32	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.12	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.15	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.21	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.078	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.2	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.12	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.13	2				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.17	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.38	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.31	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.11	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.31	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.13	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.2	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.17	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.17	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.082	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.27	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.3	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.28	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.19	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.19	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.2	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.14	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.13	2				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.3	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.13	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.22	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.38	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.43	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.68	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.15	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.13	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.067	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.29	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.25	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.72	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.31	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.083	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.26	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.11	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.044	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.5	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.38	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.13	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.088	1				1	100 DUPLICATE CHECK		2/LCSD			
C2J300000211L	8260B	0.14	1				1	100 DUPLICATE CHECK		2/LCSD			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTH_DATE	ANAL_DATE	
CMS-GW-MW035-03	OV	TOLUENE-D8	CMS-GW-MW035-03	2037-26-5	98		PCT_REC			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW035-03	17060-07-0	86		PCT_REC			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW035-03	450-00-4	86		PCT_REC			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW035-03	1868-53-7	92		PCT_REC			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	ETHYLBENZENE	CMS-GW-MW035-03	100-41-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	STYRENE	CMS-GW-MW035-03	100-42-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW035-03	10061-01-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW035-03	10061-02-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	N-PROPYLBENZENE	CMS-GW-MW035-03	103-65-1	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	N-BUTYLBENZENE	CMS-GW-MW035-03	104-51-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	4-CHLOROTOLUENE	CMS-GW-MW035-03	106-43-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,4-DICHLOROBENZENE	CMS-GW-MW035-03	106-46-7	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2-DIBROMOETHANE	CMS-GW-MW035-03	106-83-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2-DICHLOROETHANE	CMS-GW-MW035-03	107-06-2	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW035-03	108-67-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	BROMOBENZENE	CMS-GW-MW035-03	108-86-1	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TOLUENE	CMS-GW-MW035-03	108-88-3	0.44J		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CHLOROBENZENE	CMS-GW-MW035-03	108-90-7	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW035-03	120-82-1	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW035-03	124-48-1	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TETRACHLOROETHENE	CMS-GW-MW035-03	127-18-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	SEC-BUTYLBENZENE	CMS-GW-MW035-03	135-98-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	M-XYLENE & P-XYLENE	CMS-GW-MW035-03	136777-61-2	0.22J		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,3-DICHLOROPROPANE	CMS-GW-MW035-03	142-28-9	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW035-03	156-59-2	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW035-03	156-60-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,3-DICHLOROBENZENE	CMS-GW-MW035-03	541-73-1	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CARBON TETRACHLORIDE	CMS-GW-MW035-03	58-29-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1-DICHLOROPROPENE	CMS-GW-MW035-03	583-58-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	2,2-DICHLOROPROPANE	CMS-GW-MW035-03	594-20-7	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW035-03	630-20-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CHLOROFORM	CMS-GW-MW035-03	67-66-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	BENZENE	CMS-GW-MW035-03	71-43-2	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW035-03	71-55-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	BROMOMETHANE	CMS-GW-MW035-03	74-83-9	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CHLOROMETHANE	CMS-GW-MW035-03	74-87-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	DIBROMOMETHANE	CMS-GW-MW035-03	74-85-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	BROMOCHLOROMETHANE	CMS-GW-MW035-03	74-97-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	CHLOROETHANE	CMS-GW-MW035-03	75-00-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	VINYL CHLORIDE	CMS-GW-MW035-03	75-01-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	METHYLENE CHLORIDE	CMS-GW-MW035-03	75-09-2	2U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	BROMOFORM	CMS-GW-MW035-03	75-25-2	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	BROMODICHLOROMETHANE	CMS-GW-MW035-03	75-27-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1-DICHLOROETHANE	CMS-GW-MW035-03	75-34-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1-DICHLOROETHENE	CMS-GW-MW035-03	75-35-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW035-03	75-69-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW035-03	75-71-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2-DICHLOROPROPANE	CMS-GW-MW035-03	78-87-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW035-03	79-00-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TRICHLOROETHENE	CMS-GW-MW035-03	79-01-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW035-03	79-34-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW035-03	87-61-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	HEXACHLOROBUTADIENE	CMS-GW-MW035-03	87-68-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	NAPHTHALENE	CMS-GW-MW035-03	91-20-3	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	O-XYLENE	CMS-GW-MW035-03	95-47-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	2-CHLOROTOLUENE	CMS-GW-MW035-03	95-49-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2-DICHLOROBENZENE	CMS-GW-MW035-03	95-50-1	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW035-03	95-63-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW035-03	96-12-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW035-03	96-18-4	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	TERT-BUTYLBENZENE	CMS-GW-MW035-03	98-06-6	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	ISOPROPYLBENZENE	CMS-GW-MW035-03	98-82-8	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02
CMS-GW-MW035-03	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW035-03	99-87-5	1U		UG/L			C2K220274	STL Pittsburgh	C2K220274001	22-Nov-02	2-Dec-02	2-Dec-02

NSAMPLE	METHOD	MDL	IDL	CPDL	CRQL	DIL FACTOR	PCT MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW03S-03	8260B					1	100		2	N			
CMS-GW-MW03S-03	8260B					1	100		2	N			
CMS-GW-MW03S-03	8260B					1	100		2	N			
CMS-GW-MW03S-03	8260B					1	100		2	N			
CMS-GW-MW03S-03	8260B	0.072	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.067	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.22	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.069	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.11	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.16	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.26	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.12	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.064	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.16	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.15	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.32	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.12	1			1	100		2	N	0.44U		
CMS-GW-MW03S-03	8260B	0.15	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.21	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.078	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.2	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.12	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.13	2			1	100		2	N	0.22U		
CMS-GW-MW03S-03	8260B	0.17	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.38	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.31	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.11	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.31	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.13	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.2	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.17	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.17	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.082	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.27	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.3	1			1	100		2	N	1UU		
CMS-GW-MW03S-03	8260B	0.28	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.19	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.19	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.2	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.14	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.15	2			1	100		2	N	2U		
CMS-GW-MW03S-03	8260B	0.3	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.13	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.22	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.38	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.43	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.66	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.15	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.13	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.087	1			1	100		2	N	1UU		
CMS-GW-MW03S-03	8260B	0.29	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.26	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.72	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.31	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.083	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.26	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.11	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.044	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.6	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.39	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.13	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.069	1			1	100		2	N	1U		
CMS-GW-MW03S-03	8260B	0.14	1			1	100		2	N	1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SIG	LABORATORY	LAB_ID	REC DATE	EXTR DATE	ANAL DATE
CMS-TB-112102A	OV	TOLUENE-D8	CMS-TB-112102A	2037-26-5	89		PCT REC		C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2-DICHLOROETHANE-D4	CMS-TB-112102A	17060-07-0	80		PCT REC		C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	4-BROMOFLUOROBENZENE	CMS-TB-112102A	480-00-4	79		PCT REC		C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	DIBROMOFLUOROMETHANE	CMS-TB-112102A	1868-53-7	87		PCT REC		C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	ETHYLBENZENE	CMS-TB-112102A	100-41-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	STYRENE	CMS-TB-112102A	100-42-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CIS-1,3-DICHLOROPROPENE	CMS-TB-112102A	10061-01-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TRANS-1,3-DICHLOROPROPENE	CMS-TB-112102A	10061-02-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	N-PROPYLBENZENE	CMS-TB-112102A	103-65-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	N-BUTYLBENZENE	CMS-TB-112102A	104-51-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	4-CHLOROTOLUENE	CMS-TB-112102A	106-43-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,4-DICHLOROBENZENE	CMS-TB-112102A	106-46-7	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2-DIBROMOETHANE	CMS-TB-112102A	106-93-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2-DICHLOROETHANE	CMS-TB-112102A	107-06-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,3,5-TRIMETHYLBENZENE	CMS-TB-112102A	108-67-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	BROMOBENZENE	CMS-TB-112102A	108-86-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TOLUENE	CMS-TB-112102A	108-88-3	0.22 J	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CHLOROBENZENE	CMS-TB-112102A	108-90-7	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2,4-TRICHLOROBENZENE	CMS-TB-112102A	120-82-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	DIBROMOCHLOROMETHANE	CMS-TB-112102A	124-48-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TETRACHLOROETHENE	CMS-TB-112102A	127-18-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	SEC-BUTYLBENZENE	CMS-TB-112102A	135-98-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	M-XYLENE & P-XYLENE	CMS-TB-112102A	136777-61-2	2U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,3-DICHLOROPROPANE	CMS-TB-112102A	142-28-9	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CIS-1,2-DICHLOROETHENE	CMS-TB-112102A	156-59-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TRANS-1,2-DICHLOROETHENE	CMS-TB-112102A	156-60-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,3-DICHLOROBENZENE	CMS-TB-112102A	541-73-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CARBON TETRACHLORIDE	CMS-TB-112102A	56-23-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1-DICHLOROPROPENE	CMS-TB-112102A	563-59-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	2,2-DICHLOROPROPANE	CMS-TB-112102A	594-20-7	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1,1,2-TETRACHLOROETHANE	CMS-TB-112102A	630-20-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CHLOROFORM	CMS-TB-112102A	67-66-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	BENZENE	CMS-TB-112102A	71-43-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1,1-TRICHLOROETHANE	CMS-TB-112102A	71-55-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	BROMOMETHANE	CMS-TB-112102A	74-83-9	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CHLOROMETHANE	CMS-TB-112102A	74-87-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	DIBROMOMETHANE	CMS-TB-112102A	74-95-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	BROMOCHLOROMETHANE	CMS-TB-112102A	74-97-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	CHLOROETHANE	CMS-TB-112102A	75-00-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	VINYL CHLORIDE	CMS-TB-112102A	75-01-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	METHYLENE CHLORIDE	CMS-TB-112102A	75-09-2	2U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	BROMOFORM	CMS-TB-112102A	75-25-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	BROMODICHLOROMETHANE	CMS-TB-112102A	75-27-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1-DICHLOROETHANE	CMS-TB-112102A	75-34-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1-DICHLOROETHENE	CMS-TB-112102A	75-35-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TRICHLOROFLUOROMETHANE	CMS-TB-112102A	75-69-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	DICHLORODIFLUOROMETHANE	CMS-TB-112102A	75-71-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2-DICHLOROPROPANE	CMS-TB-112102A	78-67-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1,2-TRICHLOROETHANE	CMS-TB-112102A	79-00-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TRICHLOROETHENE	CMS-TB-112102A	79-01-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,1,2,2-TETRACHLOROETHANE	CMS-TB-112102A	79-34-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2,3-TRICHLOROBENZENE	CMS-TB-112102A	87-61-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	HEXACHLOROBUTADIENE	CMS-TB-112102A	87-68-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	NAPHTHALENE	CMS-TB-112102A	91-20-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	O-XYLENE	CMS-TB-112102A	95-47-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	2-CHLOROTOLUENE	CMS-TB-112102A	95-49-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2-DICHLOROBENZENE	CMS-TB-112102A	95-60-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2,4-TRIMETHYLBENZENE	CMS-TB-112102A	95-63-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2-DIBROMO 3-CHLOROPROPANE	CMS-TB-112102A	96-12-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	1,2,3-TRICHLOROPROPANE	CMS-TB-112102A	96-18-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	TERT-BUTYLBENZENE	CMS-TB-112102A	98-06-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	ISOPROPYLBENZENE	CMS-TB-112102A	98-82-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02
CMS-TB-112102A	OV	ISOPROPYLTOLUENE	CMS-TB-112102A	99-87-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274002	22-Nov-02	2-Dec-02	2-Dec-02

IN SAMPLE	METHOD	MDL	IDL	ORDL_ORQL	IDL_FACTOR	PCT_MOIST	COMMENTS	OUTIER	LAB	QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-TB-112102A	8260B				1	100			2/N				
CMS-TB-112102A	8260B				1	100			2/N				
CMS-TB-112102A	8260B				1	100			2/N				
CMS-TB-112102A	8260B				1	100			2/N				
CMS-TB-112102A	8260B	0.072	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.087	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.22	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.069	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.11	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.18	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.25	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.12	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.084	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.14	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.15	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.32	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.12	1		1	100			2/N	0.22J			
CMS-TB-112102A	8260B	0.15	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.21	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.078	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.2	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.12	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.13	2		1	100			2/N		2U		
CMS-TB-112102A	8260B	0.17	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.38	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.31	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.11	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.31	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.13	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.2	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.17	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.17	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.082	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.27	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.3	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.28	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.19	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.19	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.2	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.14	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.15	2		1	100			2/N		2U		
CMS-TB-112102A	8260B	0.3	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.13	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.22	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.38	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.43	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.88	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.15	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.13	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.087	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.29	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.25	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.72	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.31	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.083	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.26	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.11	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.044	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.8	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.38	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.13	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.086	1		1	100			2/N		1U		
CMS-TB-112102A	8260B	0.14	1		1	100			2/N		1U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
CMS-GW-MW03S-03-DUP	OV	TOLUENE-D8	CMS-GW-MW03S-03-DUP	2037-26-5	85		PCT_REC		C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2-DICHLOROETHANE-D4	CMS-GW-MW03S-03-DUP	17060-07-0	71		PCT_REC		C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	4-BROMOFLUOROBENZENE	CMS-GW-MW03S-03-DUP	460-00-4	76		PCT_REC		C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	DIBROMOFLUOROMETHANE	CMS-GW-MW03S-03-DUP	1868-53-7	77		PCT_REC		C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	ETHYLBENZENE	CMS-GW-MW03S-03-DUP	100-41-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	STYRENE	CMS-GW-MW03S-03-DUP	100-42-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CIS-1,3-DICHLOROPROPENE	CMS-GW-MW03S-03-DUP	10061-01-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TRANS-1,3-DICHLOROPROPENE	CMS-GW-MW03S-03-DUP	10061-02-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	N-PROPYLBENZENE	CMS-GW-MW03S-03-DUP	103-65-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	N-BUTYLBENZENE	CMS-GW-MW03S-03-DUP	104-51-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	4-CHLOROTOLUENE	CMS-GW-MW03S-03-DUP	106-43-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,4-DICHLOROBENZENE	CMS-GW-MW03S-03-DUP	106-46-7	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2-DIBROMOETHANE	CMS-GW-MW03S-03-DUP	106-83-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2-DICHLOROETHANE	CMS-GW-MW03S-03-DUP	107-06-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,3,5-TRIMETHYLBENZENE	CMS-GW-MW03S-03-DUP	108-87-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	BROMOBENZENE	CMS-GW-MW03S-03-DUP	108-86-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TOLUENE	CMS-GW-MW03S-03-DUP	108-88-3	0.95 U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CHLOROBENZENE	CMS-GW-MW03S-03-DUP	108-90-7	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2,4-TRICHLOROBENZENE	CMS-GW-MW03S-03-DUP	120-82-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	DIBROMOCHLOROMETHANE	CMS-GW-MW03S-03-DUP	124-48-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TETRACHLOROETHENE	CMS-GW-MW03S-03-DUP	127-18-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	SEC-BUTYLBENZENE	CMS-GW-MW03S-03-DUP	135-96-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	M-XYLENE & P-XYLENE	CMS-GW-MW03S-03-DUP	136777-61-2	0.21 U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,3-DICHLOROPROPANE	CMS-GW-MW03S-03-DUP	142-28-9	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CIS-1,2-DICHLOROETHENE	CMS-GW-MW03S-03-DUP	156-59-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TRANS-1,2-DICHLOROETHENE	CMS-GW-MW03S-03-DUP	158-90-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,3-DICHLOROBENZENE	CMS-GW-MW03S-03-DUP	164-173-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CARBON TETRACHLORIDE	CMS-GW-MW03S-03-DUP	196-23-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1-DICHLOROPROPENE	CMS-GW-MW03S-03-DUP	1563-59-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	2,2-DICHLOROPROPANE	CMS-GW-MW03S-03-DUP	1564-20-7	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1,1,2-TETRACHLOROETHANE	CMS-GW-MW03S-03-DUP	1330-20-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CHLOROFORM	CMS-GW-MW03S-03-DUP	67-66-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	BENZENE	CMS-GW-MW03S-03-DUP	71-43-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1,1-TRICHLOROETHANE	CMS-GW-MW03S-03-DUP	71-55-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	BROMOMETHANE	CMS-GW-MW03S-03-DUP	74-83-9	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CHLOROMETHANE	CMS-GW-MW03S-03-DUP	74-87-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	DIBROMOMETHANE	CMS-GW-MW03S-03-DUP	74-95-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	BROMOCHLOROMETHANE	CMS-GW-MW03S-03-DUP	74-97-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	CHLOROETHANE	CMS-GW-MW03S-03-DUP	75-00-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	VINYL CHLORIDE	CMS-GW-MW03S-03-DUP	75-01-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	METHYLENE CHLORIDE	CMS-GW-MW03S-03-DUP	75-09-2	2U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	BROMOFORM	CMS-GW-MW03S-03-DUP	75-25-2	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	BROMODICHLOROMETHANE	CMS-GW-MW03S-03-DUP	75-27-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1-DICHLOROETHANE	CMS-GW-MW03S-03-DUP	75-34-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1-DICHLOROETHENE	CMS-GW-MW03S-03-DUP	75-35-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TRICHLOROFLUOROMETHANE	CMS-GW-MW03S-03-DUP	75-69-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	DICHLORODIFLUOROMETHANE	CMS-GW-MW03S-03-DUP	75-71-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2-DICHLOROPROPANE	CMS-GW-MW03S-03-DUP	78-87-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1,2-TRICHLOROETHANE	CMS-GW-MW03S-03-DUP	79-00-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TRICHLOROETHENE	CMS-GW-MW03S-03-DUP	79-01-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,1,2,2-TETRACHLOROETHANE	CMS-GW-MW03S-03-DUP	79-34-5	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2,3-TRICHLOROBENZENE	CMS-GW-MW03S-03-DUP	87-61-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	HEXACHLOROBUTADIENE	CMS-GW-MW03S-03-DUP	87-68-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	NAPHTHALENE	CMS-GW-MW03S-03-DUP	91-20-3	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	O-XYLENE	CMS-GW-MW03S-03-DUP	95-47-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	2-CHLOROTOLUENE	CMS-GW-MW03S-03-DUP	95-49-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2-DICHLOROBENZENE	CMS-GW-MW03S-03-DUP	95-50-1	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2,4-TRIMETHYLBENZENE	CMS-GW-MW03S-03-DUP	95-63-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2-DIBROMO-3-CHLOROPROPANE	CMS-GW-MW03S-03-DUP	96-12-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	1,2,3-TRICHLOROPROPANE	CMS-GW-MW03S-03-DUP	96-18-4	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	TERT-BUTYLBENZENE	CMS-GW-MW03S-03-DUP	98-06-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	ISOPROPYLBENZENE	CMS-GW-MW03S-03-DUP	98-82-8	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02
CMS-GW-MW03S-03-DUP	OV	P-ISOPROPYLTOLUENE	CMS-GW-MW03S-03-DUP	99-87-6	1U	UG/L			C2K220274	STL Pittsburgh	C2K220274004	22-Nov-02	3-Dec-02	3-Dec-02

INSAMPLE	METHOD	MDL	IDL	CRDL_CRQL	IDL_FACTOR	PCT_MOIST	COMMENTS	OUTLIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
CMS-GW-MW03S-03-DUP	8260B				1	100		2/N				
CMS-GW-MW03S-03-DUP	8260B				1	100		2/N				
CMS-GW-MW03S-03-DUP	8260B				1	100		2/N				
CMS-GW-MW03S-03-DUP	8260B				1	100		2/N				
CMS-GW-MW03S-03-DUP	8260B	0.072	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.067	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.22	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.069	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.11	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.16	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.25	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.12	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.084	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.14	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.15	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.32	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.12	1		1	100		2/N		0.35/U		
CMS-GW-MW03S-03-DUP	8260B	0.15	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.21	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.078	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.2	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.12	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.13	2		1	100		2/N		0.21/U		
CMS-GW-MW03S-03-DUP	8260B	0.17	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.38	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.31	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.11	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.31	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.13	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.2	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.17	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.17	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.082	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.27	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.3	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.28	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.19	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.19	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.2	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.14	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.15	2		1	100		2/N		2/U		
CMS-GW-MW03S-03-DUP	8260B	0.3	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.13	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.22	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.38	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.43	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.66	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.15	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.13	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.087	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.29	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.25	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.72	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.31	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.083	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.26	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.11	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.044	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.8	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.38	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.13	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.088	1		1	100		2/N		1/U		
CMS-GW-MW03S-03-DUP	8260B	0.14	1		1	100		2/N		1/U		

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2L0200001088	OV	TOLUENE-D8	C2L0200001088	2037-26-5	86		PCT_REC	C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2-DICHLOROETHANE-D4	C2L0200001088	17060-07-0	81		PCT_REC	C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	4-BROMOFLUOROBENZENE	C2L0200001088	460-00-4	77		PCT_REC	C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	DIBROMOFLUOROMETHANE	C2L0200001088	1868-53-7	85		PCT_REC	C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	ETHYLBENZENE	C2L0200001088	100-41-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	STYRENE	C2L0200001088	100-42-5	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CIS-1,3-DICHLOROPROPENE	C2L0200001088	10061-01-5	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TRANS-1,3-DICHLOROPROPENE	C2L0200001088	10061-02-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	N-PROPYLBENZENE	C2L0200001088	103-65-1	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	N-BUTYLBENZENE	C2L0200001088	104-51-8	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	4-CHLOROTOLUENE	C2L0200001088	106-43-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,4-DICHLOROBENZENE	C2L0200001088	106-46-7	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2-DIBROMOETHANE	C2L0200001088	106-93-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2-DICHLOROETHANE	C2L0200001088	107-06-2	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,3,5-TRIMETHYLBENZENE	C2L0200001088	108-67-8	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	BROMOBENZENE	C2L0200001088	108-96-1	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TOLUENE	C2L0200001088	108-98-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CHLOROBENZENE	C2L0200001088	108-90-7	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2,4-TRICHLOROBENZENE	C2L0200001088	120-82-1	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	DIBROMOCHLOROMETHANE	C2L0200001088	124-48-1	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TETRACHLOROETHENE	C2L0200001088	127-18-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	SEC-BUTYLBENZENE	C2L0200001088	135-98-8	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	M-XYLENE & P-XYLENE	C2L0200001088	136777-61-2	2U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,3-DICHLOROPROPANE	C2L0200001088	142-28-9	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CIS-1,2-DICHLOROETHENE	C2L0200001088	156-59-2	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TRANS-1,2-DICHLOROETHENE	C2L0200001088	156-60-5	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,3-DICHLOROBENZENE	C2L0200001088	541-73-1	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CARBON TETRACHLORIDE	C2L0200001088	56-23-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1-DICHLOROPROPENE	C2L0200001088	563-59-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	2,2-DICHLOROPROPANE	C2L0200001088	594-20-7	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1,1,2-TETRACHLOROETHANE	C2L0200001088	630-20-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CHLOROFORM	C2L0200001088	67-66-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	BENZENE	C2L0200001088	71-43-2	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1,1-TRICHLOROETHANE	C2L0200001088	71-55-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	BROMOMETHANE	C2L0200001088	74-83-9	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CHLOROMETHANE	C2L0200001088	74-87-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	DIBROMOMETHANE	C2L0200001088	74-95-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	BROMOCHLOROMETHANE	C2L0200001088	74-97-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	CHLOROETHANE	C2L0200001088	75-00-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	VINYL CHLORIDE	C2L0200001088	75-01-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	METHYLENE CHLORIDE	C2L0200001088	75-09-2	2U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	BROMOFORM	C2L0200001088	75-25-2	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	BROMODICHLOROMETHANE	C2L0200001088	75-27-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1-DICHLOROETHANE	C2L0200001088	75-34-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1-DICHLOROETHENE	C2L0200001088	75-35-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TRICHLOROFLUOROMETHANE	C2L0200001088	75-69-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	DICHLORODIFLUOROMETHANE	C2L0200001088	75-71-8	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2-DICHLOROPROPANE	C2L0200001088	78-67-5	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1,2-TRICHLOROETHANE	C2L0200001088	79-00-5	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TRICHLOROETHENE	C2L0200001088	79-01-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,1,2,2-TETRACHLOROETHANE	C2L0200001088	79-34-5	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2,3-TRICHLOROBENZENE	C2L0200001088	87-61-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	HEXACHLOROBTADIENE	C2L0200001088	87-68-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	NAPHTHALENE	C2L0200001088	91-20-3	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	O-XYLENE	C2L0200001088	95-47-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	2-CHLOROTOLUENE	C2L0200001088	95-49-8	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2-DICHLOROBENZENE	C2L0200001088	95-50-1	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2,4-TRIMETHYLBENZENE	C2L0200001088	95-63-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2L0200001088	96-12-8	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	1,2,3-TRICHLOROPROPANE	C2L0200001088	96-18-4	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	TERT-BUTYLBENZENE	C2L0200001088	98-06-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	ISOPROPYLBENZENE	C2L0200001088	98-82-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	
C2L0200001088	OV	P-ISOPROPYLTOLUENE	C2L0200001088	99-87-6	1U	UG/L		C2K220274	STL Pittsburgh	C2L0200001088		2-Dec-02	2-Dec-02	

NSAMPLE	METHOD	MEJL	IDL	ORDL	CRQL	DIL_FACTOR	PCT	MOIST	COMMENTS	IVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C21.0200001088	8260B					1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B					1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B					1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B					1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.072	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.067	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.22	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.066	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.11	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.16	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.25	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.12	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.084	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.14	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.15	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.32	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.12	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.15	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.21	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.078	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.2	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.12	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.13	2			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.17	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.38	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.31	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.11	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.31	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.13	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.2	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.17	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.17	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.082	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.27	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.3	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.28	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.19	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.19	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.2	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.14	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.15	2			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.3	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.13	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.22	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.38	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.43	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.66	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.15	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.13	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.087	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.29	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.25	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.72	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.31	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.083	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.26	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.11	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.044	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.8	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.39	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.13	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.088	1			1	100		INTRA-LAB BLANK	2	MB			
C21.0200001088	8260B	0.14	1			1	100		INTRA-LAB BLANK	2	MB			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	ICASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2L020000108C	OV	TOLUENE-D8	C2L020000108C	2037-28-5	99	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2-DICHLOROETHANE-D4	C2L020000108C	17060-07-0	98	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	4-BROMOFLUOROBENZENE	C2L020000108C	460-00-4	93	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	DIBROMOFLUOROMETHANE	C2L020000108C	1868-53-7	103	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	ETHYLBENZENE	C2L020000108C	100-41-4	96	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	STYRENE	C2L020000108C	100-42-5	97	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CIS-1,3-DICHLOROPROPENE	C2L020000108C	10061-01-5	95	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TRANS-1,3-DICHLOROPROPENE	C2L020000108C	10061-02-6	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	N-PROPYLBENZENE	C2L020000108C	103-65-1	91	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	N-BUTYLBENZENE	C2L020000108C	104-51-8	105	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	4-CHLOROTOLUENE	C2L020000108C	106-43-4	89	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,4-DICHLOROBENZENE	C2L020000108C	106-46-7	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2-DIBROMOETHANE	C2L020000108C	106-93-4	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2-DICHLOROETHANE	C2L020000108C	107-06-2	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,3,5-TRIMETHYLBENZENE	C2L020000108C	108-67-8	93	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	BROMOBENZENE	C2L020000108C	108-86-1	86	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TOLUENE	C2L020000108C	108-88-3	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CHLOROBENZENE	C2L020000108C	108-90-7	94	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2,4-TRICHLOROBENZENE	C2L020000108C	120-82-1	100	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	DIBROMOCHLOROMETHANE	C2L020000108C	124-48-1	96	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TETRACHLOROETHENE	C2L020000108C	127-18-4	88	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	SEC-BUTYLBENZENE	C2L020000108C	135-98-6	95	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	M-XYLENE & P-XYLENE	C2L020000108C	136777-61-2	98	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,3-DICHLOROPROPANE	C2L020000108C	142-28-9	93	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CIS-1,2-DICHLOROETHENE	C2L020000108C	156-59-2	99	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TRANS-1,2-DICHLOROETHENE	C2L020000108C	156-60-5	91	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,3-DICHLOROBENZENE	C2L020000108C	541-73-1	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CARBON TETRACHLORIDE	C2L020000108C	58-23-5	94	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1-DICHLOROPROPENE	C2L020000108C	563-58-6	87	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	2,2-DICHLOROPROPANE	C2L020000108C	594-20-7	88	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1,1,2-TETRACHLOROETHANE	C2L020000108C	630-20-8	97	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CHLOROFORM	C2L020000108C	67-66-3	95	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	BENZENE	C2L020000108C	71-43-2	96	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1,1-TRICHLOROETHANE	C2L020000108C	71-55-8	88	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	BROMOMETHANE	C2L020000108C	74-83-9	79	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CHLOROMETHANE	C2L020000108C	74-87-3	112	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	DIBROMOMETHANE	C2L020000108C	74-95-3	95	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	BROMOCHLOROMETHANE	C2L020000108C	74-97-5	98	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	CHLOROETHANE	C2L020000108C	75-00-3	101	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	VINYL CHLORIDE	C2L020000108C	75-01-4	103	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	METHYLENE CHLORIDE	C2L020000108C	75-09-2	94	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	BROMOFORM	C2L020000108C	75-25-2	94	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	BROMODICHLOROMETHANE	C2L020000108C	75-27-4	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1-DICHLOROETHANE	C2L020000108C	75-34-3	94	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1-DICHLOROETHENE	C2L020000108C	75-35-4	85	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TRICHLOROFLUOROMETHANE	C2L020000108C	75-69-4	83	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	DICHLORODIFLUOROMETHANE	C2L020000108C	75-71-8	135	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2-DICHLOROPROPANE	C2L020000108C	78-87-5	96	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1,2-TRICHLOROETHANE	C2L020000108C	79-00-5	92	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TRICHLOROETHENE	C2L020000108C	79-01-6	88	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,1,2,2-TETRACHLOROETHANE	C2L020000108C	79-34-5	81	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2,3-TRICHLOROBENZENE	C2L020000108C	87-61-6	97	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	HEXACHLOROBUTADIENE	C2L020000108C	87-68-3	108	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	NAPHTHALENE	C2L020000108C	91-20-3	85	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	O-XYLENE	C2L020000108C	95-47-6	95	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	2-CHLOROTOLUENE	C2L020000108C	95-49-8	85	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2-DICHLOROBENZENE	C2L020000108C	95-50-1	88	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2,4-TRIMETHYLBENZENE	C2L020000108C	95-63-6	97	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2L020000108C	96-12-8	81	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	1,2,3-TRICHLOROPROPANE	C2L020000108C	96-18-4	84	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	TERT-BUTYLBENZENE	C2L020000108C	98-06-6	91	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	ISOPROPYLBENZENE	C2L020000108C	98-82-8	90	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	
C2L020000108C	OV	P-ISOPROPYLTOLUENE	C2L020000108C	99-87-6	102	PCT_REC		C2K220274	STL Pittsburgh	C2L020000108C		2-Dec-02	2-Dec-02	

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C21.020000108C	8260B					1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B					1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B					1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B					1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.072	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.067	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.22	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.069	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.11	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.16	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.25	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.12	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.084	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.14	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.15	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.32	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.12	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.15	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.21	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.076	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.2	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.12	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.13	2			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.17	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.36	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.31	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.11	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.31	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.13	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.2	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.17	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.17	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.062	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.27	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.3	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.28	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.19	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.19	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.2	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.14	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.15	2			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.3	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.13	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.22	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.38	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.43	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.66	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.15	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.13	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.087	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.29	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.25	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.72	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.31	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.063	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.26	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.11	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.044	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.8	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.36	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.13	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.066	1			1	100	CHECK SAMPLE	2	LCS			
C21.020000108C	8260B	0.14	1			1	100	CHECK SAMPLE	2	LCS			

NSAMPLE	CLASS	PARAMETER	EPAS/MNO	CASNO	LAB RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB ID	REC DATE	EXTR DATE	ANAL DATE
C2L020000108L	OV	TOLUENE-D8	C2L020000108L	2037-26-5	93		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2-DICHLOROETHANE-D4	C2L020000108L	17080-07-0	100		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	4-BROMOFLUOROBENZENE	C2L020000108L	480-00-4	93		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	DIBROMOFLUOROMETHANE	C2L020000108L	1868-53-7	102		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	ETHYLBENZENE	C2L020000108L	100-41-4	92		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	STYRENE	C2L020000108L	100-42-5	96		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CIS-1,3-DICHLOROPROPENE	C2L020000108L	10061-01-5	102		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TRANS-1,3-DICHLOROPROPENE	C2L020000108L	10061-02-6	100		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	N-PROPYLBENZENE	C2L020000108L	103-65-1	88		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	N-BUTYLBENZENE	C2L020000108L	104-51-8	103		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	4-CHLOROTOLUENE	C2L020000108L	106-43-4	91		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,4-DICHLOROBENZENE	C2L020000108L	106-46-7	95		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2-DIBROMOETHANE	C2L020000108L	106-93-4	102		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2-DICHLOROETHANE	C2L020000108L	107-06-2	100		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,3,5-TRIMETHYLBENZENE	C2L020000108L	108-67-8	93		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	BROMOBENZENE	C2L020000108L	108-96-1	87		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TOLUENE	C2L020000108L	108-98-3	91		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CHLOROBENZENE	C2L020000108L	108-90-7	94		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2,4-TRICHLOROBENZENE	C2L020000108L	120-82-1	111		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	DIBROMOCHLOROMETHANE	C2L020000108L	124-48-1	100		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TETRACHLOROETHENE	C2L020000108L	127-18-4	88		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	SEC-BUTYLBENZENE	C2L020000108L	135-98-8	93		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	M-XYLENE & P-XYLENE	C2L020000108L	136777-61-2	96		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,3-DICHLOROPROPANE	C2L020000108L	142-28-9	98		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CIS-1,2-DICHLOROETHENE	C2L020000108L	156-59-2	96		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TRANS-1,2-DICHLOROETHENE	C2L020000108L	156-60-3	92		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,3-DICHLOROBENZENE	C2L020000108L	541-73-1	94		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CARBON TETRACHLORIDE	C2L020000108L	55-23-5	80		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1-DICHLOROPROPENE	C2L020000108L	563-55-6	85		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	2,2-DICHLOROPROPANE	C2L020000108L	554-25-7	85		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1,1,2-TETRACHLOROETHANE	C2L020000108L	830-20-6	87		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CHLOROFORM	C2L020000108L	67-66-3	96		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	BENZENE	C2L020000108L	71-43-2	96		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1,1-TRICHLOROETHANE	C2L020000108L	71-55-8	88		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	BROMOMETHANE	C2L020000108L	74-83-9	80		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CHLOROMETHANE	C2L020000108L	74-87-3	113		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	DIBROMOMETHANE	C2L020000108L	74-95-3	103		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	BROMOCHLOROMETHANE	C2L020000108L	74-97-5	100		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	CHLOROETHANE	C2L020000108L	75-00-3	97		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	VINYL CHLORIDE	C2L020000108L	75-01-4	98		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	METHYLENE CHLORIDE	C2L020000108L	75-09-2	99		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	BROMOFORM	C2L020000108L	75-25-2	101		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	BROMODICHLOROMETHANE	C2L020000108L	75-27-4	99		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1-DICHLOROETHANE	C2L020000108L	75-34-3	94		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1-DICHLOROETHENE	C2L020000108L	75-35-4	83		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TRICHLOROFLUOROMETHANE	C2L020000108L	75-69-4	78		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	DICHLORODIFLUOROMETHANE	C2L020000108L	75-71-8	127		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2-DICHLOROPROPANE	C2L020000108L	78-87-5	99		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1,2-TRICHLOROETHANE	C2L020000108L	79-00-5	100		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TRICHLOROETHENE	C2L020000108L	79-01-6	80		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,1,2,2-TETRACHLOROETHANE	C2L020000108L	79-34-5	90		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2,3-TRICHLOROBENZENE	C2L020000108L	87-61-6	109		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	HEXACHLOROBUTADIENE	C2L020000108L	87-68-3	105		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	NAPHTHALENE	C2L020000108L	91-20-3	99		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	O-XYLENE	C2L020000108L	95-47-6	96		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	2-CHLOROTOLUENE	C2L020000108L	95-49-8	80		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2-DICHLOROBENZENE	C2L020000108L	95-50-1	92		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2,4-TRIMETHYLBENZENE	C2L020000108L	95-63-6	97		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2L020000108L	96-12-8	97		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	1,2,3-TRICHLOROPROPANE	C2L020000108L	96-18-4	89		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	TERT-BUTYLBENZENE	C2L020000108L	98-06-6	89		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	ISOPROPYLBENZENE	C2L020000108L	98-82-8	95		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	
C2L020000108L	OV	P-ISOPROPYLTOLUENE	C2L020000108L	99-87-6	101		PCT_REC	C2K220274	STL Pittsburgh	C2L020000108L		2-Dec-02	2-Dec-02	

NSAMPLE	METHOD	MDL	IDL	ORDL	CRQL	DL_FACTOR	PCT_MOIST	COMMENTS	DVTR	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2L020000108L	8260B						1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B						1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B						1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B						1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.072	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.087	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.22	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.069	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.11	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.18	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.25	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.12	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.094	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.14	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.15	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.32	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.12	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.15	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.21	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.078	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.2	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.12	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.13	2				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.17	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.38	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.31	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.11	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.31	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.13	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.2	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.17	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.17	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.082	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.27	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.3	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.28	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.19	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.19	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.2	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.14	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.15	2				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.3	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.13	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.22	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.38	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.43	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.66	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.15	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.13	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.087	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.29	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.25	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.72	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.31	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.083	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.28	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.11	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.044	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.8	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.38	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.13	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.088	1				1	100 DUPLICATE CHECK		2 LCSD			
C2L020000108L	8260B	0.14	1				1	100 DUPLICATE CHECK		2 LCSD			

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2L0300004988	OV	TOLUENE-D8	C2L0300004988	2037-26-5	83	PCT_REC			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2-DICHLOROETHANE-D4	C2L0300004988	17060-07-0	75	PCT_REC			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	4-BROMOFLUOROBENZENE	C2L0300004988	460-00-4	75	PCT_REC			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	DIBROMOFLUOROMETHANE	C2L0300004988	1868-53-7	79	PCT_REC			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	ETHYLBENZENE	C2L0300004988	100-41-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	STYRENE	C2L0300004988	100-42-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CIS-1,3-DICHLOROPROPENE	C2L0300004988	10061-01-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TRANS-1,3-DICHLOROPROPENE	C2L0300004988	10061-02-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	N-PROPYLBENZENE	C2L0300004988	103-65-1	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	N-BUTYLBENZENE	C2L0300004988	104-51-8	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	4-CHLOROTOLUENE	C2L0300004988	106-43-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,4-DICHLOROBENZENE	C2L0300004988	106-46-7	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2-DIBROMOETHANE	C2L0300004988	106-93-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2-DICHLOROETHANE	C2L0300004988	107-06-2	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,3,5-TRIMETHYLBENZENE	C2L0300004988	108-67-8	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	BROMOBENZENE	C2L0300004988	108-66-1	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TOLUENE	C2L0300004988	108-68-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CHLOROBENZENE	C2L0300004988	108-90-7	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2,4-TRICHLOROBENZENE	C2L0300004988	120-82-1	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	DIBROMOCHLOROMETHANE	C2L0300004988	124-48-1	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TETRACHLOROETHENE	C2L0300004988	127-18-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	SEC-BUTYLBENZENE	C2L0300004988	135-98-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	M-XYLENE & P-XYLENE	C2L0300004988	136777-61-2	2U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,3-DICHLOROPROPANE	C2L0300004988	142-28-9	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CIS-1,2-DICHLOROETHENE	C2L0300004988	156-59-2	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TRANS-1,2-DICHLOROETHENE	C2L0300004988	156-60-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,3-DICHLOROBENZENE	C2L0300004988	541-73-1	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CARBON TETRACHLORIDE	C2L0300004988	56-23-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1-DICHLOROPROPENE	C2L0300004988	563-69-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	2,2-DICHLOROPROPANE	C2L0300004988	594-20-7	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1,1,2-TETRACHLOROETHANE	C2L0300004988	830-20-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CHLOROFORM	C2L0300004988	67-66-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	BENZENE	C2L0300004988	71-43-2	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1,1-TRICHLOROETHANE	C2L0300004988	71-55-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	BROMOMETHANE	C2L0300004988	74-83-9	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CHLOROMETHANE	C2L0300004988	74-87-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	DIBROMOMETHANE	C2L0300004988	74-95-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	BROMOCHLOROMETHANE	C2L0300004988	74-97-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	CHLOROETHANE	C2L0300004988	75-00-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	VINYL CHLORIDE	C2L0300004988	75-01-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	METHYLENE CHLORIDE	C2L0300004988	75-09-2	2U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	BROMOFORM	C2L0300004988	75-25-2	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	BROMODICHLOROMETHANE	C2L0300004988	75-27-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1-DICHLOROETHANE	C2L0300004988	75-34-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1-DICHLOROETHENE	C2L0300004988	75-35-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TRICHLOROFLUOROMETHANE	C2L0300004988	75-69-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	DICHLORODIFLUOROMETHANE	C2L0300004988	75-71-8	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2-DICHLOROPROPANE	C2L0300004988	78-67-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1,2-TRICHLOROETHANE	C2L0300004988	79-00-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TRICHLOROETHENE	C2L0300004988	79-01-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,1,2,2-TETRACHLOROETHANE	C2L0300004988	79-34-5	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2,3-TRICHLOROBENZENE	C2L0300004988	87-61-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	HEXACHLOROBTADIENE	C2L0300004988	87-68-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	NAPHTHALENE	C2L0300004988	91-20-3	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	O-XYLENE	C2L0300004988	95-47-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	2-CHLOROTOLUENE	C2L0300004988	95-49-8	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2-DICHLOROBENZENE	C2L0300004988	95-50-1	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2,4-TRIMETHYLBENZENE	C2L0300004988	95-63-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2L0300004988	96-12-8	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	1,2,3-TRICHLOROPROPANE	C2L0300004988	96-18-4	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	TERT-BUTYLBENZENE	C2L0300004988	98-06-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	ISOPROPYLBENZENE	C2L0300004988	98-82-8	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02
C2L0300004988	OV	P-ISOPROPYLTOLUENE	C2L0300004988	98-87-6	1U	UG/L			C2K220274	STL Pittsburgh	C2L0300004988		3-Dec-02	3-Dec-02

NSAMPLE	METHOD	MDL	IDL	CRDL	CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2L030000498B	8260B						1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B						1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B						1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B						1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.072	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.067	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.22	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.069	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.11	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.16	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.25	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.12	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.084	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.14	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.15	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.32	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.12	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.15	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.21	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.078	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.2	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.12	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.13	2				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.17	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.38	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.31	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.11	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.31	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.13	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.2	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.17	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.17	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.062	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.27	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.3	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.28	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.19	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.19	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.2	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.14	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.16	2				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.3	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.13	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.22	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.38	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.43	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.66	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.15	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.13	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.087	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.29	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.25	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.72	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.31	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.083	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.26	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.11	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.044	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.6	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.38	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.13	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.068	1				1	100 INTRA-LAB BLANK	2	MB			
C2L030000498B	8260B	0.14	1				1	100 INTRA-LAB BLANK	2	MB			

INSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE	ANAL_DATE
C2L030000498C	OV	TOLUENE-D8	C2L030000498C	2037-26-5	102		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2-DICHLOROETHANE-D4	C2L030000498C	17060-07-0	91		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	4-BROMOFLUOROBENZENE	C2L030000498C	460-00-4	94		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	DIBROMOFLUOROMETHANE	C2L030000498C	1868-53-7	88		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	ETHYLBENZENE	C2L030000498C	100-41-4	104		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	STYRENE	C2L030000498C	100-42-5	104		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CIS-1,3-DICHLOROPROPENE	C2L030000498C	10061-01-5	88		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TRANS-1,3-DICHLOROPROPENE	C2L030000498C	10061-02-6	97		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	N-PROPYLBENZENE	C2L030000498C	103-65-1	108		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	N-BUTYLBENZENE	C2L030000498C	104-51-8	125		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	4-CHLOROTOLUENE	C2L030000498C	106-43-4	101		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,4-DICHLOROBENZENE	C2L030000498C	106-46-7	103		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2-DIBROMOETHANE	C2L030000498C	106-93-4	97		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2-DICHLOROETHANE	C2L030000498C	107-06-2	93		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,3,5-TRIMETHYLBENZENE	C2L030000498C	108-67-8	109		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	BROMOBENZENE	C2L030000498C	108-85-1	97		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TOLUENE	C2L030000498C	108-88-3	103		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CHLOROBENZENE	C2L030000498C	108-90-7	101		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2,4-TRICHLOROBENZENE	C2L030000498C	120-82-1	114		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	DIBROMOCHLOROMETHANE	C2L030000498C	124-48-1	94		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TETRACHLOROETHENE	C2L030000498C	127-18-4	108		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	SEC-BUTYLBENZENE	C2L030000498C	135-98-8	114		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	M-XYLENE & P-XYLENE	C2L030000498C	136777-61-2	106		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,3-DICHLOROPROPANE	C2L030000498C	142-28-9	95		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CIS-1,2-DICHLOROETHENE	C2L030000498C	156-59-2	100		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TRANS-1,2-DICHLOROETHENE	C2L030000498C	156-60-5	104		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,3-DICHLOROBENZENE	C2L030000498C	541-73-1	102		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CARBON TETRACHLORIDE	C2L030000498C	56-23-5	104		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1-DICHLOROPROPENE	C2L030000498C	569-58-6	108		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	2,2-DICHLOROPROPANE	C2L030000498C	594-20-7	106		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1,1,2-TETRACHLOROETHANE	C2L030000498C	630-20-6	99		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CHLOROFORM	C2L030000498C	67-68-3	100		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	BENZENE	C2L030000498C	71-43-2	100		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1,1-TRICHLOROETHANE	C2L030000498C	71-55-6	102		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	BROMOMETHANE	C2L030000498C	74-83-9	95		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CHLOROMETHANE	C2L030000498C	74-87-3	103		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	DIBROMOMETHANE	C2L030000498C	74-95-3	97		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	BROMOCHLOROMETHANE	C2L030000498C	74-97-5	95		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	CHLOROETHANE	C2L030000498C	75-00-3	106		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	VINYL CHLORIDE	C2L030000498C	75-01-4	106		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	METHYLENE CHLORIDE	C2L030000498C	75-09-2	97		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	BROMOFORM	C2L030000498C	75-25-2	86		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	BROMODICHLOROMETHANE	C2L030000498C	75-27-4	99		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1-DICHLOROETHANE	C2L030000498C	75-34-3	99		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1-DICHLOROETHENE	C2L030000498C	75-35-4	105		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TRICHLOROFLUOROMETHANE	C2L030000498C	75-69-4	108		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	DICHLORODIFLUOROMETHANE	C2L030000498C	75-71-8	96		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2-DICHLOROPROPANE	C2L030000498C	78-67-6	98		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1,2-TRICHLOROETHANE	C2L030000498C	79-00-6	95		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TRICHLOROETHENE	C2L030000498C	79-01-6	105		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,1,2,2-TETRACHLOROETHANE	C2L030000498C	79-34-5	88		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2,3-TRICHLOROBENZENE	C2L030000498C	87-61-6	108		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	HEXACHLOROBTADIENE	C2L030000498C	87-68-3	132		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	NAPHTHALENE	C2L030000498C	91-20-3	90		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	O-XYLENE	C2L030000498C	95-47-6	105		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	2-CHLOROTOLUENE	C2L030000498C	95-49-8	100		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2-DICHLOROBENZENE	C2L030000498C	95-50-1	99		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2,4-TRIMETHYLBENZENE	C2L030000498C	95-63-6	110		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2-DIBROMO-3-CHLOROPROPANE	C2L030000498C	96-12-8	78		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	1,2,3-TRICHLOROPROPANE	C2L030000498C	96-18-4	86		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	TERT-BUTYLBENZENE	C2L030000498C	98-06-6	108		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	ISOPROPYLBENZENE	C2L030000498C	98-82-6	110		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02
C2L030000498C	OV	P-ISOPROPYLTOLUENE	C2L030000498C	99-87-6	114		PCT_REC	C2K220274	STL Pittsburgh	C2L030000498C		3-Dec-02	3-Dec-02	3-Dec-02

NSAMPLE	METHOD	MIXL	HOL	CHOL	CHOL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTRIER	LAB	QC TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
C2L030000498C	8260B					1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B					1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B					1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B					1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.072	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.067	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.22	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.069	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.11	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.16	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.25	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.12	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.084	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.14	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.15	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.32	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.12	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.15	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.21	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.078	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.2	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.12	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.13	2			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.17	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.38	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.31	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.11	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.31	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.13	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.2	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.17	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.082	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.27	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.3	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.28	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.19	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.18	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.2	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.14	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.15	2			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.3	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.13	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.22	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.38	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.43	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.66	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.15	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.13	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.087	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.29	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.25	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.72	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.31	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.083	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.26	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.11	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.044	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.8	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.38	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.13	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.089	1			1		100 CHECK SAMPLE		21CS				
C2L030000498C	8260B	0.14	1			1		100 CHECK SAMPLE		21CS				

Section 7 Grain Size and TOC Results

QA/QC Narrative
Soil and QC Results

QA/QC Narrative

GRAIN SIZE & TOC QA/QC SUMMARY

PROJECT Battelle/Centredale Manor
PARAMETER Grain Size and TOC Analysis
LABORATORY Applied Marine Sciences, Inc. (AMS)
BATCH IDS N/A
MATRIX Soil
SAMPLE CUSTODY Samples were collected from 11/19 to 11/22/02. Samples were received at AMS labs on November 26, 2002 and placed in refrigerated storage at 4°C.

QA/QC DATA QUALITY OBJECTIVES:

Reference Method	Blank	LCS/MS Recovery	SRM % Diff.	Surrogate Recovery	Relative Precision	Achieved Detection Limit (% DW)	Target Detection Limit (% DW)
ASTM D422	N/A	N/A	N/A	N/A	≤50%RPD (a)	0.01	0.01
EPA 9060	<10x MDL S:N>10:1	N/A	<5% PD from certified values	N/A	≤50%RPD (a)	0.01	0.01
(a) for values >10x MDL							

METHOD: Grain Size: Soil samples were visually inspected and processed for combined sieve/hydrometer analysis. Samples were aliquoted and wet sieved to separate the coarse and fine-grained fractions. The resulting fractions (gravel and sand-sized particles) were dry sieved. Hydrometer analysis was performed on the appropriate samples. A separate water content aliquot was secured to determine dry weights used in the calculations.

Total Organic Carbon: A subsample was collected and dried at 70°C overnight. After drying, samples were ground to a fine powder using a mortar and pestle. TOC fractions were acidified with 5% HCl acid, rinsed with RO/DI water, dried at 70°C, and analyzed.

HOLDING TIMES: Grain size samples stored at 4°C have holding times of six months. TOC samples stored at 4°C have holding times of 28 days.

<u>Batch</u>	<u>Prep. Date</u>	<u>Analysis Date</u>
Grain size	12/04/2002	12/10/2002
<u>Batch</u>	<u>Prep. Date</u>	<u>Analysis Date</u>
TOC	11/27/2002	12/12/2002

GRAIN SIZE & TOC QA/QC SUMMARY

DETECTION LIMITS:	There are no applicable Project Action Goals for grain size or TOC. Achieved detection limit for TOC is based on a 7 replicate MDL study.
BLANKS:	A blank (CB) was prepared with the analytical batch. The blank was analyzed to ensure the sample preparation and analysis method was free of contamination. Total Organic Carbon was undetected in the procedural blank at the detection limit of 0.01%.
REPLICATES:	A sample duplicate was prepared with the analytical batch. The RPD between replicate analyses for grain size and TOC was calculated to measure data quality in terms of precision. <u>Grain Size</u> RPD's were within the control limits for all grain size fractions, except for the Gravel (>No. 4 sieve) and Coarse Sand (No. 10 Sieve) fractions. The sample selected for duplicate analysis had a single large rock retained on the 3/8" sieve. The result is that one sample had a large weight on this sieve and the duplicate sample did not, resulting in a large RPD value. This also skews the results of the entire sample, resulting in very large RPD values. In fact this is the case with the No. 10 sieve. This is not a procedural error, but merely a function of the physical composition of the sample. RPD's ranged from 13.68-157.17% RPD. Corrective Action -- None <u>Total Organic Carbon</u> RPD was 10.34%, which is within the control limit for TOC.
SRM:	A standard reference material (SRM, NIST 1944) was prepared with the analytical batch. The relative percent difference (RPD) between the measured value and the certified range was calculated to measure data quality in terms of accuracy. SRM PD was within the control limits ($\leq 5\%$ from certified range). The PD was 3.125%.

Soil and QC Results

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC_DATE	EXTR_DATE
LPX-SS-4112-0005-01	GS	Gravel	LPX-SS-4112-0005-01		15.37		Percent			AMS	12848	26-Nov-02	4-Dec-02
LPX-SS-4112-0005-01	GS	Coarse Sand	LPX-SS-4112-0005-01		7.72		Percent			AMS	12848	26-Nov-02	4-Dec-02
LPX-SS-4112-0005-01	GS	Medium Sand	LPX-SS-4112-0005-01		20.17		Percent			AMS	12848	26-Nov-02	4-Dec-02
LPX-SS-4112-0005-01	GS	Fine Sand	LPX-SS-4112-0005-01		24.16		Percent			AMS	12848	26-Nov-02	4-Dec-02
LPX-SS-4112-0005-01	GS	Silt	LPX-SS-4112-0005-01		27.58		Percent			AMS	12848	26-Nov-02	4-Dec-02
LPX-SS-4112-0005-01	GS	Clay	LPX-SS-4112-0005-01		5.00		Percent			AMS	12848	26-Nov-02	4-Dec-02
LPX-SS-4112-0005-01	TOC	Total Organic Carbon	LPX-SS-4112-0005-01		0.88		Percent			AMS	12848	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	GS	Gravel	CMS-SS-4105-0010-01		12.65		Percent			AMS	12849	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	GS	Coarse Sand	CMS-SS-4105-0010-01		5.57		Percent			AMS	12849	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	GS	Medium Sand	CMS-SS-4105-0010-01		14.50		Percent			AMS	12849	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	GS	Fine Sand	CMS-SS-4105-0010-01		23.43		Percent			AMS	12849	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	GS	Silt	CMS-SS-4105-0010-01		34.85		Percent			AMS	12849	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	GS	Clay	CMS-SS-4105-0010-01		9.00		Percent			AMS	12849	26-Nov-02	4-Dec-02
CMS-SS-4105-0010-01	TOC	Total Organic Carbon	CMS-SS-4105-0010-01		12.20		Percent			AMS	12849	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	GS	Gravel	LPX-DU-112202B-01		16.84		Percent			AMS	12850	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	GS	Coarse Sand	LPX-DU-112202B-01		7.64		Percent			AMS	12850	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	GS	Medium Sand	LPX-DU-112202B-01		21.70		Percent			AMS	12850	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	GS	Fine Sand	LPX-DU-112202B-01		25.02		Percent			AMS	12850	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	GS	Silt	LPX-DU-112202B-01		24.80		Percent			AMS	12850	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	GS	Clay	LPX-DU-112202B-01		4.00		Percent			AMS	12850	26-Nov-02	4-Dec-02
LPX-DU-112202B-01	TOC	Total Organic Carbon	LPX-DU-112202B-01		1.99		Percent			AMS	12850	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	GS	Gravel	CMS-SS-4110-0010-01		0.59		Percent			AMS	12851	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	GS	Coarse Sand	CMS-SS-4110-0010-01		2.38		Percent			AMS	12851	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	GS	Medium Sand	CMS-SS-4110-0010-01		15.16		Percent			AMS	12851	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	GS	Fine Sand	CMS-SS-4110-0010-01		25.74		Percent			AMS	12851	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	GS	Silt	CMS-SS-4110-0010-01		45.88		Percent			AMS	12851	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	GS	Clay	CMS-SS-4110-0010-01		10.25		Percent			AMS	12851	26-Nov-02	4-Dec-02
CMS-SS-4110-0010-01	TOC	Total Organic Carbon	CMS-SS-4110-0010-01		10.47		Percent			AMS	12851	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	GS	Gravel	LPX-SS-4113-0005-01		26.15		Percent			AMS	12852	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	GS	Coarse Sand	LPX-SS-4113-0005-01		10.10		Percent			AMS	12852	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	GS	Medium Sand	LPX-SS-4113-0005-01		19.11		Percent			AMS	12852	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	GS	Fine Sand	LPX-SS-4113-0005-01		14.06		Percent			AMS	12852	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	GS	Silt	LPX-SS-4113-0005-01		26.08		Percent			AMS	12852	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	GS	Clay	LPX-SS-4113-0005-01		4.50		Percent			AMS	12852	26-Nov-02	4-Dec-02
LPX-SS-4113-0005-01	TOC	Total Organic Carbon	LPX-SS-4113-0005-01		2.30		Percent			AMS	12852	26-Nov-02	4-Dec-02

NSAMPLE	ANAL_DATE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
LPX-SS-4112-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	15.37		
LPX-SS-4112-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	7.72		
LPX-SS-4112-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	20.17		
LPX-SS-4112-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	24.16		
LPX-SS-4112-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	27.58		
LPX-SS-4112-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	5.00		
LPX-SS-4112-0005-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	N	0.88 J		
CMS-SS-4105-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	12.65		
CMS-SS-4105-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	5.57		
CMS-SS-4105-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	14.50		
CMS-SS-4105-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	23.43		
CMS-SS-4105-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	34.85		
CMS-SS-4105-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	9.00		
CMS-SS-4105-0010-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	N	12.20		
LPX-DU-112202B-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	16.84		
LPX-DU-112202B-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	7.64		
LPX-DU-112202B-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	21.70		
LPX-DU-112202B-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	25.02		
LPX-DU-112202B-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	24.80		
LPX-DU-112202B-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	4.00		
LPX-DU-112202B-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	N	1.99 J		
CMS-SS-4110-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	0.59		
CMS-SS-4110-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	2.38		
CMS-SS-4110-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	15.16		
CMS-SS-4110-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	25.74		
CMS-SS-4110-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	45.88		
CMS-SS-4110-0010-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	10.25		
CMS-SS-4110-0010-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	N	10.47		
LPX-SS-4113-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	26.15		
LPX-SS-4113-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	10.10		
LPX-SS-4113-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	19.11		
LPX-SS-4113-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	14.06		
LPX-SS-4113-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	26.08		
LPX-SS-4113-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	4.50		
LPX-SS-4113-0005-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	N	2.30		

NSAMPLE	CLASS	PARAMETER	EPASAMNO	CASNO	LAB_RESULT	QUAL	UNITS	CASE	SDG	LABORATORY	LAB_ID	REC DATE	EXTR DATE
LPX-SS-4114-0005-01	GS	Gravel	LPX-SS-4114-0005-01		21.68		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Coarse Sand	LPX-SS-4114-0005-01		2.50		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Medium Sand	LPX-SS-4114-0005-01		19.70		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Fine Sand	LPX-SS-4114-0005-01		25.06		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Silt	LPX-SS-4114-0005-01		25.07		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Clay	LPX-SS-4114-0005-01		6.00		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	TOC	Total Organic Carbon	LPX-SS-4114-0005-01		4.36		Percent			AMS	12853	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Gravel	LPX-SS-4114-0005-01		2.60		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Coarse Sand	LPX-SS-4114-0005-01		4.23		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Medium Sand	LPX-SS-4114-0005-01		23.45		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Fine Sand	LPX-SS-4114-0005-01		28.74		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Silt	LPX-SS-4114-0005-01		33.98		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	GS	Clay	LPX-SS-4114-0005-01		7.00		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
LPX-SS-4114-0005-01	TOC	Total Organic Carbon	LPX-SS-4114-0005-01		4.84		Percent			AMS	12853-2	26-Nov-02	4-Dec-02
CC03	TOC	Total Organic Carbon	CC03		3.13		PCT_DIFF			AMS	CC03		
CB03	TOC	Total Organic Carbon	CB03		0.01	U	Percent			AMS	CB03		

NSAMPLE	ANAL_DATE	METHOD	MDL	IDL	CRDL_CRQL	DIL_FACTOR	PCT_MOIST	COMMENTS	DVTIER	LAB_QC_TYPE	FINAL_RESULT	FINAL_QUAL	VALID_COMMENT
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	21.68	J	
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	2.50	J	
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	19.70		
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	25.06		
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	25.07		
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	N	6.00		
LPX-SS-4114-0005-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	N	4.36		
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	DUP			
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	DUP			
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	DUP			
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	DUP			
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	DUP			
LPX-SS-4114-0005-01	10-Dec-02	ASTM D422	0.01	0.01		1			2	DUP			
LPX-SS-4114-0005-01	12-Dec-02	EPA 9060	0.01	0.01		1			2	DUP			
CC03	12-Dec-02	EPA 9060	0.01	0.01		1			2	SRM			
CB03	12-Dec-02	EPA 9060	0.01	0.01		1			2	MB			

Section 8

Third Party Validation Reports

Steve Stojola
US EPA Approval Signature

April 21, 2003
Date

February 14, 2003
Revised: April 16, 2003

Ms. Christine Clark
Regional Sample Control Custodian
Office of Environmental Measurement and Evaluation
U.S. EPA Region I
11 Technology Drive
North Chelmsford, MA 01863

Re: TO No. 10, Task No. 2, TDF No. 0811
Case No. Centredale Ground Water B1OF1, SDG No. 49715-01 D/F
Battelle Laboratories - Columbus, OH
Centredale Manor, North Providence, RI

Dioxin/Furan: 2/Ground Water/CMS-GW-MW05S-03, CMS-GW-MW05S-03DU

(Field Duplicate Pair: CMS-GW-MW05S-03/CMS-GW-MW05S-03DU)

Dear Ms. Clark:

A Tier III data validation was performed on the Dioxin/Furan analytical data for two ground water samples collected by MACTEC Engineering and Consulting, Inc. for the U.S. EPA at the Centredale Manor Site in North Providence, RI. The samples were analyzed according to EPA Method 1613B, September 15, 1997. The samples were validated using first the criteria in the Centredale Manor Tasks 19-22 QAPP (5/23/01) which included the QAPP Addendum (dated September 27, 2002) and the QAPP Errata Sheet (Dated November 6, 2002) prepared by Battelle Duxbury Operations which include the criteria in EPA Method 1613B, September 15, 1997, defaulting next to Region I, EPA-NE Data Validation Functional Guidelines for Evaluating Environmental Analyses, December 1996 criteria, and to EPA Region I's Environmental Services Assistance Team Dioxin Data Validation SOP ESAT-01-0007 (01/08/03). The data were evaluated based on the following parameters:

- Overall Evaluation of Data and Potential Usability Issues
- Data Completeness (CSF Audit - Tier I)
- * • Preservation and Technical Holding Times
- NR • PE Samples/Accuracy Check
- * • Window Defining Mix
- * • Initial and Continuing Calibrations
- * • Chromatographic Resolution
- * • Instrument Sensitivity Check
- Blanks
- * • Matrix Spike/Matrix Spike Duplicate
- * • Laboratory Control Sample/Laboratory Control Sample Duplicate
- * • Laboratory and Field Duplicates

- * • Internal/Clean-up Standards
- * • Sample Analysis and Identification
- Sample Quantitation
- * • Estimated Detection Limits (EDL) and Estimated Maximum Possible Concentration (EMPC)
- 2378-TCDD Toxicity Equivalents (TE) and Isomer Specificity
- * • Required Sample Retuns and Second Column Confirmation
- System Performance

* - All criteria were met for this parameter.

NR - Not Required by the QAPP.

The following information was used to generate the Data Validation Memorandum attachments:

Table I: Recommendation Summary Table - summarizes validation recommendations

Table II: Overall Evaluation of Data - summarizes site objectives and potential usability issues

Data Summary Tables - summarize accepted, qualified, and rejected data

Overall Evaluation of Data and Potential Usability Issues

The following is a summary of the site investigation/assessment objectives as found in Centredale Manor Tasks 19-22 QAPP (5/23/01):

- To generate data of quality sufficient to be used for RI/FS.

The method blanks exhibited low level contamination. This contamination problem does not have an impact on the usability of the dioxin/furan data. Contaminants were found in both the blanks and the field samples. When the analyte concentrations in the field samples were less than the corresponding blank action level, the field sample results reported by the laboratory are qualified as non-detected (U) on the Data Summary Table. See Table I for a summary of the qualifiers applied due to blank contamination.

Data validation indicated minor data quality problems which do not significantly impact the usability of the dioxin/furan data.

Data Completeness (CSE Audit - Tier I)

The following data or information in the data package had discrepancies and/or was missing:

The Chain of Custody (COC) submitted by Battelle were incomplete. The laboratory was asked to submit the following:

1. The signed COC from the samplers showing the original date when the samples were first received.
2. The original sample log in forms with the dates the samples were first received.

3. All sample transfer and COCs records that show Chain of Custody through the laboratory to the final sample analysis.
4. The laboratory was asked to submit the extraction logs.
5. The laboratory was asked to forward the QAPP Addendum (dated September 27, 2002) and the QAPP Errata Sheet (Dated November 6, 2002).

Items 1 through 5 were requested via the TOPO on January 23, 2003. The responses to items 2 through 5 were received via the TOPO on February 5, 2003 and the response to item 1 was received via the TOPO on February 10, 2003. All items were adequately addressed.

Blanks

All of the blanks associated with this SDG were evaluated for possible sources of contamination. The following table summarizes the highest concentration of contamination that was detected in the blanks. The table lists the action levels and the samples affected:

- Method Blanks - The method blank consisted of a contaminant free water sample which was carried through the preparation and analytical procedures.

Congener	Type of Blank	Blank Concentration (pg/L)	Action Level (pg/L)	Affected Samples
12378-PeCDD	Method Blank (12/16/02)	1.18	5.90	CMS-GW-MW05S-03, CMS-GW-MW05S-03DU
1234678-HpCDD	Method Blank (12/16/02)	3.23	16.2	CMS-GW-MW05S-03DU
OCDD	Method Blank (12/16/02)	16.4	164	CMS-GW-MW05S-03, CMS-GW-MW05S-03DU
123478-HxCDF	Method Blank (12/16/02)	2.08	10.4	CMS-GW-MW05S-03DU
123789-HxCDF	Method Blank (12/16/02)	2.74	13.7	CMS-GW-MW05S-03DU
OCDF	Method Blank (12/16/02)	11.2	112	CMS-GW-MW05S-03DU
Total HpCDD	Method Blank (12/16/02)	3.86	38.6	CMS-GW-MW05S-03DU
Total HxCDF	Method Blank (12/16/02)	9.49	94.9	CMS-GW-MW05S-03, CMS-GW-MW05S-03DU

Blank actions are based on Region I, EPA-NE Data Validation Functional Guidelines for Evaluating Environmental Analyses, December 1996 and EPA Region I's Environmental Services Assistance Team Dioxin Data Validation SOP ESAT-01-0007 (01/08/03) criteria. Blank action levels are calculated as ten times the highest concentration of the contaminant determined in any blank for common contaminants (OCDD/OCDF and Total Homologues) and five times the highest concentration for all other analytes. The positive sample results that are less than the blank action level are reported as non-detects (U) at the reported concentration on

the Data Summary Table.

Sample Quantitation

Concentrations quantitated below the lowest calibration standard are flagged (J) on the Data Summary Tables. Quantitation is not accurate when the reported results are below the lowest calibration standard.

2378-TCDD Toxicity Equivalents (TE) and Isomer Specificity

All TE values reported on the Data Summary Tables have been calculated by the ESAT data validator using the validated data discussed above in this report. As a result, the TE values in the Data Summary Table differ slightly from the values reported by the laboratory. The validated data accounts for blank contamination. The TEF values used in the Data Summary Tables correspond to the TEF values in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106 (12), December 1998, Table 1, page 778.


System Performance

No trends were noted with the dioxin/furan analysis.

Very truly yours,

LOCKHEED ENVIRONMENTAL


Jarline Bartels
Principal Scientist


for Louis Macri
ESAT Program Manager

cc: Cornell Rosiu, EPA Project Manager (DV Memorandum, Data Summary Table)

Attachments: Table I: Recommendation Summary Table
Table II: Overall Evaluation of Data
Data Summary Tables
Data Validation Worksheets
Analytical Method
Communication/Phone Logs
Field Sampling Notes

Table I
 Recommendation Summary Table for Dioxins/Furans
 Centredale Manor Site
 Case No.: Centredale Ground Water BIOF1/SDG No. 49715-01 D/F

Sample Nos.	CMS-GW-MW05S-03	CMS-GW-MW05S-03DU
Compound		
2378-TCDD	A	A
12378-PeCDD	J ¹	J ¹
123478-HxCDD	A	A
123678-HxCDD	A	A
123789-HxCDD	A	A
1234678-HpCDD	A	J ¹
OCDD	J ¹	J ¹
2378-TCDF	A	A
12378-PeCDF	A	A
23478-PeCDF	A	A
123478-HxCDF	A	J ¹
123678-HxCDF	A	A
123789-HxCDF	A	J ¹
234678-HxCDF	A	A
1234678-HpCDF	A	A
1234789-HpCDF	A	A
OCDF	A	J ¹

Table I
Recommendation Summary Table for Dioxins/Furans

A	-	Accept results.
J ¹	-	Method/Instrument blank contamination; positive sample results less than the blank action level are reported as non-detects (U) at the concentration reported.

EPA-NE - Data Validation Worksheet

Overall Evaluation of Data - Data Validation Memorandum - Table II

DIOXIN/FURAN/HCBX/TCX ANALYSIS					
DQO (list all DQOs)	Sampling and/or Analytical Method Appropriate Yes or No	Measurement Error		Sampling Variability	Potential Usability Issues
		Analytical Error	Sampling Error*		
The following is a summary of the site investigation/assessment objectives as found in Centredale Manor Tasks 19-22 QAPP (5/23/01) which included the QAPP Addendum (dated September 27, 2002) and the QAPP Errata Sheet (Dated November 6, 2002). To generate data of quality sufficient to be used for RI/FS.	Yes, Sampling Method appropriate for all samples. Yes, Analytical Method appropriate for all samples.	Refer to qualification in R/S Key on Table I: J¹	Refer to qualification in R/S Key on Table I: NA	**	The method blanks exhibited low level contamination. This contamination problem does not have an impact on the usability of the dioxin/furan data. Contaminants were found in both the blanks and the field samples. When the analyte concentrations in the field samples were less than the corresponding blank action level, the field sample results reported by the laboratory are qualified as non-detected (U) on the Data Summary Table. See Table I for a summary of the qualifiers applied due to blank contamination. Data validation indicated minor data quality problems which do not significantly impact the usability of the dioxin/furan data.

* The evaluation of "sampling error" cannot be completely assessed in the data validation.

** Sampling variability is not assessed in data validation.

Validator: 

Date: 4/16/03

El Centredale Manor - N. Providence, RI
 SE NO. Centredale Ground Water B10F1
 LABORATORY: Battelle

SDG No. 49715-01 D/F

SAMPLE NUMBER:	Toxicity	CMS-GW-MW05S-03	CMS-GW-MW05S-03DU
STATION LOCATION:	Equivalency	CENTREDALE MANOR	CENTREDALE MANOR
MATRIX:	Factors (1)	GROUND WATER	GROUND WATER
TCDD/TCDF CONC.:		pg/L	pg/L
		DL/EMPC*	DL/EMPC*
7,8-TCDD	1.0	1032.69	1455.06
3,7,8-PeCDD	1.0	U	U
3,4,7,8-HxCDD	0.1	U	U
3,6,7,8-HxCDD	0.1	U	U
3,7,8,9-HxCDD	0.1	U	U
3,4,6,7,8-HpCDD	0.01	U	U
TCDD	0.0001	U	U
7,8-TCDF	0.1	U	0.02 J
3,7,8-PeCDF	0.05	U	U
3,4,7,8-PeCDF	0.5	U	U
3,4,7,8-HxCDF	0.1	U	U
3,6,7,8-HxCDF	0.1	U	U
3,7,8,9-HxCDF	0.1	U	U
3,4,6,7,8-HpCDF	0.01	U	U
3,4,7,8,9-HpCDF	0.01	U	U
TCDF	0.0001	U	U
AL TCDD		1071.22 J	1513.37 J
AL PeCDD		118.37 J	103.43 J
AL HxCDD		UJ	UJ
AL HpCDD		UJ	UJ
AL TCDF		113.44 J	108.41 J
AL PeCDF		275.25 J	248.01 J
AL HxCDF		UJ	UJ
AL HpCDF		UJ	UJ
TOXIC EQUIVALENT(1):		1000	1400 J
DILUTION FACTOR:		1.0	1.0
DATE SAMPLED:		11/21/02	11/21/02
DATE OF RECEIPT:		11/22/02	11/22/02
SAMPLE EXTRACTION DATE:		12/02/02	12/02/02
ANALYSIS DATE:		12/16/02	12/16/02
LAB SAMPLE ID:		49715-01-02	49715-01-03

The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "J". The DL values are unmarked. EMPC values are not qualified with a "J", since they are already estimated.

The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume (106), Number 12, December 1998, Table 1, page 778. Concentrations reported by the laboratory below the lowest standard are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

Steve Stodola
US EPA Approval Signature

4/4/03
Date

February 28, 2003
Revised: April 3, 2003

Ms. Christine Clark
Regional Sample Control Custodian
Office of Environmental Measurement and Evaluation
U.S. EPA Region I
11 Technology Drive
North Chelmsford, MA 01863

Re: TO No. 16, Task No. 2, TDF No. 0869
Case No. Centredale Soils B10F2, SDG No. 49715-02 D/F
Battelle Laboratories - Columbus, OH
Centredale Manor, North Providence, RI

Dioxin/Furan, HCX: 11/Soil/CMS-DU-112202A-01, CMS-SS-4101-1019-01, CMS-SS-4102-0008-01, CMS-SS-4102-3038-01, CMS-SS-4103-0010-01, CMS-SS-4104-0010-01, CMS-SS-4106-3036-01, CMS-SS-4107-3040-01, CMS-SS-4109-1014-01, CMS-SS-4110-3739-01, CMS-SS-4111-3046-01

(Field Duplicate Pair: CMS-DU-112202A-01/CMS-SS-4104-0010-01)

1/Soil SRM/CIL EDF 2513 (49715-02-15)

Dear Ms. Clark:

A Tier III data validation was performed on the Dioxin/Furan and HCX analytical data for 11 soil, and one SRM sample collected by MACTEC Engineering and Consulting, Inc. for the U.S. EPA at the Centredale Manor Site in North Providence, RI. The samples were analyzed according to EPA Method 1613B, September 15, 1997. The samples were validated using first the criteria in the Centredale Manor Tasks 19-22 QAPP (5/23/01) which included the QAPP Addendum (dated September 27, 2002) and the QAPP Errata Sheet (Dated November 6, 2002) prepared by Battelle Duxbury Operations which include the criteria in EPA Method 1613B, September 15, 1997, defaulting next to Region I EPA-NE Data Validation Functional Guidelines for Evaluating Environmental Analyses, December 1996 criteria, and to EPA Region I's Environmental Services Assistance Team Dioxin Data Validation SOP ESAT-01-0007 (01/08/03). The data were evaluated based on the following parameters:

- Overall Evaluation of Data and Potential Usability Issues
- Data Completeness (CSF Audit - Tier I)
- * • Preservation and Technical Holding Times
- * • PE Samples/Accuracy Check

- * • Window Defining Mix
- Initial and Continuing Calibrations
- Chromatographic Resolution
- * • Instrument Sensitivity Check
- Blanks
- * • Matrix Spike/Matrix Spike Duplicate
- * • Laboratory Control Sample/Laboratory Control Sample Duplicate
- Laboratory and Field Duplicates
- Internal/Clean-up Standards
- * • Sample Analysis and Identification
- Sample Quantitation
- * • Estimated Detection Limits (EDL) and Estimated Maximum Possible Concentration (EMPC)
- 2378-TCDD Toxicity Equivalents (TE) and Isomer Specificity
- * • Required Sample Reruns and Second Column Confirmation
- System Performance

* - All criteria were met for this parameter.

The following information was used to generate the Data Validation Memorandum attachments:

Table I: Recommendation Summary Table - summarizes validation recommendations

Table II: Overall Evaluation of Data - summarizes site objectives and potential usability issues

Data Summary Tables - summarize accepted, qualified, and rejected data

Overall Evaluation of Data and Potential Usability Issues

The following is a summary of the site investigation/assessment objectives as found in Centredale Manor Tasks 19-22 QAPP (5/23/01):

- To generate data of quality sufficient to be used for a RI/FS.

One Cambridge Isotope Laboratories (CIL) Standard Reference Material (SRM) sample was evaluated for this SDG (CIL EDF 2513 for Dioxin/Furan congeners in soil). All congeners were within the Centredale Manor Tasks 19-22 QAPP (5/23/01) specified criterion of 30 %D from the consensus value.

The method blanks exhibited low level contamination. This contamination problem does not have an impact on the usability of the dioxin/furan data. Contaminants were found in both the blanks and the field samples. When the analyte concentrations in the field samples were less than the corresponding blank action level, the field sample results reported by the laboratory are qualified as non-detected (U) on the Data Summary Table. See Table I for a summary of the qualifiers applied due to blank contamination.

Data validation indicated minor data quality problems which do not significantly impact the usability of the dioxin/furan data.

Data Completeness (CSF Audit - Tier I)

The following data or information in the data package had discrepancies and/or was missing:

The Chain of Custody (COC) submitted by Battelle was incomplete. The laboratory was asked to submit the following:

1. The date sampled was not legible on the Chain of Custody (COC) form submitted by Battelle. The laboratory was asked to submit a COC with legible sampling dates.

Item 1 was requested via the TOPO on February 7, 2003. The response to item 1 was received via the TOPO on February 10, 2003. Item 1 was adequately addressed.

Initial and Continuing Calibrations

The following table summarizes the Initial Calibration (IC) which did not meet the criterion specified in Centredale Manor Tasks 19-22 QAPP (5/23/01) of RSD $\leq 25\%$ and the resulting sample qualifications:

IC Date	Compound	% RSD	Action		Affected Samples
			Positive Detects	NDs	
07/19/01	HCX	45	J	UJ	CMS-SS-4103-0010-01, CMS-SS-4104-0010-01, CMS-SS-4106-3036-01, CMS-DU-112202A-01

The data associated with the noncompliant initial calibration are qualified due to the variability. The quantitation of the analyte in the samples could be biased.

Chromatographic Resolution

The hexachloroxanthene (HCX) peaks exhibit poor chromatography, i.e., broad shape. The broad peak shape created irregularities in the response factors used to calculate the concentrations of HCX. Therefore, professional judgement was used to estimate (J,UJ) all HCX results due to the poor chromatography.

Blanks

All of the blanks associated with this SDG were evaluated for possible sources of contamination. The following table summarizes the highest concentration of contamination that was detected in the blanks. The table lists the action levels and the samples affected:

- Method Blanks - The method blank consisted of a contaminant free sand sample which was carried through the preparation and analytical procedures.

Congener	Type of Blank	Blank Concentration (pg/g)	Action Level (pg/g)	Affected Samples
12378-PeCDD	Method Blank (12/16/02)	0.20	1.0	CMS-SS-4106-3036-01, CMS-SS-4107-3040-01, CMS-SS-4109-1014-01, CMS-SS-4110-3739-01
123478-HxCDD	Method Blank (12/16/02)	0.19	0.95	CMS-SS-4106-3036-01, CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
123678-HxCDD	Method Blank (12/16/02)	0.16	0.80	CMS-SS-4110-3739-01
123789-HxCDD	Method Blank (12/16/02)	0.11	0.55	CMS-SS-4110-3739-01
2378-TCDF	Method Blank (12/16/02)	0.10	0.50	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
12378-PeCDF	Method Blank (12/16/02)	0.26	1.3	CMS-SS-4106-3036-01, CMS-SS-4107-3040-01, CMS-SS-4109-1014-01, CMS-SS-4110-3739-01, CMS-SS-4111-3046-01
23478-PeCDF	Method Blank (12/16/02)	0.23	1.2	CMS-SS-4107-3040-01, CMS-SS-4109-1014-01, CMS-SS-4110-3739-01
123478-HxCDF	Method Blank (12/16/02)	0.26	1.3	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
123678-HxCDF	Method Blank (12/16/02)	0.20	1.0	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
1234678-HpCDF	Method Blank (12/16/02)	0.19	0.95	CMS-SS-4110-3739-01
1234789-HpCDF	Method Blank (12/16/02)	0.10	0.50	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01, CMS-SS-4111-3046-01
OCDF	Method Blank (12/16/02)	0.33	3.3	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
Total PeCDD	Method Blank (12/16/02)	0.20	2.0	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
Total HxCDD	Method Blank (12/16/02)	0.64	6.4	CMS-SS-4110-3739-01
Total TCDF	Method Blank (12/16/02)	0.10	1.0	CMS-SS-4110-3739-01
Total PeCDF	Method Blank (12/16/02)	0.58	5.8	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
Total HxCDF	Method Blank (12/16/02)	0.46	4.6	CMS-SS-4107-3040-01, CMS-SS-4110-3739-01
Total HpCDF	Method Blank (12/16/02)	0.28	2.8	CMS-SS-4110-3739-01

Blank actions are based on Region I, EPA-NE Data Validation Functional Guidelines for Evaluating Environmental Analyses, December 1996 and EPA Region I's Environmental Services Assistance Team Dioxin Data Validation SOP ESAT-01-0007 (01/08/03) criteria. Blank action levels are calculated as ten times the highest concentration of the contaminant determined in any blank for common contaminants (OCDD/OCDF and Total Homologues) and five times the highest concentration for all other analytes. The positive sample results that are less than the blank action level are reported as non-detects (U) at the reported concentration on

the Data Summary Table.

Laboratory and Field Duplicates

One field duplicate pair was evaluated for this SDG: CMS-DU-112202A-01/CMS-SS-4104-0010-01.

The table below summarizes the soil duplicate results that did not meet the field duplicate criterion of Relative Percent Difference (RPD) < 50% for soils/sediments as specified in Centredale Manor Tasks 19-22 QAPP (5/23/01).

Congener	CMS-DU-112202A-01	CMS-SS-4104-0010-01	RPD	Action		Affected Samples
	% Solids (21.2%)	% Solids (17.0%)				
	Sample Conc. (ng/Kg)	Duplicate Conc. (ng/Kg)		Positive Detects	NDs	
2378-TCDD	5720	3020	62	J	UJ	CMS-DU-112202A-01, CMS-SS-4104-0010-01
1234789-HpCDF	9.11	23.0	86	J	UJ	CMS-DU-112202A-01, CMS-SS-4104-0010-01

2378-TCDD and 1234789-HpCDF were estimated (J, UJ) in samples CMS-DU-112202A-01 and CMS-SS-4104-0010-01 due to field duplicate precision outside criterion.

Internal/Clean-up Standards

• Internal Standards

The following table summarizes the internal standard recoveries that did not meet acceptance criterion of 25-150% specified in the Centredale Manor Tasks 19-22 QAPP (5/23/01).

Standard	% Recovery	Action		Affected Sample
		Positive Detects	NDs	
¹³ C ₁₂ -2378-TCDF	24	J	UJ	CMS-SS-4101-1019-01
¹³ C ₁₂ -23478-PeCDF	22	J	UJ	CMS-SS-4101-1019-01

The corresponding non-labeled congener results are estimated as shown in the table due to internal standard percent recoveries outside acceptance criterion.

Sample Quantitation

Concentrations quantitated below the lowest calibration standard are flagged (J) on the Data Summary Tables. Quantitation is not accurate when the reported results are below the lowest

calibration standard.

Samples CMS-SS-4104-0010-01 and CMS-DU-112202A-01 had less than 30% solids but greater than 10%, all positive and non-detected values are estimated (J, UJ).

The laboratory flagged the 2378-TCDF concentrations in samples CMS-SS-4101-1019-01 and CMS-SS-4104-0010-01 with an "E" to indicate the presence of interference. The positive 2378-TCDF concentrations were estimated (J) due to interferences.

2378-TCDD Toxicity Equivalents (TE) and Isomer Specificity

All TE values reported on the Data Summary Tables have been calculated by the ESAT data validator using the validated data discussed above in this report. As a result, the TE values in the Data Summary Table differ slightly from the values reported by the laboratory. The validated data accounts for blank contamination. The TEF values used in the Data Summary Tables correspond to the TEF values in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106 (12), December 1998, Table 1, page 778.

System Performance

No trends were noted with the dioxin/furan analysis.

Very truly yours,

LOCKHEED ENVIRONMENTAL


Jahine Bartels
Principal Scientist


Louis Macri
ESAT Program Manager

cc: Cornell Rosiu, EPA Project Manager (DV Memorandum, Data Summary Table)

Attachments: Table I: Recommendation Summary Table
Table II: Overall Evaluation of Data
Data Summary Tables
Data Validation Worksheets
Analytical Method
PE Results
Communication/Phone Logs
Field Sampling Notes

Table I
 Recommendation Summary Table for Dioxins/Furans/HCX
 Centredale Manor Site
 Case No.: Centredale Soils B10F2/SDG No. 49715-02 D/F

Sample Nos.	CMS-DU- 112202A-01	CMS-SS-4101- 1019-01	CMS-SS-4102- 0008-01	CMS-SS-4102- 3038-01	CMS-SS-4103- 0010-01	CMS-SS-4104- 0010-01	CMS-SS-4106- 3036-01
Compound							
2378-TCDD	J ^{1,6}	A	A	A	A	J ^{1,6}	A
12378-PeCDD	J ⁶	A	A	A	A	J ⁶	J ⁴
123478-HxCDD	J ⁶	A	A	A	A	J ⁶	J ⁴
123678-HxCDD	J ⁶	A	A	A	A	J ⁶	A
123789-HxCDD	J ⁶	A	A	A	A	J ⁶	A
1234678-HpCDD	J ⁶	A	A	A	A	J ⁶	A
OCDD	J ⁶	A	A	A	A	J ⁶	A
2378-TCDF	J ⁶	J ^{1,7}	A	A	A	J ^{1,7}	A
12378-PeCDF	J ⁶	A	A	A	A	J ⁶	J ⁴
23478-PeCDF	J ⁶	J ⁵	A	A	A	J ⁶	A
123478-HxCDF	J ⁶	A	A	A	A	J ⁶	A
123678-HxCDF	J ⁶	A	A	A	A	J ⁶	A
123789-HxCDF	J ⁶	A	A	A	A	J ⁶	A
234678-HxCDF	J ⁶	A	A	A	A	J ⁶	A
1234678-HpCDF	J ⁶	A	A	A	A	J ⁶	A
1234789-HpCDF	J ^{1,6}	A	A	A	A	J ^{1,6}	A
OCDF	J ⁶	A	A	A	A	J ⁶	A
HCX	J ^{1,2,6}	J ²	J ²	J ²	J ^{1,2}	J ^{1,2,6}	J ^{1,2}

Table I
 Recommendation Summary Table for Dioxins/Furans/HCX
 Centredale Manor Site
 Case No.: Centredale Soils B1OF2/SDG No. 49715-02 D/F

Sample Nos.	CMS-SS-4107- 3040-01	CMS-SS-4109- 1014-01	CMS-SS-4110- 3739-01	CMS-SS-4111- 3046-01
Compound				
2378-TCDD	A	A	A	A
12378-PeCDD	J ⁴	J ⁴	J ⁴	A
123478-HxCDD	J ⁴	A	J ⁴	A
123678-HxCDD	A	A	J ⁴	A
123789-HxCDD	A	A	J ⁴	A
1234678-HpCDD	A	A	A	A
OCDD	A	A	A	A
2378-TCDF	J ⁴	A	J ⁴	A
12378-PeCDF	J ⁴	J ⁴	J ⁴	J ⁴
23478-PeCDF	J ⁴	J ⁴	J ⁴	A
123478-HxCDF	J ⁴	A	J ⁴	A
123678-HxCDF	J ⁴	A	J ⁴	A
123789-HxCDF	A	A	A	A
234678-HxCDF	A	A	A	A
1234678-HpCDF	A	A	J ⁴	A
1234789-HpCDF	J ⁴	A	J ⁴	J ⁴
OCDF	J ⁴	A	J ⁴	A
HCH	J ²	J ²	J ²	J ²

Table I
Recommendation Summary Table for Dioxins/Furans/HCX

A	-	Accept results.
J ¹	-	Initial calibration %RSD outside criterion; J detects, UJ non-detects.
J ²	-	Poor chromatography for HCX in all samples; J detects, UJ non-detects.
J ³	-	Field Duplicate RPDs outside criterion; J detects, UJ non-detects.
J ⁴	-	Method blank contamination; positive sample results less than the blank action level are reported as non-detects (U) at the concentration reported.
J ⁵	-	Internal Standard % recovery outside criterion; J detects, UJ non-detects.
J ⁶	-	Less than 30% solids; J detects, UJ non-detects.
J ⁷	-	Chromatography interferences; J detects.


EPA-NE - Data Validation Worksheet

Overall Evaluation of Data - Data Validation Memorandum - Table II

DIOXIN/FURAN/HCX ANALYSIS					
DQO (list all DQOs)	Sampling and/or Analytical Method Appropriate Yes or No	Measurement Error		Sampling Variability	Potential Usability Issues
		Analytical Error	Sampling Error*		
The following is a summary of the site investigation/assessment objectives as found in Centredale Manor Tasks 19-22 QAPP (5/23/01): To generate data of quality sufficient to be used for a RI/FS.	Yes, Sampling Method appropriate for all samples. Yes, Analytical Method appropriate for all samples.	Refer to qualification in R/S Key on Table I: J12437	Refer to qualification in R/S Key on Table I: J12	**	One Cambridge Isotope Laboratories (CIL) Standard Reference Material (SRM) sample was evaluated for this SDG (CIL EDF 2513 for Dioxin/Furan congeners in soil). All congeners were within the Centredale Manor Tasks 19-22 QAPP (5/23/01) specified criterion of 30 %D from the consensus value. The method blanks exhibited low level contamination. This contamination problem does not have an impact on the usability of the dioxin/furan data. Contaminants were found in both the blanks and the field samples. When the analyte concentrations in the field samples were less than the corresponding blank action level, the field sample results reported by the laboratory are qualified as non-detected (U) on the Data Summary Table. See Table I for a summary of the qualifiers applied due to blank contamination. Data validation indicated minor data quality problems which do not significantly impact the usability of the dioxin/furan data.

* The evaluation of "sampling error" cannot be completely assessed in the data validation.

** Sampling variability is not assessed in data validation.

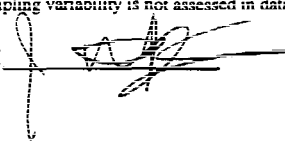Validator: 

Date: 9/8/03

Data Summary Table
Dioxin/Furan/HxCX Analysis - Soil Samples
(Dry Weight)

SITE: Centredale Manor - N. Providence, RI
CASE NO. Centredale Soils B10F2 SDG No. 49715-02 D/F
LABORATORY: Battelle

SAMPLE NUMBER: STATION LOCATION: MATRIX:	Toxicity Equivalency Factors (1)	CMS-DU-112202A-01 CENTREDALE MANOR SOIL	CMS-SS-4101-1019-01 CENTREDALE MANOR SOIL	CMS-SS-4102-0008-01 CENTREDALE MANOR SOIL	CMS-SS-4102-3038-01 CENTREDALE MANOR SOIL	CMS-SS-4103-0010-01 CENTREDALE MANOR SOIL
TCDD/TCDF CONC.:		pg/g	pg/g	pg/g	pg/g	pg/g
DL/EMPC*		DL/EMPC*	DL/EMPC*	DL/EMPC*	DL/EMPC*	DL/EMPC*
2,3,7,8-TCDD	1.0	3020.73 J	3.14	65.24	58.57	151.26
1,2,3,7,8-PeCDD	1.0	8.03 J	1.79	2.12	1.70	1.80
1,2,3,4,7,8-HxCDD	0.1	7.90 J	1.61	3.24	1.82	2.17
1,2,3,6,7,8-HxCDD	0.1	27.34 J	7.41	9.48	6.25	6.73
1,2,3,7,8,9-HxCDD	0.1	28.84 J	4.65	9.26	5.28	6.07
1,2,3,4,6,7,8-HpCDD	0.01	568.68 J	71.93	278.82	134.19	148.56
OCDD	0.0001	3797.04 J	550.04	2499.39	1414.72	1768.86
2,3,7,8-TCDF	0.1	67.85 J#	1.66 J	4.25 #	5.36 #	4.66 #
1,2,3,7,8-PeCDF	0.05	18.01 J	1.28	1.80	2.62	2.45
2,3,4,7,8-PeCDF	0.5	25.09 J	3.25 J	3.31	3.95	4.00
1,2,3,4,7,8-HxCDF	0.1	35.26 J	8.51	6.75	8.00	7.84
1,2,3,6,7,8-HxCDF	0.1	19.20 J	3.11	2.87	3.35	3.31
1,2,3,7,8,9-HxCDF	0.1	1.92 J	0.34 J	0.18 J	0.19	0.23 J
2,3,4,6,7,8-HxCDF	0.1	15.75 J	3.00	2.68	3.25	3.01
1,2,3,4,6,7,8-HpCDF	0.01	187.71 J	20.46	22.11	18.66	22.62
1,2,3,4,7,8,9-HpCDF	0.01	22.95 J	2.13 J	1.49	2.23	1.87
OCDF	0.0001	265.73 J	37.79	56.88	41.20	59.30
TOTAL TCDD		3054.54 J	5.70 J	67.28 J	59.71 J	151.26 J
TOTAL PeCDD		66.02 J	21.61 J	10.94 J	13.66 J	7.52 J
TOTAL HxCDD		217.50 J	58.55 J	77.48 J	48.78 J	51.03 J
TOTAL HpCDD		1020.09 J	128.98 J	510.07 J	239.27 J	273.30 J
TOTAL TCDF		387.41 J	8.17 J	24.53 J	28.65 J	35.53 J
TOTAL PeCDF		604.77 J	50.72 J	54.37 J	58.63 J	64.45 J
TOTAL HxCDF		894.90 J	56.14 J	42.78 J	49.16 J	47.15 J
TOTAL HpCDF		338.66 J	47.58 J	44.72 J	41.05 J	44.91 J
HxCX - Hexachloroxanthene		65134.05 J	13.95 J	258.68 J	383.71 J	7273.74 J
TOXIC EQUIVALENT(1):		3100 J	11 J	76 J	67 J	160 J
PERCENT SOLIDS:		21.2	86.1	76.0	66.2	76.4
DILUTION FACTOR:		1.0	1.0	1.0	1.0	1.0
DATE SAMPLED:		11/22/02	11/22/02	11/22/02	11/22/02	11/22/02
DATE OF RECEIPT:		11/26/02	11/26/02	11/26/02	11/26/02	11/26/02
SAMPLE EXTRACTION DATE:		12/03/02	12/03/02	12/03/02	12/03/02	12/03/02
ANALYSIS DATE:		12/17/02	12/18/02	12/18/02	12/17/02	12/18/02
LAB SAMPLE ID:		49715-02-05	49715-02-02	49715-02-04	49715-02-12	49715-02-03

* = The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a **. The DL values are unmarked. The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106, Number (12), December 1998, Table 1, page 776.

Concentrations reported by the laboratory below the DL are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

= Result reported from confirmation analysis.

SITE: Centredale Manor - N. Providence, RI
CASE NO. Centredale Soils S10F2 SDG No. 49715-02 D/F
LABORATORY: Battelle

SAMPLE NUMBER: STATION LOCATION: MATRIX:	Toxicity Equivalency Factors (1)	CMS-SS-4104-0010-01 CENTREDALE MANOR SOIL	CMS-SS-4106-3036-01 CENTREDALE MANOR SOIL	CMS-SS-4107-3040-01 CENTREDALE MANOR SOIL	CMS-SS-4109-1014-01 CENTREDALE MANOR SOIL	CMS-SS-4110-3739-01 CENTREDALE MANOR SOIL
TCDD/TCDF CONC.		pg/g	pg/g	pg/g	pg/g	pg/g
2,3,7,8-TCDD	1.0	5725.28 J	348.20	19.41	88.32	18.52 J
1,2,3,7,8-PeCDD	1.0	11.00 J	UJ	UJ	U	U
1,2,3,4,7,8-HxCDD	0.1	9.16 J	UJ	UJ	0.41	U
1,2,3,6,7,8-HxCDD	0.1	31.80 J	2.27	UJ	0.92 J	U
1,2,3,7,8,9-HxCDD	0.1	34.01 J	2.37	1.18	3.38	U
1,2,3,4,6,7,8-HpCDD	0.01	636.53 J	57.15	1.24	2.62	U
OCDD	0.0001	4338.17 J	431.35	27.97	75.13	4.55
2,3,7,8-TCDF	0.1	79.78 J	1.29 #	U	0.85	U
1,2,3,7,8-PeCDF	0.05	13.53 J	U	U	0.44	U
2,3,4,7,8-HxCDF	0.5	23.34 J	1.46	U	0.15	U
1,2,3,4,7,8-HxCDF	0.1	35.94 J	2.55	U	0.26	U
1,2,3,6,7,8-HxCDF	0.1	21.73 J	1.41	U	1.39	U
1,2,3,7,8,9-HxCDF	0.1	0.74 J	0.05 J	U	1.35	U
2,3,4,6,7,8-HpCDF	0.1	17.56 J	0.96	0.07 J	U	0.24
1,2,3,4,6,7,8-HpCDF	0.01	176.37 J	7.58	0.14 J	0.94	0.10 J
1,2,3,4,7,8,9-HpCDF	0.01	9.11 J	0.85	1.44	13.68	0.18 J
OCDF	0.0001	287.29 J	15.88	U	0.77	U
TOTAL TCDD		5758.23 J	350.89 J	20.09 J	88.88 J	18.52 J
TOTAL PeCDD		49.41 J	4.11 J	UJ	2.54 J	UJ
TOTAL HxCDD		240.66 J	16.21 J	8.07 J	19.82 J	UJ
TOTAL HpCDD		1183.85 J	97.59 J	48.28 J	132.72 J	8.43 J
TOTAL TCDF		342.35 J	11.08 J	1.06 J	8.29 J	UJ
TOTAL PeCDF		470.82 J	35.90 J	UJ	27.27 J	UJ
TOTAL HxCDF		843.57 J	35.43 J	UJ	25.45 J	UJ
TOTAL HpCDF		362.06 J	18.50 J	3.20 J	29.27 J	UJ
HCH - Hexachlorocyclohexane		68876.32 J	5243.22 J	84.42 J	104.51 J	25.73 J
TOXIC EQUIVALENT(1):		5800 J	350 J	20 J	90 J	17 J
PERCENT SOLIDS:		17.0	55.8	78.4	86.5	85.3
DILUTION FACTOR:		1.0	1.0	1.0	1.0	1.0
DATE SAMPLED:		11/22/02	11/19/02	11/21/02	11/18/02	11/19/02
DATE OF RECEIPT:		11/26/02	11/26/02	11/26/02	11/26/02	11/26/02
SAMPLE EXTRACTION DATE:		12/03/02	12/03/02	12/03/02	12/03/02	12/03/02
ANALYSIS DATE:		12/17/02	12/17/02	12/17/02	12/17/02	12/17/02
LAB SAMPLE ID:		49715-02-06	49715-02-06	49715-02-07	49715-02-10	49715-02-09

* = The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "U". The DL values are unmarked. The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106, Number (12), December 1998, Table 1, page 778.

Concentrations reported by the laboratory below the DL are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

= Result reported from confirmation analysis.

SITE: Centredale Manor - N. Providence, RI
CASE NO. Centredale Soils B1OF2 SDG No. 49715-02 D/F
LABORATORY: Battelle

SAMPLE NUMBER: STATION LOCATION: MATRIX:	Toxicity Equivalency Factors (1)	CMS-SS-4111-3046-01 CENTREDALE MANOR SOIL	
TCDD/TCDF CONC.:		pg/g	DL/EMPC*
2,3,7,8-TCDD	1.0	15.18	
1,2,3,7,8-PeCDD	1.0	1.92	
1,2,3,4,7,8-HxCDD	0.1	3.41	
1,2,3,6,7,8-HxCDD	0.1	8.63	
1,2,3,7,8,9-HxCDD	0.1	9.62	
1,2,3,4,6,7,8-HpCDD	0.01	135.84	
OCDD	0.0001	534.32	
2,3,7,8-TCDF	0.1	1.70 #	
1,2,3,7,8-PeCDF	0.05	U	0.17
2,3,4,7,8-PeCDF	0.5	1.08	
1,2,3,4,7,8-HxCDF	0.1	1.49	
1,2,3,6,7,8-HxCDF	0.1	0.87 J	
1,2,3,7,8,9-HxCDF	0.1	U	0.17
2,3,4,6,7,8-HxCDF	0.1	0.60	
1,2,3,4,6,7,8-HpCDF	0.01	6.38	
1,2,3,4,7,8,9-HpCDF	0.01	U	0.30
OCDF	0.0001	4.65	
TOTAL TCDD		15.68 J	
TOTAL PeCDD		4.30 J	
TOTAL HxCDD		60.25 J	
TOTAL HpCDD		240.11 J	
TOTAL TCDF		18.04 J	
TOTAL PeCDF		19.77 J	
TOTAL HxCDF		14.06 J	
TOTAL HpCDF		10.92 J	
HCH - Hexachloroxanthene		147.17 J	
TOXIC EQUIVALENT(1):		22 J	
PERCENT SOLIDS:		83.0	
DILUTION FACTOR:		1.0	
DATE SAMPLED:		11/21/02	
DATE OF RECEIPT:		11/26/02	
SAMPLE EXTRACTION DATE:		12/03/02	
ANALYSIS DATE:		12/17/02	
LAB SAMPLE ID:		49715-02-11	

* = The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "U". The DL values are unmarked.

The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106, Number (12), December 1998, Table 1, page 778.

Concentrations reported by the laboratory below the DL are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table I.

= Result reported from confirmation analysis.

Steve Stodola
US EPA Approval Signature

April 30, 2003

Date
April 11, 2003

Ms. Christine Clark
Regional Sample Control Custodian
Office of Environmental Measurement and Evaluation
U.S. EPA Region I
11 Technology Drive
North Chelmsford, MA 01863

Re: TO No. 16, Task No. 2, TDF No. 0885
Case No. Centredale Soils B2OF2, SDG No. 49715-13 D/F
Battelle Laboratories - Columbus, OH
Centredale Manor, North Providence, RI

Dioxin/Furan, HCH: 20/Soil/CMS-SS-4101-3042-01, CMS-SS-4102-1019-01,
CMS-SS-4105-1015-01, CMS-SS-4105-3040-01,
CMS-SS-4106-0010-01, CMS-SS-4106-1016-01,
CMS-SS-4107-1030-01, CMS-SS-4108-0010-01,
CMS-SS-4108-1030-01, CMS-SS-4108-3040-01,
CMS-SS-4109-0010-01, CMS-SS-4109-3038-01,
CMS-SS-4110-0010-01, CMS-SS-4110-1015-01,
CMS-SS-4111-0009-01, CMS-SS-4111-1028-01,
CMS-DU-111902A-01, LPX-SS-4112-0005-01,
LPX-SS-4113-0005-01, LPX-SS-4114-0005-01

(Field Duplicate Pair: CMS-DU-111902A-01/CMS-SS-4106-1016-01)

1/Soil SRM/CIL EDF 2513 (49715-13-24)

Dear Ms. Clark:

A Tier III data validation was performed on the Dioxin/Furan and HCH analytical data for 20 soil, and one SRM sample collected by MACTEC Engineering and Consulting, Inc. for the U.S. EPA at the Centredale Manor Site in North Providence, RI. The samples were analyzed according to EPA Method 1613B, September 15, 1997. The samples were validated using first the criteria in the Centredale Manor Tasks 19-22 QAPP (5/23/01) which included the QAPP Addendum (dated September 27, 2002) and the QAPP Errata Sheet (dated November 6, 2002) prepared by Battelle Duxbury Operations which include the criteria in EPA Method 1613B, September 15, 1997, defaulting next to Region I EPA-NE Data Validation Functional Guidelines for Evaluating Environmental Analyses, December 1996 criteria, and to EPA Region I's Environmental Services Assistance Team Dioxin Data Validation SOP ESAT-01-0007

Ms. Christine Clark
Page 2

April 11, 2003

(01/08/03). The data were evaluated based on the following parameters:

- Overall Evaluation of Data and Potential Usability Issues
- Data Completeness (CSF Audit - Tier I)
- " • Preservation and Technical Holding Times
- " • PE Samples/Accuracy Check
- " • Window Defining Mix
- Initial and Continuing Calibrations
- Chromatographic Resolution
- " • Instrument Sensitivity Check
- Blanks
- " • Matrix Spike/Matrix Spike Duplicate
- " • Laboratory Control Sample/Laboratory Control Sample Duplicate
- Laboratory and Field Duplicates
- Internal/Clean-up Standards
- " • Sample Analysis and Identification
- Sample Quantitation
- " • Estimated Detection Limits (EDL) and Estimated Maximum Possible Concentration (EMPC)
- 2378-TCDD Toxicity Equivalents (TE) and Isomer Specificity
- " • Required Sample Retuns and Second Column Confirmation
- " • System Performance

* - All criteria were met for this parameter.

The following information was used to generate the Data Validation Memorandum attachments:

Table I: Recommendation Summary Table - summarizes validation recommendations

Table II: Overall Evaluation of Data - summarizes site objectives and potential usability issues

Data Summary Tables - summarize accepted, qualified, and rejected data

Overall Evaluation of Data and Potential Usability Issues

The following is a summary of the site investigation/assessment objectives as found in Centredale Manor Tasks 19-22 QAPP (5/23/01):

- To generate data of quality sufficient to be used for a RI/FS.

One Cambridge Isotope Laboratories (CIL) Standard Reference Material (SRM) sample was evaluated for this SDG (CIL EDF 2513 for Dioxin/Furan congeners in soil). All congeners were within the Centredale Manor Tasks 19-22 QAPP (5/23/01) specified criterion of 30 %D from the consensus value.

The method blanks exhibited low level contamination. This contamination problem does not have an impact on the usability of the dioxin/furan data. Contaminants were found in both the blanks and the field samples. When the analyte concentrations in the field samples were less than

Ms. Christine Clark
Page 3

April 11, 2003

qualifiers applied due to blank contamination.

Data validation indicated minor data quality problems which do not significantly impact the usability of the dioxin/furan data.

Data Completeness (CSF Audit - Tier I)

The following data or information in the data package had discrepancies and/or was missing:

1. The date sampled should be 11/21/02 not 11/26/02 for sample number CMS-SS4108-3040-01. The laboratory was asked to submit a corrected Form I and quantitation reports.

Item 1 was requested via the TOPO on March 10, 2003. The response to item 1 was received via the TOPO on April 1, 2003. Item 1 was adequately addressed.

Initial and Continuing Calibrations

The following table summarizes the Initial Calibration (IC) result which did not meet the criterion specified in Centredale Manor Tasks 19-22 QAPP (5/23/01) of RSD $\leq 25\%$ and the resulting sample qualifications:

IC Date	Compound	% RSD	Action		Affected Samples
			Positive Detects	NDs	
07/19/01	HCH	45	I	UJ	CMS-SS-4105-3040-01, CMS-SS-4106-0010-01, CMS-SS-4106-1016-01, CMS-SS-4109-0010-01, CMS-SS-4110-0010-01, CMS-SS-4110-1015-01, CMS-SS-4111-0009-01, CMS-SS-4111-1028-01, CMS-DU-111902A-01

The data associated with the noncompliant initial calibration are qualified due to the variability. The quantitation of the analyte in the samples could be biased.

Ms. Christine Clark

April 11, 2003

Page 4

The following table summarizes the Calibration Verification (VER) results which did not meet Method 1613B recovery criterion and the resulting sample qualifications:

VER Date	Compound	Recovery (ng/ml)	Recovery Range (ng/ml)	Action		Affected Samples
				Positive Defects	NDs	
01/12/03 (Ending)	123789-HxCDF	41	45-56	J	UJ	CMS-SS-4105-1015-01
01/16/03 (Beginning)	123789-HxCDF	40	45-56	J	UJ	CMS-SS-4106-1016-01, CMS-SS-4109-0010-01 CMS-SS-4110-0010-01, CMS-DU-111902A-01
01/17/03 (Ending)	123789-HxCDF	38	45-56	J	UJ	CMS-SS-4106-1016-01, CMS-SS-4109-0010-01 CMS-SS-4110-0010-01, CMS-DU-111902A-01

The recoveries are outside the acceptance range. The data associated with the recoveries of noncompliant calibration verifications are qualified. The quantitation of the associated analytes in the samples could be biased.

Chromatographic Resolution

The hexachloroxanthene (HCX) peaks exhibit poor chromatography, i.e., broad shape. The broad peak shape created irregularities in the response factors used to calculate the concentrations of HCX. Therefore, professional judgement was used to estimate (J,UJ) all HCX results due to the poor chromatography.

Blanks

All of the blanks associated with this SDG were evaluated for possible sources of contamination. The following table summarizes the highest concentration of contamination that was detected in the blanks. The table lists the action levels and the samples affected:

- Method Blanks - The Method blank consisted of a contaminant free water sample which was carried through the preparation and analytical procedures.

Congener	Type of Blank	Blank Concentration (pg/g)	Action Level (pg/g)	Affected Samples
1234678-HpCDD	Method Blank (01/13/03)	9.8	49	CMS-SS-4105-1015-01, LPX-SS-4113-0005-01
OCDD	Method Blank (01/13/03)	37	370	CMS-SS-4105-1015-01, LPX-SS-4113-0005-01

Ms. Christine Clark
Page 5

April 11, 2003

Congener	Type of Blank	Blank Concentration (pp/g)	Action Level (pp/g)	Affected Samples
234678-HxCDF	Method Blank (01/13/03)	0.34	1.7	CMS-SS-4105-1015-01, CMS-S9-4105-3040-01, CMS-SS-4107-1030-01, CMS-SS-4109-3038-01, LPX-SS-4112-0005-01, LPX-SS-4113-0005-01, LPX-SS-4114-0005-01
OCDF	Method Blank (01/13/03)	1.6	16	CMS-SS-4105-1015-01, LPX-SS-4113-0005-01
Total HpCDD	Method Blank (01/13/03)	14	140	CMS-SS-4105-1015-01, CMS-SS-4109-3038-01, LPX-SS-4112-0005-01, LPX-SS-4113-0005-01

Blank actions are based on Region I EPA-NE Data Validation Functional Guidelines for Evaluating Environmental Analyses, December 1996 and EPA Region I's Environmental Services Assistance Team Dioxin Data Validation SOP ESAT-01-0007 (01/08/03) criteria. Blank action levels are calculated as ten times the highest concentration of the contaminant determined in any blank for common contaminants (OCDD/OCDF and Total Homologues) and five times the highest concentration for all other analytes. The positive sample results that are less than the blank action level are reported as non-detects (U) at the reported concentration on the Data Summary Table.

Laboratory and Field Duplicates

One field duplicate pair was evaluated for this SDG: CMS-DU-111902A-01/CMS-SS-4106-1016-01.

The table below summarizes the soil duplicate results that did not meet the field duplicate criterion of Relative Percent Difference (RPD) $\leq 50\%$ for soils/sediments with concentrations > 10 times the MDL as specified in Centredale Manor Tasks 19-22 QAPP (5/23/01).

Congener	CMS-DU-111902A-01	CMS-SS-4106-1016-01	RPD	Action	Affected Samples
	% Solids (41.6%)	% Solids (27.1%)			
	Sample Conc. (pp/Kg)	Duplicate Conc. (pp/Kg)			
2378-TCDD	928	2310	85	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01
123678-HxCDD	52.4	127	83	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01
123789-HxCDD	49.4	115	79	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01
1234678-HpCDD	1150	2740	82	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01
OCDD	6570	16100	84	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01
1234678-HpCDF	194	460	81	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01
OCDF	398	943	81	J	CMS-DU-111902A-01

Ms. Christine Clark
Page 6

April 11, 2003

Congener	CMS-DU-111902A-01	CMS-SS-4106-1016-01	RPD	Action	Affected Samples
	% Solids (41.6%)	% Solids (27.1%)			
	Sample Conc. (ng/Kg)	Duplicate Conc. (ng/Kg)			
HCB	5830	11400	65	J	CMS-DU-111902A-01, CMS-SS-4106-1016-01

The above referenced congeners were estimated (J) in samples CMS-DU-111902A-01 and CMS-SS-4106-1016-01 because the field duplicate precision is outside criterion.

Internal/Clean-up Standards

• Internal Standards

The following table summarizes the internal standard recovery that did not meet acceptance criterion of 25-150% specified in the Centredale Manor Tasks 19-22 QAPP (5/23/01).

Standard	% Recovery	Action		Affected Sample
		Positive Detects	NDs	
¹⁴ C ₁₂ -2378-TCDF	18	J	UJ	CMS-SS-4106-0010-01

The corresponding non-labeled congener result is estimated as shown in the table because the internal standard percent recovery is outside acceptance criterion.

Sample Quantitation

Concentrations quantitated below the lowest calibration standard are flagged (J) on the Data Summary Tables. Quantitation is not accurate when the reported results are below the lowest calibration standard.

Samples CMS-SS-4106-1016-01 and CMS-SS-4109-0010-01 had less than 30% solids but greater than 10%, all positive and non-detected values are estimated (J, UJ).

2378-TCDD Toxicity Equivalents (TE) and Isomer Specificity

All TE values reported on the Data Summary Tables have been calculated by the ESAT data validator using the validated data discussed above in this report. As a result, the TE values in the Data Summary Table differ slightly from the values reported by the laboratory. The validated data accounts for blank contamination. The TEF values used in the Data Summary Tables correspond to the TEF values in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106 (12), December 1998, Table 1, page 778.

Ms. Christine Clark
Page 7

April 11, 2003

System Performance

No trends were noted with the dioxin/furan analysis.

Very truly yours,

LOCKHEED ENVIRONMENTAL



Jarine Bartels
Principal Scientist



Louis Macri
ESAT Program Manager

cc: Cornell Rosin, EPA Project Manager (DV Memorandum, Data Summary Table)

Attachments: Table I: Recommendation Summary Table
Table II: Overall Evaluation of Data
Data Summary Tables
Data Validation Worksheets
Analytical Method
PE Results
Communication/Phone Logs
Field Sampling Notes

Table I
 Recommendation Summary Table for Dioxins/Furans/HCX
 Centredale Manor Site
 Case No.: Centredale Soils B2OF2/SDG No. 49715-13 D/F

Sample Nos.	CMS-SS- 4108-1030-01	CMS-SS- 4108-3040-01	CMS-SS- 4109-0010-01	CMS-SS- 4109-3038-01	CMS-SS- 4110-0010-01	CMS-SS- 4110-1015-01	CMS-SS- 4111-0009-01	CMS-SS- 4111-1028-01
Compound								
2378-TCDD	A	A	J ⁶	A	A	A	A	A
12378-PeCDD	A	A	J ⁶	A	A	A	A	A
123478-HxCDD	A	A	J ⁶	A	A	A	A	A
123678-HxCDD	A	A	J ⁶	A	A	A	A	A
123789-HxCDD	A	A	J ⁶	A	A	A	A	A
1234678-HpCDD	A	A	J ⁶	A	A	A	A	A
OCDD	A	A	J ⁶	A	A	A	A	A
2378-TCDF	A	A	J ⁶	A	A	A	A	A
12378-PeCDF	A	A	J ⁶	A	A	A	A	A
23478-PeCDF	A	A	J ⁶	A	A	A	A	A
123478-HxCDF	A	A	J ⁶	A	A	A	A	A
123678-HxCDF	A	A	J ⁶	A	A	A	A	A
123789-HxCDF	A	A	J ^{6,7}	A	J ⁷	A	A	A
234678-HxCDF	A	A	J ⁶	J ⁶	A	A	A	A
1234678-HpCDF	A	A	J ⁶	A	A	A	A	A
1234789-HpCDF	A	A	J ⁶	A	A	A	A	A
OCDF	A	A	J ⁶	A	A	A	A	A
HCH	J ²	J ²	J ^{1,2,6}	J ²	J ^{1,2}	J ^{1,2}	J ^{1,2}	J ^{1,2}

Table I
 Recommendation Summary Table for Dioxins/Furans/HCX
 Centredale Manor Site
 Case No.: Centredale Soils B2OF2/SDG No. 49715-13 D/F

Sample Nos.	CMS-SS- 4101-3042-01	CMS-SS- 4102-1019-01	CMS-SS- 4105-1015-01	CMS-SS- 4105-3040-01	CMS-SS- 4106-0010-01	CMS-SS- 4106-1016-01	CMS-SS- 4107-1030-01	CMS-SS- 4108-0010-01
Compound								
2378-TCDD	A	A	A	A	A	P ⁶	A	A
12378-PeCDD	A	A	A	A	A	P ⁶	A	A
123478-HxCDD	A	A	A	A	A	P ⁶	A	A
123678-HxCDD	A	A	A	A	A	P ⁶	A	A
123789-HxCDD	A	A	A	A	A	P ⁶	A	A
1234678-HpCDD	A	A	P ⁶	A	A	P ⁶	A	A
OCDD	A	A	P ⁶	A	A	P ⁶	A	A
2378-TCDF	A	A	A	A	P ⁶	P ⁶	A	A
12378-PeCDF	A	A	A	A	A	P ⁶	A	A
23478-PeCDF	A	A	A	A	A	P ⁶	A	A
123478-HxCDF	A	A	A	A	A	P ⁶	A	A
123678-HxCDF	A	A	A	A	A	P ⁶	A	A
123789-HxCDF	A	A	P ⁶	A	A	P ^{6,7}	A	A
234678-HxCDF	A	A	P ⁶	P ⁶	A	P ⁶	P ⁶	A
1234678-HpCDF	A	A	A	A	A	P ⁶	A	A
1234789-HpCDF	A	A	A	A	A	P ⁶	A	A
OCDF	A	A	P ⁶	A	A	P ⁶	A	A
HCX	P ²	P ²	P ²	P ^{1,2}	P ^{1,2}	P ^{1,2,6}	P ²	P ²

Table I
 Recommendation Summary Table for Dioxins/Furans/HCX
 Centredale Manor Site
 Case No.: Centredale Soils B2OF2/SDG No. 49715-13 D/F

Sample Nos.	CMS-DU- 111902A-01	LPX-SS-4112- 0005-01	LPX-SS-4113- 0005-01	LPX-SS-4114- 0005-01
Compound				
2378-TCDD	J ³	A	A	A
12378-PeCDD	A	A	A	A
123478-HxCDD	A	A	A	A
123678-HxCDD	J ³	A	A	A
123789-HxCDD	J ³	A	A	A
1234678-HpCDD	J ³	A	J ⁴	A
OCDD	J ³	A	J ⁴	A
2378-TCDF	A	A	A	A
12378-PeCDF	A	A	A	A
23478-PeCDF	A	A	A	A
123478-HxCDF	A	A	A	A
123678-HxCDF	A	A	A	A
123789-HxCDF	J ³	A	A	A
234678-HxCDF	A	J ⁴	J ⁴	J ⁴
1234678-HpCDF	J ³	A	A	A
1234789-HpCDF	A	A	A	A
OCDF	J ³	A	J ⁴	A
HCX	J ^{1,2,3}	J ⁴	J ⁴	J ⁴

Table I
Recommendation Summary Table for Dioxins/Furans/HCH

A	-	Accept results.
J ¹	-	Initial calibration %RSD outside criterion; J detects, UJ non-detects.
J ²	-	Poor chromatography for HCH in all samples; J detects, UJ non-detects.
J ³	-	Field Duplicate RPDs outside criterion; J detects.
J ⁴	-	Method blank contamination; positive sample results less than the blank action level are reported as non-detects (U) at the concentration reported.
J ⁵	-	Internal Standard % recovery outside criterion; J detects, UJ non-detects.
J ⁶	-	Less than 30% solids; J detects, UJ non-detects.
J ⁷	-	VER % recovery outside criterion; J detects, UJ non-detects.

EPA-NB - Data Validation Worksheet

Overall Evaluation of Data - Data Validation Memorandum - Table II

DIOXINFURAN ANALYSIS					
DQO (list all DQOs)	Sampling and/or Analytical Method Appropriate Yes or No	Measurement Error		Sampling Variability	Potential Usability Issues
		Analytical Error	Sampling Error ^a		
The following is a summary of the site investigation/assessment objectives as found in Contingency Minor Tasks (9-22 QAPP (5/23/01): To generate data of quality sufficient to be used for a R/F/S.	Yes, Sampling Method appropriate for all samples. Yes, Analytical Method appropriate for all samples.	Refer to qualification in R/S Key on Table I. J⁽⁴⁴⁴⁾	Refer to qualification in R/S Key on Table I. J⁽⁴⁴⁾	**	One Cambridge Isotope Laboratories (CIL) Standard Reference Material (SRM) sample was evaluated this SDG (CIL EDF 2513 for Dioxin/Furan congeners in soil). All congeners were within the Contingency Minor Tasks (9-22 QAPP (5/23/01) specified criterion of 30 %D from the consensus value. The method blanks exhibited low level contamination. This contamination problem does not have an impact on the usability of the dioxin/furan data. Contaminants were found in both the blanks and the 1 samples. When the analyte concentrations in the field samples were less than the corresponding blank action level, the field sample results reported by the laboratory are qualified as non-detected (ND) on the Summary Table. See Table I for a summary of the qualifiers applied due to blank contamination. Data validation indicated minor data quality problems which do not significantly impact the usability of dioxin/furan data.

^a The evaluation of "sampling error" cannot be completely assessed in the data validation.

^{**} Sampling variability is not assessed in data validation.

Validator: 

Date: 4/11/03

Data Summary Table
Dioxin/Furan/HxCX Analysis - Soil Samples
(Dry Weight)

SITE: Centredale Manor - N. Providence, RI
 CASE NO. Centredale Soils B2OF2 SGG No. 49715-13 DF
 LABORATORY: Battelle

SAMPLE NUMBER:	Toxicity	CMS-SS-4101-3042-01	CMS-SS-4102-1018-01	CMS-SS-4105-1015-01	CMS-SS-4105-3040-01	CMS-SS-4105-3010-01				
STATION LOCATION:	Equivalency	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR				
MATRIX:	Factors (1)	SOIL	SOIL	SOIL	SOIL	SOIL				
TCDD/TCDF CONC.:		ppb	DU/EMPC*	ppb	DU/EMPC*	ppb	DU/EMPC*			
2,3,7,8-TCDD	1.0	44.63		62.58		41.84	222.79	522.81		
1,2,3,7,8-PeCDD	1.0	3.18 J		1.48 J		0.28 J	1.08 J	4.29 J		
1,2,3,4,7,8-HxCDD	0.1	3.89 J		1.38 J		0.28 J	1.23 J	7.72		
1,2,3,6,7,8-HxCDD	0.1	12.13		5.38		0.79 J	4.14	25.66		
1,2,3,7,8,9-HxCDD	0.1	15.10		5.21		0.97 J	4.89	23.88		
1,2,3,4,6,7,8-HpCDD	0.01	162.86		125.26		U	18.87	546.07		
OCDD	0.0001	999.05		1090.25		U	112.71	3090.03		
2,3,7,8-TCDF	0.1	26.14 #		8.25 #		0.37 #J	2.42 #	2.51 #J		
1,2,3,7,8-PeCDF	0.05	2.83 J		3.02		0.17 J	1.10 J	1.82 J		
2,3,4,7,8-PeCDF	0.5	4.73 J		4.40		0.28 J	2.33 J	2.44 J		
1,2,3,4,7,8-HxCDF	0.1	8.86 J		8.22		0.68 J	5.42	6.55		
1,2,3,6,7,8-HxCDF	0.1	7.88 J		3.35		0.61 J	2.55 J	5.64		
1,2,3,7,8,9-HxCDF	0.1	0.27 J		0.16 J		0.02 J	0.09 J	0.18 J		
2,3,4,6,7,8-HxCDF	0.1	7.91 J		3.32		U	6.24	U	1.89	4.10 J
1,2,3,4,6,7,8-HpCDF	0.01	81.60		20.49		2.88 J	21.75	84.57		
1,2,3,4,7,8,9-HpCDF	0.01	2.89 J		1.72 J		0.21 J	1.89 J	4.12 J		
OCDF	0.0001	82.35		41.38		U	5.01	48.62	182.40	
TOTAL TCDD		47.45 J		63.84 J		41.84 J	222.79 J	522.81 J		
TOTAL PeCDD		27.70 J		10.84 J		1.14 J	4.13 J	15.97 J		
TOTAL HxCDD		108.14 J		43.20 J		5.81 J	33.69 J	144.85 J		
TOTAL HpCDD		311.50 J		231.36 J		UJ	28.82	232.44 J	847.83 J	
TOTAL TCDF		89.33 J		43.34 J		3.09 J	22.28 J	28.86 J		
TOTAL PeCDF		331.50 J		70.08 J		8.85 J	62.55 J	88.37 J		
TOTAL HxCDF		208.06 J		48.03 J		7.89 J	54.85 J	117.38 J		
TOTAL HpCDF		120.72 J		42.85 J		5.80 J	58.34 J	246.51 J		
HxCX - Hexachloroanthene		367.01 J		468.83 J		235.84 J	6374.31 J	3550.43 J		
TOXIC EQUIVALENT(1):		60 J		61 J		43 J	230 J	540 J		
PERCENT SOLIDS:		81.9		83.7		86.9	82.5	48.8		
DILUTION FACTOR:		1.0		1.0		1.0	1.0	1.0		
DATE SAMPLED:		11/22/02		11/22/02		11/22/02	11/28/02	11/19/02		
DATE OF RECEIPT:		11/28/02		11/28/02		11/28/02	11/28/02	11/28/02		
SAMPLE EXTRACTION DATE:		01/02/03		01/02/03		01/02/03	01/02/03	01/02/03		
ANALYSIS DATE:		01/28/03		01/13/03		01/12/03	01/14/03	01/13/03		
LAB SAMPLE ID:		49715-25-02		49715-13-12		49715-13-04	49715-13-19	49715-13-06		

* = The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "U". The DL values are unmarked.
 The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106, Number (12), December 1998, Table 1, page 776.

Concentrations reported by the laboratory below the DL /EDL are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

= Result from confirmation analysis.

SITE: Centredale Manor - N. Providence, RI
CASE NO. Centredale Soils S20F2 SDG No. 49715-13 DF
LABORATORY: Battelle

SAMPLE NUMBER:	Toxicity	CMS-SS-4108-1015-01	CMS-SS-4107-1030-01	CMS-SS-4108-0010-01	CMS-SS-4108-1030-01	CMS-SS-4108-0040-01	
STATION LOCATION:	Equivalency	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	
MATRIX:	Factors (1)	SOIL	SOIL	SOIL	SOIL	SOIL	
TCDD/TCDF CONC.:		ppb	DU/EMPC*	ppb	DU/EMPC*	ppb	DU/EMPC*
2,3,7,8-TCDD	1.0	2312.37 J		54.44		54.55	65.34
1,2,3,7,8-PeCDD	1.0	20.38 J		4.94		2.65 J	12.42
1,2,3,4,7,8-HxCDD	0.1	35.00 J		7.61		2.70 J	17.56
1,2,3,6,7,8-HxCDD	0.1	124.73 J		28.77		6.00	91.35
1,2,3,7,8,9-HxCDD	0.1	114.68 J		24.72		10.09	65.20
1,2,3,4,6,7,8-HpCDD	0.01	2755.21 J		591.93		435.79	1319.35
OCDD	0.0001	18055.16 J		6006.48		1567.76	6575.53
2,3,7,8-TCDF	0.1	9.32 J		3.59 J		12.35 J	10.34 J
1,2,3,7,8-PeCDF	0.05	4.39 J		0.84 J		4.73	2.65 J
2,3,4,7,8-PeCDF	0.5	7.80 J		2.27 J		7.04	7.66
1,2,3,4,7,8-HxCDF	0.1	29.05 J		3.92		12.51	11.62
1,2,3,6,7,8-HxCDF	0.1	24.54 J		1.88 J		4.78	4.86
1,2,3,7,8,9-HxCDF	0.1	0.88 J		U	0.09	0.17 J	0.22 J
2,3,4,6,7,8-HxCDF	0.1	19.12 J		U	1.39	5.35	4.08 J
1,2,3,4,6,7,8-HpCDF	0.01	450.43 J		33.50		34.63	64.12
1,2,3,4,7,8,9-HpCDF	0.01	23.73 J		1.78 J		2.20 J	3.61 J
OCDF	0.0001	943.57 J		82.26		31.97	117.69
TOTAL TCDD		2312.37 J		56.01 J		63.25 J	65.54 J
TOTAL PeCDD		82.05 J		13.20 J		34.47 J	45.82 J
TOTAL HxCDD		705.66 J		184.99 J		75.39 J	405.90 J
TOTAL HpCDD		4770.84 J		1452.95 J		245.23 J	2264.71 J
TOTAL TCDF		120.22 J		39.24 J		66.85 J	59.53 J
TOTAL PeCDF		326.86 J		42.05 J		52.08 J	27.57 J
TOTAL HxCDF		551.51 J		43.93 J		61.59 J	20.59 J
TOTAL HpCDF		1053.02 J		95.70 J		61.00 J	25.55 J
HCH - Hexachlorocyclopentadiene		11382.56 J		183.96 J		356.50 J	343.14 J
TOXIC EQUIVALENT(1):		2400 J		77 J		88 J	24 J
PERCENT SOLIDS:		27.1		74.4		79.7	60.2
DILUTION FACTOR:		1.0		1.0		1.0	1.0
DATE SAMPLED:		11/19/02		11/21/02		11/21/02	11/21/02
DATE OF RECEIPT:		11/26/02		11/26/02		11/26/02	11/26/02
SAMPLE EXTRACTION DATE:		01/02/03		01/02/03		01/02/03	01/02/03
ANALYSIS DATE:		01/13/03		01/13/03		01/13/03	01/13/03
LAB SAMPLE ID:		49715-13-02		49715-13-06		49715-13-10	49715-13-14

* - The values in this column are either the Detection Limit (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "J". The DL values are unmarked.

The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for

PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106, Number (12), December 1998, Table 1, page 778.

Concentrations reported by the laboratory below the DL/EDL are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

= Result reported from confirmation analysis.

Data Summary Table
Dioxin/Furan/HxCX Analysis - Soil Samples
(Dry Weight)

SITE: Centredale Manor - N. Providence, RI
CASE NO. Centredale Site B20F2 SOG No. 49715-13-01F
LABORATORY: Battelle

SAMPLE NUMBER:	Toxicity	CMS-SS-4109-0010-01	CMS-SS-4109-0009-01	CMS-SS-4110-0010-01	CMS-SS-4110-1015-01	CMS-SS-4111-0009-01		
STATION LOCATION:	Equivalency	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR	CENTREDALE MANOR		
MATRIX:	Factors (1)	SOIL	SOIL	SOIL	SOIL	SOIL		
TCDD/TCDF CONC.:		pg/g	DU/EMPC*	pg/g	DU/EMPC*	pg/g	DU/EMPC*	
2,3,7,8-TCDD	1.0	2133.09 J		142.96		4084.58	766.99	279.09
1,2,3,7,8-PeCDD	1.0	33.72 J		0.72 J		13.70	2.35 J	10.18
1,2,3,4,7,8-HxCDD	0.1	49.24 J		0.69 J		23.91	2.69 J	14.81
1,2,3,6,7,8-HxCDD	0.1	244.43 J		3.32		102.26	10.66	41.26
1,2,3,7,8,9-HxCDD	0.1	184.78 J		2.59 J		84.45	10.65	46.02
1,2,3,4,6,7,8-HpCDD	0.01	4661.53 J		61.75		2126.09	226.76	746.18
OCDD	0.0001	23505.09 J		385.55		13714.29	1411.55	4287.34
2,3,7,8-TCDF	0.1	16.65 #J		1.06 #		37.79 #	3.94 #	6.81 #
1,2,3,7,8-PeCDF	0.05	12.15 J		0.66 J		8.43	1.72 J	1.77 J
2,3,4,7,8-PeCDF	0.6	16.84 J		1.32 J		27.92	3.34	3.40
1,2,3,4,7,8-HxCDF	0.1	46.29 J		1.95 J		70.46	6.46	6.09
1,2,3,6,7,8-HxCDF	0.1	48.00 J		1.59 J		44.84	4.40	3.32
1,2,3,7,8,9-HxCDF	0.1	1.95 J		0.66 J		1.11 J	0.13 J	0.15 J
2,3,4,6,7,8-HxCDF	0.1	39.97 J	U	1.28		35.37	3.06	3.20
1,2,3,4,6,7,8-HpCDF	0.01	746.27 J		16.86		315.81	35.49	40.32
1,2,3,4,7,8,9-HpCDF	0.01	42.53 J		0.66 J		22.89	2.22 J	1.78 J
OCDF	0.0001	1042.51 J		21.44		996.34	62.29	69.22
TOTAL TCDD		2133.09 J		142.96 J		4084.58 J	766.99 J	285.09 J
TOTAL PeCDD		440.75 J		1.99 J		114.23 J	13.59 J	33.66 J
TOTAL HxCDD		1360.08 J		21.12 J		764.22 J	74.18 J	285.90 J
TOTAL HpCDD		7858.32 J	U	111.47		3901.41 J	410.19 J	1288.26 J
TOTAL TCDF		134.93 J		13.17 J		357.11 J	39.23 J	54.66 J
TOTAL PeCDF		566.16 J		53.63 J		1071.82 J	109.20 J	111.44 J
TOTAL HxCDF		1046.87 J		39.03 J		1078.16 J	106.25 J	74.30 J
TOTAL HpCDF		1637.65 J		35.00 J		783.59 J	76.73 J	75.34 J
HxCX - Hexachlorobenzene		15998.30 J		90.32 J		56950.28 J	3715.71 J	7446.72 J
TOXIC EQUIVALENT(1):		2300 J		150 J		4200 J	900 J	310 J
PERCENT SOLIDS:		27.5		82.3		40.0	53.6	61.4
DILUTION FACTOR:		1.0		1.0		1.0	1.0	1.0
DATE SAMPLED:		11/18/02		11/18/02		11/18/02	11/18/02	11/21/02
DATE OF RECEIPT:		11/26/02		11/26/02		11/26/02	11/26/02	11/26/02
SAMPLE EXTRACTION DATE:		01/02/03		01/02/03		01/02/03	01/02/03	01/02/03
ANALYSIS DATE:		01/17/03		01/14/03		01/16/03	01/13/03	01/13/03
LAB SAMPLE ID:		49715-13-20		49715-13-21		49715-13-19	49715-13-10	49715-13-07

* = The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "U". The DL values are unmarked.

The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 106, Number 12, December 1998, Table 1, page 778.

Concentrations reported by the laboratory below the DL/EDL are flagged (J) on the Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

= Result from confirmation analysis.

Dioxin/Fur: Summary Table
X Analysis - Soil Samples
(Dry Weight)

SITE: Centredale Manor - N. Providence, RI
CASE NO. Centredale Soils B2OF2 SDG No. 49715-13 D/F
LABORATORY: Battelle

SAMPLE NUMBER: STATION LOCATION: MATRIX:	Toxicity Equivalency Factors (1)	CMS-SS-4111-1028-01 CENTREDALE MANOR SOIL	CMS-DU-111902A-01 CENTREDALE MANOR SOIL	LPX-SS-4112-0085-01 LYMAN MILL POND SOIL	LPX-SS-4113-0085-01 LYMAN MILL POND SOIL	LPX-SS-4114-0085-01 LYMAN MILL POND SOIL	
YOCDF/OCDF CONC.:		pg/g	DL/EMPC*	pg/g	DL/EMPC*	pg/g	DL/EMPC*
2,3,7,8-TCDD	1.0	1653.51		929.55 J		2.01	3.15
1,2,3,7,8-PeCDD	1.0	943.35		9.55		0.33 J	0.35 J
1,2,3,4,7,8-HxCDD	0.1	1325.11		15.45		0.65 J	0.84 J
1,2,3,6,7,8-HxCDD	0.1	3005.54		52.39 J		3.05	3.72
1,2,3,7,8,9-HxCDD	0.1	5574.85		49.44 J		2.50 J	3.27 J
1,2,3,4,6,7,8-HpCDD	0.01	43115.35		1147.52 J		55.75	71.47
OCDD	0.0001	115707.45		6572.71 J		405.82	507.09
2,3,7,8-TCDF	0.1	201.40 #		3.43 #		1.53 #	1.80 #
1,2,3,7,8-PeCDF	0.05	31.14		3.33 J		0.69 J	1.23 J
2,3,4,7,8-PeCDF	0.5	115.45		4.32 J		1.05 J	1.49 J
1,2,3,4,7,8-HxCDF	0.1	175.15		13.37		2.21 J	3.08 J
1,2,3,6,7,8-HxCDF	0.1	141.85		11.53		1.02 J	1.51 J
1,2,3,7,8,9-HxCDF	0.1	1.92 J		0.34 J		0.05 J	0.11 J
2,3,4,6,7,8-HxCDF	0.1	131.02		7.75	U	0.97	0.65
1,2,3,4,6,7,8-HpCDF	0.01	1934.52		193.57 J		14.07	19.50
1,2,3,4,7,8,9-HpCDF	0.01	49.32 J		9.55		0.51 J	1.04 J
OCDF	0.0001	1255.50		345.45 J		19.55	30.21
TOTAL TCDD		1775.70 J		929.55 J		3.75 J	4.59 J
TOTAL PeCDD		2545.15 J		35.82 J		9.33 J	11.17 J
TOTAL HxCDD		22555.42 J		304.22 J		23.51 J	35.01 J
TOTAL HpCDD		75504.01 J		1947.23 J		U	43.44
TOTAL TCDF		1525.35 J		52.57 J		11.05 J	17.94 J
TOTAL PeCDF		3572.50 J		145.99 J		15.75 J	27.92 J
TOTAL HxCDF		3203.57 J		252.40 J		15.94 J	23.57 J
TOTAL HpCDF		2575.15 J		440.52 J		30.44 J	40.29 J
HCH - Hexachlorocyclohexane		55515.00 J		5529.54 J		15.17 J	24.85 J
TOXIC EQUIVALENT(1):		4500 J		970 J		5.1 J	6.5 J
PERCENT SOLIDS:		73.2		41.5		52.7	71.2
DILUTION FACTOR:		1.0		1.0		1.0	1.0
DATE SAMPLED:		11/10/02		11/10/02		11/22/02	11/22/02
DATE OF RECEIPT:		11/25/02		11/25/02		11/25/02	11/25/02
SAMPLE EXTRACTION DATE:		01/20/03		01/20/03		01/20/03	01/20/03
ANALYSIS DATE:		01/25/03		01/15/03		01/13/03	01/13/03
LAB SAMPLE ID:		49715-25-03		49715-13-17		49715-13-11	49715-13-05

* = The values in this column are either the Detection Limits (DL) or the Estimated Maximum Possible Concentration (EMPC). The EMPC results are marked with a "J". The DL values are unmarked.

The EMPC values are not qualified with a "J", since they are already estimated.

(1) The Toxic Equivalent concentration is calculated with the Toxicity Equivalency Factors (TEFs) found in "Toxic Equivalency Factors (TEFs) for PCBs, PCDDs, PCDFs for Humans and Wildlife", Environmental Health Perspectives, Volume 105, Number (12), December 1995, Table 1, page 775.

Concentrations reported by the laboratory below the DL are flagged (J) on this Data Summary Table as estimated values. All other necessary qualifications are defined in Table 1.

= Result reported from confirmation analysis.

Section 1 Quality Assurance Review

A. Organic Data

The organic analyses of eight soil samples (including QC samples) and one rinsate blank were performed by Battelle Laboratory in Duxbury, Massachusetts. The samples were collectively analyzed for polyaromatic hydrocarbon compounds by Battelle Standard Operating Procedure (SOP) 5-157 and for pesticides and PCB compounds by Battelle SOP 5-128. These analyses are specified on Table 1. The laboratory organized the samples into two SDGs (SDGs 02-681 and 02-693).

The findings in this report are based upon a Tier II review of sample holding times, condition of samples upon laboratory receipt, blank analysis results, laboratory and field duplicate precision, blank spike recoveries, matrix spike/matrix spike duplicate (MS/MSD) recoveries and precision, standard reference material results, instrument sensitivity, method detection limits (MDLs), and calibrations.

Overall, the organic data quality appears to be satisfactory. The data reviewer has edited the laboratory-reported data and QC forms based on the deficiencies listed in this QA review. Contractual and reporting requirements were met for this data set, with the exception of the items identified in the following sections of this QA review; it should be emphasized that these items do not necessarily impact data usability. Based upon a Tier II review of the data provided, the organic data qualifiers associated with the samples that underwent limited data validation are presented in the subsequent Organic Data Qualifiers Section. These qualifiers should not be applied to any organic results that did not undergo data validation. Data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the validation guidelines specify areas of the data that require qualification, yet the methods used for analysis do not require any corrective action by the laboratory. Accordingly, the data usability issues that follow should not necessarily be construed as an indication of laboratory performance.

Correctable Deficiency

- For the pesticide/PCB fraction, the laboratory did not include the surrogate recoveries of sample CMS-RB-112102A-01 on the Surrogate Recovery Report summary form. The Environmental Standards data reviewer edited the summary form to include the surrogate recoveries of this sample.

Noncorrectable Deficiency

1. Rinsate blank sample CMS-RB-112102-A-01 was analyzed 1 day beyond the analysis holding time. According to the QAPP Addendum (Worksheet #9a), the holding time from extraction to analysis of pesticide/PCB extracts is 40 days. The impact on data usability due to the exceeded holding time is addressed in the subsequent Organic Data Qualifiers section.
2. A low correlation coefficient (<0.995) was observed for the surrogate compound cl3(34) in the initial calibration file sa1553,9,1,1 performed on instrument chan1_15. According to the Battelle SOP 5-128 (Section 3.4), if the correlation coefficient criteria are not met, the laboratory is required to perform corrective measures, recalibrate the instrument, and reanalyze associated samples. All surrogate recoveries met QC acceptance criteria; therefore, data were not qualified due to this deficiency.
3. For the PAH fraction of SDG 02-681, the laboratory did not reextract and reanalyze the samples associated with preparation blank AB534PB, which exhibited positive results greater than the reporting limit (RL) for benzaldehyde, phenanthrene, and pyrene. According to the QAPP Addendum (Worksheet #24a), the method blank can only have compound results less than the sample specific RL or the associated samples must have results greater than five-times the blank values. The corrective action for blank contamination is to reextract and/or reanalyze the blank and associated samples. The laboratory did not reextract and/or reanalyze the blank or sample. The Environmental Standards data reviewer used the method blank results as reported to evaluate sample results. Data were not qualified due to this deficiency. *Could not re-extract because sample had been consumed for original extraction. D. Dahlen 4/15/03*
4. For the PAH fraction of SDG 02-693, the laboratory did not reextract and reanalyze the samples associated with preparation blank AB571PB, which exhibited positive results greater than the RL for benzaldehyde. According to the QAPP Addendum (Worksheet #24a), the method blank can only have compound results less than the RL or the associated samples must have results greater than five-times the blank values. The corrective action for blank contamination is to reextract and/or reanalyze the blank and associated samples. The laboratory did not reextract and/or reanalyze the blank or samples. The Environmental Standards data reviewer used the method blank results as reported to evaluate sample results. The impact on data usability due to the blank contamination is addressed in the subsequent Organic Data Qualifiers section.
5. In the PAH fraction of SDG 02-681, the laboratory did not analyze an ending benzaldehyde continuing calibration check in the analytical sequence performed on 12/19/02 and associated with sample CMS-RB-112102-A-01. According to comments on the analytical runlog, the check was inadvertently not analyzed. The benzaldehyde initial calibration check and benzaldehyde LCS were with in acceptance criteria; therefore, qualification due to this deficiency was not warranted.

Comments

1. The laboratory did not utilize the correct benzaldehyde initial calibration to quantitate the aqueous blank and its associated QC samples. Upon Environmental Standards' request, the laboratory requantitated the sample and its associated QC samples using the correct benzaldehyde response factor and provided corrected summary forms.
2. For the PAH fraction, the laboratory provided the water and soil method detection limits (MDLs) for the compounds of interest on a summary form that reported a 2000 MDL study. It is recommended that Battelle perform MDL studies on an annual basis.
3. The results for several PAH and pesticide/PCB compounds in several samples in SDG 02-693 were reported from dilutions due to high levels of target compounds in the original analyses.

With respect to data usability, the principal areas of concern are calibration issues, blank contamination, an exceeded holding time, high instrument control sample (ICS) percent differences (%Ds), a high laboratory control sample recovery, a high MS recovery, field duplicate imprecision, and results reported below project-specific reporting limits. Based on a review of the data provided, the following organic data qualifiers are offered. The following data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the data validation guidelines routinely specify areas of the data that require qualification, yet the methods used for analysis may not require corrective action by the laboratory. Accordingly, the following data usability issues should not be construed as an indication of laboratory performance.

Organic Data Qualifiers

- Due to the trace-level presence of benzaldehyde in the associated laboratory and/or field blanks, the reported positive results for benzaldehyde in SDG 02-693 samples LPX-SS-4112-0005-01, LPX-SS-4113-0005-01 and LPX-SS-4114-0005-01 should be considered "not-detected" and have been flagged "U" on the data tables. In addition, reported results below the sample-specific reporting limits have been replaced with the reporting limit and the appropriate "U" qualifier. *It should be noted that sample volumes and dilution factors were taken into consideration when evaluating blank contamination. (1) Other than 3 samples identified above, benzaldehyde was detected > RL in all sample - DTD/chen 4/15/03*
- The reporting limits for pesticide/PCB compounds in SDG 02-681 sample CMS-RB-112102A-01 may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. In addition, any reported positives for pesticide/PCB compounds in this sample should be considered estimated and have been flagged "J" on the data tables. This sample was analyzed 1 day beyond the QAPP Addendum (Worksheet #9A) holding time of 40 days from sample extraction.

- The reporting limits for the compounds in the samples listed below may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. In addition, any reported positive results for these compounds in the samples listed below should be considered estimated and have been flagged "J" on the data tables. High %Ds (>25%) were observed for these compounds in the associated continuing calibration standards.

<u>Compound(s)</u>	<u>SDG</u>	<u>Sample(s) With Qualified Reporting Limits ("UJ") or Estimated Positive Results ("J")</u>
indeno(1,2,3-cd)pyrene	02-681	CMS-RB-112102-A-01
<i>alpha</i> -BHC	02-681	CMS-RB-112102-A-01
4,4'-DDT and methoxychlor	02-693	CMS-SS-4110-0010-01, CMS-SS-4105-0010-01, LPX-SS-4112-0005-01, LPX-DU-112202B-01, LPX-SS-4113-0005-01, LPX-SS-4114-0005-01, and CMS-RB-112102-A-01
* See Battelle QA/QC Summaries - Dr. Dahlen 4/15/03		

- The reporting limits for all pesticide/PCB and PAH compounds in SDG 02-693 samples CMS-SS-4110-0010-01 and CMS-SS-4105-0010-01 may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. In addition, any reported positive results for pesticide/PCB and PAH compounds in these samples should be considered estimated and have been flagged "J" on the data tables. High percent moistures (>50%) were observed for these samples.
- The reporting limits for *alpha*-BHC in all SDG 02-693 samples may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. A high %D (>15%) was observed for *alpha*-BHC in the associated ICS analysis.
- The reported positive result for endrin ketone in SDG 02-681 sample CMS-RB-112102A-01 should be considered estimated and has been flagged "J" on the data tables. A high recovery (>120%) was reported for endrin ketone in the associated laboratory control sample (LCS) analysis.
- The reported positive result for benzaldehyde in SDG 02-693 sample LPX-DU-112202B-01 should be considered estimated and has been flagged "J" on the data tables. A high recovery (>120%) was observed for benzaldehyde in the associated MS analysis.
- The reported positive results for indeno(1,2,3-cd)pyrene in SDG 02-693 samples CMS-SS-4110-0010-01, CMS-SS-4105-0010-01, and LPX-SS-4113-0005-01 should be considered estimated and have been flagged "J" on the data tables. A high %D (>15%) was observed for indeno(1,2,3-cd)pyrene in the associated ICS analysis.


- One field duplicate pair (sample LPX-SS-4112-0005-01 and its field duplicate, sample LPX-DU-112202B-01) was submitted to the laboratory with this data set. Acceptable precision and sample representativeness were demonstrated by the correlation observed between the reported positive results in the field duplicate pair (i.e., when both results were $\geq 10\times$ the reporting limit, the relative percent difference (RPD) was $\leq 50\%$ or when one of the results was $< 10\times$ the reporting limit, the difference between the results was $\leq 2\times$ the reporting limit) with the exception of the reported positive results for the 2-methylnaphthalene, acenaphthene, acenaphthylene, anthracene, benzaldehyde, dibenzofuran, fluorene, naphthalene, and phenanthrene. The positive results for these compounds in samples LPX-SS-4112-0005-01 and LPX-DU-112202B-01 should be considered estimated and have been flagged "J" on the data tables (unless previously flagged "U"). Complete comparisons of the quantitatively confident positive results in the field duplicate pair have been included in Section 3.
- Based on standard project reporting requirements, all observed positive results reported with concentrations below the laboratory's project-specific reporting limits have been flagged "J" (unless flagged "U") on the data tables.

Complete support documentation for this organic data QA review is presented in Section 3 of this report. The cover sheet for this section is a checklist of all QA procedures required by the methods and examined in this data review.

B. Conclusions


Overall, the data quality is satisfactory. Based on this QA review, several organic results were qualified due to calibration issues, blank contamination, an exceeded holding time, high ICS %Ds, a high MS recovery, a high LCS sample recovery, field duplicate imprecision, and results reported below project-specific reporting limits. Overall, the data are acceptable for use, provided the data user understands the limitations and qualifications stated in this QA review. The Laboratory Case Narratives, Chain-of-Custody Records, and Project Correspondence are presented in Sections 4, 5, and 6, respectively.

Report prepared by:



Steven J. Lennor
Quality Assurance Chemist

Report reviewed by:



Glenn S. Esler
Quality Assurance Chemist

Report reviewed and approved by:



Kyle R. Clay
Senior Quality Assurance Chemist II/
Project Manager

Report reviewed and approved by:



David R. Blye, CEAC
Quality Assurance Specialist/
Principal

ENVIRONMENTAL STANDARDS, INC.
1140 Valley Forge Road
P.O. Box 810
Valley Forge, PA 19482-0810

(610) 935-5577

Date: 04/10/03

Section 1 Quality Assurance Review

A. Inorganic and Wet Chemistry Data

The inorganic analyses of 10 soil samples (including QC samples) and one rinsate blank were performed by Battelle Marine Sciences Laboratory (Battelle-MSL) of Sequim, Washington. The samples were collectively analyzed for beryllium, aluminum, vanadium, chromium, manganese, iron, cobalt, nickel, copper, zinc, arsenic, selenium, molybdenum, silver, cadmium, antimony, barium, thallium, and lead by Battelle-MSL Method MSL-I-022-04; for mercury by Battelle-MSL Method MSL-I-016-03 or MSL-I-013-02; and for methylmercury by Battelle-MSL Method MSL-I-015-05. These analyses are specified on Table 1. The laboratory organized the samples into SDG 1921.

The findings in this report are based upon a Tier II review of sample holding times, condition of samples upon laboratory receipt, blank analysis results, laboratory and field duplicate precision, blank spike recoveries, matrix spike/matrix spike duplicate (MS/MSD) recoveries and precision, standard reference material results, instrument sensitivity, method detection limits (MDLs), and calibrations.

Overall, the inorganic and wet chemistry data quality appears to be satisfactory. Contractual and reporting requirements were met for this data set, with the exception of the deficiency identified in the following section of this QA review; it should be emphasized that the deficiency does not necessarily impact data usability. Based upon a Tier II review of the data provided, the inorganic and wet chemistry data qualifiers associated with the samples that underwent limited data validation are presented in the subsequent Inorganic and Wet Chemistry Data Qualifiers Section. These qualifiers should not be applied to any inorganic results that did not undergo data validation. Data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the validation guidelines specify areas of the data that require qualification, yet the methods used for analysis do not require any corrective action by the laboratory. Accordingly, the data usability issues that follow should not necessarily be construed as an indication of laboratory performance.

Noncorrectable Deficiency

- According to the Log-In Checklist and QA/QC summary provided in the data package, the sample cooler containing rinsate blank CMS-RB-112102A-01 was not sealed with a custody seal. The laboratory did not note any damage or tampering with the sample bottles; therefore, it was assumed that sample integrity was not compromised.

With respect to data usability, the principal areas of concern are blank contamination, field duplicate imprecision, low and very low MS/MSD recoveries, low and very low standard reference material recoveries, a low blank spike recovery, and results reported below project-specific reporting limits. Based on a review of the data provided, the following inorganic and wet chemistry data qualifiers are offered. The following data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the data validation guidelines routinely specify

areas of the data that require qualification, yet the methods used for analysis may not require corrective action by the laboratory. Accordingly, the following data usability issues should not be construed as an indication of laboratory performance.

Inorganic and Wet Chemistry Data Qualifiers


- Due to the presence of selenium in the associated method blank, the positive results for selenium in all validated soil samples should be considered qualitatively questionable and have been flagged "U" on the data tables. It should be noted that sample weights and percent solids were considered when evaluating the sample results for blank contamination. ✓
- The positive results for antimony in all soil samples should be considered estimated and have been flagged "J" on the data tables. Very low recoveries (<30%) were reported for antimony in the associated MS/MSD analyses and in the reference standard materials analysis associated with the soil samples. ✓
- The reporting limit for iron in sample CMS-RB-112102A-01 should be considered biased low, and the "not-detected" result has been flagged "UJ" on the data tables. A low recovery (<75%) was observed for iron in the associated blank spike analysis.
- The reporting limits for aluminum, molybdenum, silver, and thallium in all validated soil samples may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. In addition, the reported positive results for aluminum, molybdenum, silver, and thallium in all validated soil samples should be considered estimated and have been flagged "J" on the data tables. Low recoveries (30% < %R < 75%) were observed for these analytes in the associated standard reference material analyses. (1)
- The positive results for lead in all soil samples should be considered estimated and have been flagged "J" on the data tables. Low recoveries (30% < %R < 75%) were reported for lead in the MS/MSD analyses associated with the soil samples. (1)
- One field duplicate pair (sample LPX-SS-4112-0005-01 and its field duplicate, sample LPX-DU-112202B-01) was submitted to the laboratory with this data set. Acceptable precision and sample representativeness were demonstrated by the reported positive results in these field QC samples with the exception of the reported positive results for lead; the positive results for lead in samples LPX-SS-4112-0005-01 and LPX-DU-112202B-01 should be considered estimated and have been flagged "J" on the data tables. Both lead results are greater than five-times the reporting limit and a high relative percent difference (RPD > 35%) was observed for lead in the associated field duplicate analyses.
- Based on standard project reporting requirements, all observed positive results reported with concentrations below the laboratory's project-specific reporting limits have been flagged "J" (unless flagged "U") on the data tables.

Complete support documentation for this Inorganic and Wet Chemistry QA review is presented in Section 4 of this report. The cover sheet for this section is a checklist of all QA procedures required by the methods and examined in this data review.

B. Conclusions

Overall, the data quality is satisfactory. Based on this QA review, several inorganic results were qualified due to blank contamination, field duplicate imprecision, low and very low MS/MSD recoveries, low and very low standard reference material recoveries, a low blank spike recovery, and results reported below project-specific reporting limits. Overall, the data are acceptable for use, provided the data user understands the limitations and qualifications stated in this QA review. The Laboratory Case Narratives and Chain-of-Custody Records are presented in Sections 4 and 5, respectively.

Report prepared by:

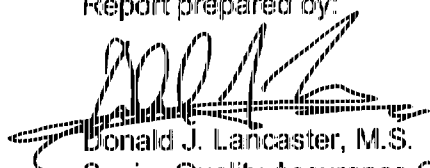


Donald J. Lancaster, M.S.
Senior Quality Assurance Chemist II

Report reviewed by:




Thomas M. Roberts III
Quality Assurance Chemist

Report reviewed and approved by:



Kyle R. Clay
Senior Quality Assurance Chemist II/
Project Manager

Report reviewed and approved by:



David R. Blye, CEAC
Quality Assurance Specialist/
Principal

ENVIRONMENTAL STANDARDS, INC.
1140 Valley Forge Road
P.O. Box 810
Valley Forge, PA 19482-0810

(610) 935-5577

Date: 3-5-03

Section 1 Quality Assurance Review

A. Organic Data

The organic analyses of 12 soil samples (including quality control [QC] samples and three dilutions) and 45 aqueous samples (including QC samples, one dilution, and one reextraction) were performed by Severn Trent Laboratories (STL) of Pittsburgh, Pennsylvania. The samples were collectively analyzed for volatile organic compounds by SW-846 Method 8260B and for semivolatile organic compounds (phenols and phthalates) by SW-846 Method 8270C. These analyses are specified on Table 1. The laboratory organized the samples into three sample delivery groups (SDGs C2J250362, C2K220274, and C2K250148).

The findings in this report are based upon a rigorous review of holding times, condition of samples upon laboratory receipt, blank analysis results, laboratory control sample (LCS)/laboratory control sample duplicate (LCSD) recoveries and precision, matrix spike (MS)/matrix spike duplicate (MSD) recoveries and precision, surrogate recoveries, internal standard response, instrument sensitivity, field duplicate precision, analytical sequence, gas chromatography/mass spectroscopy (GC/MS) bromofluorobenzene (BFB) and decafluorotriphenylphosphine (DFTPP) instrument performance checks, and calibrations.

Overall, the organic data quality appears to be good. The data reviewer has edited the laboratory-reported data and QC forms based on the deficiencies and comments in this QC review. Contractual and reporting requirements were met for this data set. Based upon a Tier II review of the data provided, the organic data qualifiers associated with the samples that underwent data validation are presented in the Organic Data Qualifiers section; these qualifiers should not be applied to any organic results that did not undergo data validation. Data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the validation guidelines specify areas of the data that require qualification, yet the methods used for analysis do not require any corrective action by the laboratory. Accordingly, the data usability issues that follow should not necessarily be construed as an indication of laboratory performance.

Correctable Deficiencies

1. For the volatile organic fraction of SDG C2J250362, the laboratory reported the client sample identification for sample CMS-GW-MW015-03 (laboratory sample C2J250362-031) as "CMS-GW-MW01S-03" throughout the data package. According to the Chain-of-Custody (COC) Record, the correct client sample identification is CMS-GW-MW015-03.

EDP corrected. DTDahlen 3/21/03. According to field ID, CMS-GW-MW01S-03 is the correct

2. For the semivolatile organic fraction of SDG C2K220274, the laboratory reported the laboratory sample identifications for QC samples FD01R1AA and FD01R1AC as "FD0071AA" and "FD0071AC," respectively, on the Semivolatile Organic Instrument Performance Check Decafluorotriphenylphosphine (DFTPP) form (Form V SV) associated with the DFTPP tune performed on 12/11/02 at 13:23 on instrument 721. The correct laboratory sample identifications are FD01R1AA and FD01R1AC.

EDD not affected. DTDahlen 3/21/03.

*ID.
DTDahlen
4/30/03.*

3. For the volatile organic fraction of SDG C2J250362, the laboratory reported the truncated client sample identification for sample CMS-GW-GRC2-03 as "CMS-GW-GEC2-" on the Volatile Organic Instrument Performance Check Bromofluorobenzene (BFB) form (Form V VOA) associated with the BFB tune performed on 10/27/02 at 08:45 on instrument HP5 and on the Volatile Internal Standard Area and RT Summary associated with the continuing calibration standard analyzed on 10/27/02 at 09:55 on instrument HP5. The correct truncated client sample identification is CMS-GW-GEC2-.

*Sample identification correct in EDD. W.D. Dahl
3/21/03.*

Comments

1. For the volatile organic fraction of SDG C2J250362, sample CMS-GW-MW08S-03 was reanalyzed at a three-fold dilution due to high concentrations of target compounds in the original analysis of this sample. The quantitation limits (QLs) from the dilution analysis have been raised accordingly.
2. As stated in the SDG C2K220274 Case Narrative, sample CMS-RB-112102A-01 was reextracted 19 days beyond holding time because an incorrect LCS was extracted in association with the initial extraction. Qualification of data due to this issue is addressed in the subsequent Organic Data Qualifiers section.
3. For the semivolatile organic fraction of SDG C2K250148, samples CMS-SS-4110-0010-01 and CMS-SS-4105-0010-01 were reanalyzed at eight-fold dilutions and sample V9909 was reanalyzed at a two-fold dilution due to high concentrations of target compounds in the original analyses of these samples. The QLs from the dilution analyses have been raised accordingly.
4. For all SDGs included in this QA review, the client sample identifications reported on the associated Semivolatile Organic Instrument Performance Check Decafluorotriphenylphosphine (DFTPP) forms (Form Vs SV), Volatile Organic Instrument Performance Check Bromofluorobenzene (BFB) summaries (Form Vs VOA), and Volatile and Semivolatile Internal Standard Area and RT Summaries (Form VIIIs) were truncated. The data reviewer used the laboratory sample identifications to identify the project samples.
5. Samples CMS-GW-MW08S-03DL, CMS-SS-4110-0010-01DL, and CMS-SS-4105-0010-01DL were reported as "CMS-GW-MW08S-03RE," "CMS-SS-4110-0010-01RE," and "CMS-SS-4105-0010-01RE" on the data tables.

With respect to data usability, the principal areas of concern include blank contamination, an exceeded holding time, calibration issues, low MS/MSD and LCS and/or LCSD recoveries, concentrations above the instrument calibration range, field duplicate imprecision, and quantitation of results below the project-required QLs. Based on a Tier II review of the data provided, the following organic data qualifiers are offered. The following data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the data validation guidelines

routinely specify areas of the data that require qualification, yet the methods used for analysis may not require corrective action by the laboratory. Accordingly, the following data usability issues should not be construed as an indication of laboratory performance.

Organic Data Qualifiers

- Due to the trace-level presence of toluene in the associated trip blank, the reported positive results for toluene in SDG C2K220274 samples CMS-GW-MW03S-03 and CMS-GW-MW03S-03-DUP should be considered "not-detected" and have been flagged "U" on the data tables.
- The QLs for all semivolatile organic compounds in SDG C2K220274 sample CMS-RB-112102A-01RE may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. SDG C2K220274 sample CMS-RB-112102A-01RE was extracted 19 days beyond the 7-day holding time from sample collection to extraction.
- The QLs for the following volatile organic compounds in the samples listed below may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. In addition, any reported positive results for the following volatile organic compounds in the samples listed below should be considered estimated and have been flagged "J" on the data tables. High percent differences (>25%), coupled with decreases in instrument sensitivity, were observed for these compounds in the associated continuing calibration standards.

<u>Compound(s)</u>	<u>SDG</u>	<u>Samples With Estimated Quantitation Limits ("UJ") or Estimated Positive Results ("J")</u>
chloromethane; chloroethane; trichlorofluoromethane; <i>trans</i> -1,2-dichloroethene; and 1,1-dichloroethane	C2J250362	CMS-TB-102202A-03, CMS-GW-GEC1-03, CMS-GW-GEC4-03, CMS-GW-GEC2-03, CMS-GW-MW07S-03, CMS-GW-MW11B-03, CMS-GW-MW11M-03, CMS-GW-MW12B-03, CMS-GW-GEC3-03, CMS-GW-MW015-03, and CMS-GW-MW11S-03
benzene		CMS-GW-MW08S-03DL, CMS-GW-MW13B-03, CMS-MW14M-03, CMS-GW-MW06S-03, CMS-GW-MW05S-03, and CMS-GW-MW07D-03
bromomethane and trichloroethene	C2K220274	CMS-GW-MW03S-03 and CMS-TB-112102A

- The QLs for chloroethane in SDG C2J250362 sample CMS-GW-MW11B-03 may be higher than reported, and the "not-detected" result has been flagged "UJ" on the data tables. Low recoveries (< 54%) were observed for this compound in the associated MS/MSD analyses.

- The QLs for the following volatile organic compounds in the samples listed below may be higher than reported, and the "not-detected" results have been flagged "UJ" on the data tables. Low recoveries (< the acceptance limit) were observed for the following compounds in the associated LCS and/or LCSD analyses.

<u>Compound</u>	<u>SDG</u>	<u>Samples With Qualified Quantitation Limits ("UJ")</u>
chloroethane	C2J250362	CMS-TB-102202A-03, CMS-GW-GEC1-03, CMS-GW-GEC4-03, CMS-GW-GEC2-03, CMS-GW-MW07S-03, CMS-GW-MW11B-03, CMS-GW-MW11M-03, CMS-GW-MW12B-03, CMS-GW-GEC3-03, CMS-GW-MW015-03, and CMS-GW-MW11S-03
<i>trans</i> -1,2-dichloroethene		CMS-DU-102402A-03 and CMS-GW-GEC6-03

- The reported positive results for the following compounds in the samples listed below should be considered estimated and have been flagged "J" on the data tables. The on-column concentrations for the following compounds exceeded the instrument calibration range.

<u>Compound</u>	<u>SDG</u>	<u>Sample(s) With Estimated Positive Results ("J")</u>
1,2,4-trimethylbenzene	C2J250362	CMS-GW-MW08S-03
bis-(2-ethylhexyl)phthalate	C2K250148	CMS-SS-4110-0010-01 and CMS-SS-4105-0010-01
phenol		V9909

- For SDG C2J250362, two field duplicate pairs (sample CMS-GW-MW06S-03 and its field duplicate, sample CMS-DU-102302A-03, and sample CMS-GW-MW05S-03 and its field duplicate, sample CMS-DU-102402A-03) were submitted to the laboratory with this data set. The QL for chloroethane in sample CMS-GW-MW06S-03 may be higher than reported and has been flagged "UJ" on the data tables. In addition, the reported positive results for chloroethane in sample CMS-DU-102302A-03, and for *cis*-1,2-dichloroethene in samples CMS-GW-MW05S-03 and CMS-DU-102402A-03 should be considered estimated and have been flagged "J" on the data tables. Large discrepancies (*i.e.*, RPD >50% when both results were >5× the QL or the difference between results were > the RL when at least one result was <5× the QL) were observed between these results in the field duplicate pairs. A complete comparison of the field duplicate results has been included in Section 3.
- For SDG C2K250148, one field duplicate pair (sample LPX-SS-4112-0005-01 and its field duplicate, sample LPX-DU-112202B-01) was submitted to the laboratory with this data set. Acceptable precision and sample representativeness were demonstrated by the reported results of the field duplicate pair (*i.e.*, difference ≤ 2× the QL when at least one result was < 5× the QL) were observed between the results in the field duplicate pair. A complete comparison of the field duplicate results has been included in Section 3.

- Based on the project-specific reporting requirements, all reported positive results with concentrations between the laboratory method detection limit (MDL) and the project QL should be considered estimated and have been flagged "J" on the data tables.

Complete support documentation for this organic QA review is presented in Section 3 of this report. The cover sheet for this section is a checklist of all QA procedures required by the methods and examined in this data review.

B. Inorganic Data

The inorganic analyses of seven soil samples (including QC samples) were performed by Applied Marine Sciences, Inc. of League City, Texas. The samples were analyzed for total organic carbon by US EPA Method 9060 and for grain size by ASTM Method D422. These analyses are specified on Table 1. The laboratory organized the samples into one SDG (SDG 2002-03-29).

The findings in this report are based upon a rigorous review of sample holding times, condition of samples upon laboratory receipt, blank analysis results, calibration data, and laboratory duplicate precision.

Overall, the inorganic data quality appears to be good. The data reviewer has edited the laboratory-reported data and QC forms based on the deficiency and comment in this QC review. Contractual and reporting requirements were met for this data set. Based upon a Tier II review of the data provided, the inorganic data qualifiers associated with the samples that underwent data validation are presented in the Inorganic Data Qualifiers section; these qualifiers should not be applied to any inorganic results that did not undergo data validation. Data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the validation guidelines specify areas of the data that require qualification, yet the methods used for analysis do not require any corrective action by the laboratory. Accordingly, the data usability issues that follow should not necessarily be construed as an indication of laboratory performance.

Correctable Deficiency

- The laboratory reported the AMS Project Number (SDG) as "2002-03-30" on the Analytical Summary Forms. The correct AMS Project Number is 2002-03-29.

OK - EDD not affected - DTDahl - 3/21/03.

Comment

- According to the Applied Marine Sciences, Inc. Sample Receipt Checklist for SDG 2002-03-29, the sample container for sample CMS-SS-4105-0010-01 was received at the laboratory with a cracked lid; however, none of the sample volume was lost. Qualification of data was not warranted due to this issue.

With respect to data usability, the principal areas of concern are a high laboratory duplicate relative percent difference (RPD) and field duplicate imprecision. Based on a Tier II review of the data provided, the following inorganic data qualifiers are offered. The following data usability issues represent an interpretation of the QC results obtained for the project samples. Quite often, data qualifications address issues relating to sample matrix problems. Similarly, the data validation guidelines routinely specify areas of the data that require qualification, yet the methods used for analysis may not require corrective action by the laboratory. Accordingly, the following data usability issues should not be construed as an indication of laboratory performance.

Inorganic Data Qualifiers


- The reported results for gravel and coarse sand in SDG 2002-03-29 sample LPX-SS-4114-0005-01 should be considered estimated and have been flagged "J" on the data tables. High relative percent differences (RPDs>50%) were observed for gravel and coarse sand in the associated grain size laboratory duplicate analyses.
- One field duplicate pair (sample LPX-SS-4112-0005-01 and its field duplicate, sample LPX-DU-112202B-01) was submitted to the laboratory with this data set. The reported positive results for TOC in samples LPX-SS-4112-0005-01 and LPX-DU-112202B-01 should be considered estimated and have been flagged "J" on the data tables. A large discrepancy (*i.e.*, RPD >50% when both results were >5x the detection limit) was observed between the results for TOC in the field duplicate pair. A complete comparison of the field duplicate results has been included in Section 4.

Complete support documentation for this inorganic QA review is presented in Section 4 of this report. The cover sheet for this section is a checklist of all QA procedures required by the methods and examined in this data review.

C. Conclusions

Overall, the data quality is good. Based on this QA review, several organic results were qualified due to blank contamination, an exceeded holding time, calibration issues, low MS/MSD and LCS and/or LCSD recoveries, concentrations above the instrument calibration range, and quantitation of results below the project-required quantitation limit. In addition, a few inorganic results were qualified due to laboratory and field duplicate imprecision. Overall, the data are acceptable for use, provided the data user understands the limitations and qualifications stated in this QA review. The Laboratory Case Narratives and Chain-of-Custody Records are presented in Sections 5 and 6, respectively.

Report prepared by:




Glenn S. Esler
Quality Assurance Chemist

Report reviewed by:




Eric T. Lahr
Senior Quality Assurance Chemist I

Report reviewed and approved by:



Kyle R. Clay
Senior Quality Assurance Chemist II/
Project Manager

Report reviewed and approved by:



David R. Blye, CEAC
Quality Assurance Specialist/
Principal

ENVIRONMENTAL STANDARDS, INC.
1140 Valley Forge Road
P.O. Box 810
Valley Forge, PA 19482-0810

(610) 935-5577

Date: 3-19-03